

As you read this manual, you will find Information that is preceded by a symbol NOTICE. This information is intended to help you avoid damage to your vehicle, other property, or the environment.

Symbols <u>A.A. II</u> on labels attached to your vehicle are to remind you to read this owner's manual for proper and safe operation of your vehicle.

⚠ is colour-coded to indicate "danger" (red), "warning" (orange), or "caution" (amber).

**Safety Labels** P. 96

## A Few Words About Safety

Your safety, and the safety of others, is very important. And operating this vehicle safely is an important responsibility.

To help you make informed decisions about safety, we have provided operating procedures and other information on labels and in this manual. This information alerts you to potential hazards that could hurt you or others.

Of course, it is not practical or possible to warn you about all the hazards associated with operating or maintaining your vehicle. You must use your own good judgement.

You will find this important safety information in a variety of forms, including:

- Safety Labels on the vehicle.
- Safety Messages preceded by a safety alert symbol and one of three signal words: DANGER, WARNING, or CAUTION.
  These signal words mean:

**ADANGER** 

You WILL be KILLED or SERIOUSLY HURT if you don't follow instructions.

**AWARNING** 

You CAN be KILLED or SERIOUSLY HURT if you don't follow instructions.

**A A**WARNING

You CAN be KILLED or SERIOUSLY HURT if you don't follow instructions.

**ACAUTION** 

You CAN be HURT if you don't follow instructions.

- Safety Headings such as Important Safety Precautions.
- Safety Section such as Safe Driving.
- **Instructions** how to use this vehicle correctly and safely.

This entire book is filled with important safety information - please read it carefully.

#### **Event Data Recorders**

Your vehicle is equipped with several devices commonly referred to as Event Data Recorders. They record various types of real time vehicle data such as SRS airbag deployment and SRS system components failure.

This data belongs to the vehicle owner and may not be accessed by anyone else except as legally required or with the permission of the vehicle owner.

However this data may be accessed by Honda, its authorised dealers and authorised repairers, employees, representatives and contractors only for the purpose of the technical diagnosis, research and development of the vehicle.

#### **Service Diagnostic Recorders**

Your vehicle is equipped with service-related devices that record information about powertrain performance and driving conditions. The data can be used to help technicians diagnose, repair and maintain the vehicle. This data may not be accessed by anyone else except as legally required or with the permission of the vehicle owner.

However this data may be accessed by Honda, its authorised dealers and authorised repairers, employees, representatives and contractors only for the purpose of the technical diagnosis, research and development of the vehicle.

### Owner's Manual Application Terms and Conditions\*

General

This application allows your Display Audio to automatically search for owner's manual updates that are specific to your vehicle and Display Audio every time the power mode of the vehicle is set to ON. This application periodically transmits a limited amount of vehicle and device information to our servers: Vehicle Identification Number (VIN), Display Audio hardware serial number, preferred language, Internet Protocol (IP) address, transaction log (alerts for or views of updates, update downloads and installation, usage of the owner's manual application), etc. When the application finds an update from the server, it prompts you to download and install.

When your Display Audio searches our servers for updates, we will automatically provide you with the opportunity to update the owner's manual. We will also maintain a log of the updates that are installed on our servers.

#### Your Personal Data

Should the aforementioned information transmitted to Honda constitute personal information in your region, please note that this information will be treated in strict accordance with the rules and regulations outlined in this notice as well as applicable data protection law.

The terms of our privacy policy are incorporated into these terms by reference and your use of system updates will be subject to the privacy policy. Our privacy policy sets out information about how we and any named third parties will process any personal data we collect from you or that you provide to us, via the utility. (See the Honda website (https://www.privacynotice.honda.eu) for further details.)

Honda collects, uses, and stores your personal data for the reasons set out below:

Where necessary for Honda's legitimate interests, as listed below, and where our interests are not overridden by your data protection rights.

to deliver owner's manual updates to you;

to allow us to improve and optimize the owner's manual application and services;

to respond to user questions and complaints; and for internal record keeping.

Protecting our legitimate business interests and legal rights. This includes, but is not limited to, use in connection with compliance, regulatory, auditing, legal claims (including disclosure of such information in connection with legal process or litigation) and other ethics and compliance reporting requirements

Honda will also convert personal data into anonymous data and use it (normally on an aggregated statistical basis) for uses such as market research and analysis, to improve the owner's manual, to analyze trends, and to assess the success of software update releases. Aggregated personal information does not personally identify you or any other use of the owner's manual.

Honda may share this data with Honda's world wide support organization or affiliated Honda companies or other third parties engaged by Honda for the purposes of rendering support services in connection with system support.

\* Not available on all models

#### System Updates Terms and Conditions\*

General

Your vehicle has an application that allows your Display Audio to automatically search for Honda software updates that are specific to your Display Audio and its connected devices (initially every one (1) week via Wi-Fi or every four (4) weeks via Telematics Control Unit (TCU)\*, gueries may occur more or less frequently due to internet outages, retries, direct user action, WAP push from the server or a change in guery policy on the Honda servers). This application periodically transmits to our servers a limited amount of vehicle and device information (Vehicle Identification Number (VIN), the Model Type (MT) Identification Number, Hardware and Software Part Number, Serial Number, Software Version, preferred language, Internet Protocol (IP) address, Transaction Log (alert or update viewing, update download and installation, software status), etc.). When the application finds an update from the server, the application initially asks permission to download and install the update. Where available, in your settings menu you may elect to automatically download and install these updates or you may elect to manually update the system.

When your Display Audio searches our servers for updates or alerts, we will automatically provide you with the opportunity to update your devices or transmit the update or alert directly to your Display Audio. We will also maintain on our servers a log of the updates or alerts that are installed

#### Your Personal Data

Should the aforementioned information transmitted to Honda constitute personal information in your region, please note that this information will be treated in strict accordance with the rules and regulations outlined in this notice as well as applicable data protection law.

matically search for Honda software updates that are specific our Display Audio and its connected devices (initially every one week via Wi-Fi or every four (4) weeks via Telematics Control (TCU)\*, queries may occur more or less frequently due to the state of the search of the searc

Honda collects, uses and stores your personal data for the reasons set out below:

The terms of our privacy policy are incorporated into these terms by reference and your use of system updates will be subject to the

privacy policy. Our privacy policy sets out information about how we

- to deliver the system updates and related services to you;
- to allow us to improve and optimize the system updates products and services;
- to respond to user questions and complaints; and for internal record keeping.
- where necessary for Honda's legitimate interests, as listed below, and where our interests are not overridden by your data protection rights.

Protecting our legitimate business interests and legal rights includes, but is not limited to, use in connection with compliance, regulatory, auditing, legal claims (including disclosure of such information in connection with legal process or litigation) and other ethics and compliance reporting requirements.

Honda will also convert personal data into anonymous data and use it (normally on an aggregated statistical basis) for uses such as market research and analysis, to improve the system updates, to analyze trends, and to assess the success of software update releases. Aggregated personal information does not personally identify you or any other use of the system updates.

Honda may share this data with Honda's worldwide support organization or affiliated Honda companies or other third parties engaged by Honda for the purposes of rendering support services in connection with system support.

\* Not available on all models

This owner's manual should be considered a permanent part of the vehicle and should remain with the vehicle when it is sold

This owner's manual covers all models of your vehicle. You may find descriptions of equipment and features that are not on your particular model.

Images throughout this owner's manual represent features and equipment that are available on some, but not all, models. Your particular model may not have some of these features.

The information and specifications included in this publication were in effect at the time of approval for printing. Honda Motor Co., Ltd. reserves the right, however, to discontinue or change specifications or design at any time without notice and without incurring any obligation.

Although this manual is applicable to both right-hand and left-hand drive models, the illustrations contained in this manual mainly refer to the left-hand drive models.

#### **Safe Driving** P. 35

For Safe Driving P. 36 Seat Belts P. 40

#### **≥** Instrument Panel P. 97

Indicators P. 98 Gauges and Driver Information Interface P. 128

Airbags P. 51

#### Controls P. 157

Clock P. 158 Locking and Unlocking the Doors P. 159

Operating the Switches Around the Steering Wheel P. 183

Heating System\* P. 223 Climate Control System\* P. 229

#### Features P. 237

Audio System P. 238 Display Audio P. 240
Emergency Call (eCall) P. 365 Refuel Recommend\* P. 370

#### **Driving** P. 371

Before Driving P. 372 Towing a Trailer P. 376 When Driving P. 377 Multi-View Rear Camera P. 511 Refueling P. 513

#### ► Maintenance P. 519

Before Performing Maintenance P. 520 Service Reminder System\* P. 524
Maintenance Under the Bonnet P. 539 Replacing Light Bulbs P. 552
Battery P. 569 Remote Transmitter Care P. 575
Accessories and Modifications P. 585

#### Handling the Unexpected P. 587

Tools P. 588 If a Tyre Goes Flat P. 590 Handling of the Jack P. 613 Overheating P. 621 Indicator, Coming On/Blinking P. 623 If You Cannot Open the Hatch P. 639

#### → Information P. 641

Specifications P. 642 Identification Numbers P. 644 Open Source Licence P. 694

							Quick Refer
Pop-up Hood System P. 67	Child Safety P. 70	Exhaust Gas F	Hazard P. 95	Safety Labels	P. 96	, III	
							S
						\	
Hatch P. 171	Security System P.	174	Windows P. 1	Ω1		\\.\\\\	Instru
	Seats P. 203		enience Items F				
Audio Error Messages P. 328	S Go	neral Information on the	Audio System	P 370	Honda LogR P. 339		
Addio Effor Messages 1. 520	, dei	ierai imormation on the	Addio System	1.323	Honda Logic 1 . 555		_
						lh.	
	Braking P. 491		Vehicle P. 501				
Fuel Economy and CO <sub>2</sub> Emis	Sions P. 516 Turi	bo Engine Venicie P. 517				ì	
							D. 4
Oil Monitor System* P. 529 Checking and Maintaining V	Viper Blades P. 56	0		Schedule* P. 5 Maintaining T	= :	-44111	M
Heating System*/Climate Co			Cleaning P. 58	_	,		
						111111111111111111111111111111111111111	Handling the l
Engine Does Not Start P. 614 Fuses P. 630 Emergency To		ne Battery Is Dead P. 618 ou Cannot Unlock the Fu		638		.11	ı
						"ال	
Devices that Emit Radio Wav	/es* P. 645	Declaration o	f Conformity C	ontent Outline	e* P. 689		

## Contents

Reference Guide P. 6

Safe Driving P. 35

trument Panel P. 97

Controls P. 157

Features P. 237

Driving P. 371

Maintenance P. 519


ndling the Unexpected P. 587

Information P. 641

Index P. 695

## **Visual Index**


Left-hand Drive Type

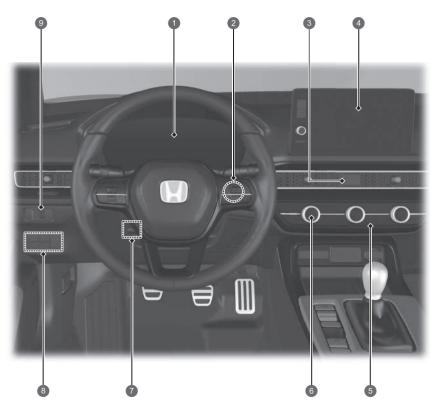

- 1 System Indicators → P.98 Gauges → P.128 Driver Information Interface → P.133,138
- **②** ENGINE START/STOP Button →P.183
- Hazard Warning Button
- 4 Audio System →P.238 Navigation System\*
  See the Navigation System Manual
- S Rear Demister →P.198


  Heated Door Mirror Button\* →P.198
- G Climate Control System\* → P. 229
  Heating System\* → P. 223
- Steering Wheel Adjustments → P. 199
- (Vehicle Stability Assist (VSA) System OFF) Button P.414
  Parking Sensor System Button\* P.503
  Safety Support Switch P.425, 436, 477
- Brightness Control →P. 197



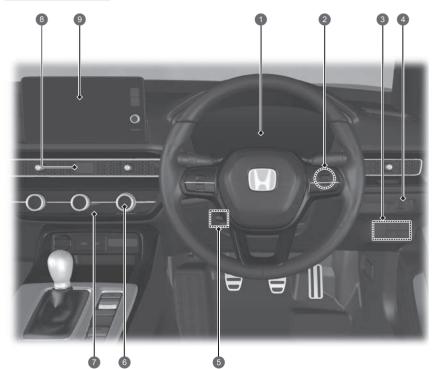


- 1 System Indicators → P.98
  Gauges → P.128
  Driver Information Interface → P.133,138
- **②** ENGINE START/STOP Button → P. 183
- (Vehicle Stability Assist (VSA) System OFF) Button P. 414
  Safety Support Switch P. 425, 436, 477
  Parking Sensor System Button\* P. 503
- **⑤** Steering Wheel Adjustments →P.199
- 6 Climate Control System<sup>\*</sup> →P. 229 Heating System<sup>\*</sup> →P. 223
- Rear Demister →P.198 Heated Door Mirror Button\* →P.198
- 8 Hazard Warning Button
- - See the Navigation System Manual

## **Visual Index**

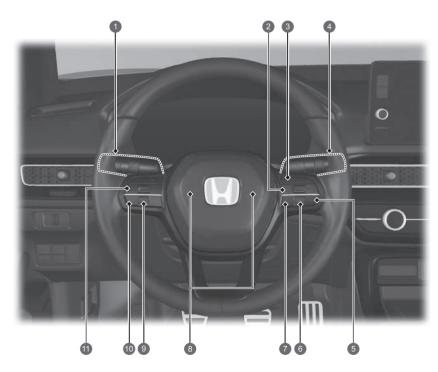

- Headlights/Turn Signals → P. 186, 188 Rear Fog Light → P. 190
- 2 LIM Button > P. 400, 406, 445
- 4 Wipers/Washers →P. 194
- S Lane Keeping Assist System (LKAS)
  Button → P. 465
- 6 Right Selector Wheel →P. 138
- Interval Button → P. 457
- 8 Horn (Press an area around .)
- **9** Left Selector Wheel **►**P.133
- **⑩** Voice Control Buttons\* **→**P.247


#### Left-hand Drive Type

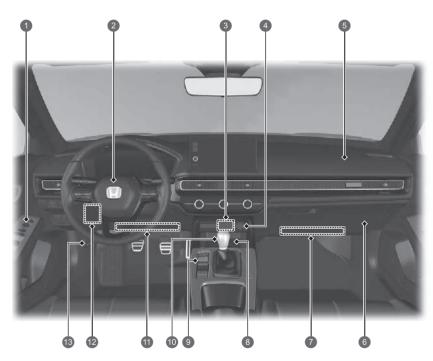


- ① Door Mirror Controls → P.202 Master Door Lock Switch → P.169 Power Window Switches → P.181
- ② Driver's Front Airbag ← P.53
- ③ USB Ports ←>P. 243
- ⑤ Passenger's Front Airbag ♠P.53
- 6 Glove Box ►>P.211
- Passenger's Knee Airbag 
   →P.56
- **8** Wireless Charger → P. 220
- Drive Mode Switch → R.393 +R Button → R.394 Electric Parking Brake Switch → R.491 Automatic Brake Hold Button → R.494 Auto Idle Stop OFF Button → R.388
- Shift Lever 
   →P.382
- **①** Driver's Knee Airbag **→**P.56
- Bonnet Release Handle → P. 540

## **Visual Index**

Right-hand Drive Type

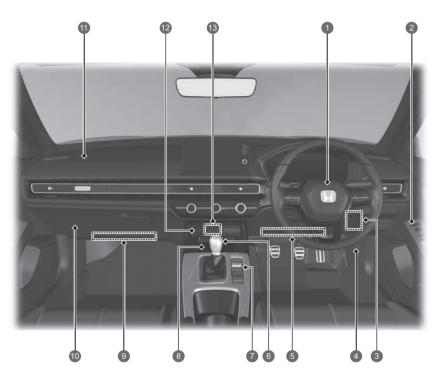


- ② Door Mirror Controls → R 202 Master Door Lock Switch → R 169 Power Window Switches → R 181
- Interior Fuse Box 
   → P. 632
- **4** Bonnet Release Handle → P.540
- **⑤** Driver's Knee Airbag **○**P.56
- 6 Shift Lever ←>P.382
- Drive Mode Switch → P.393 +R Button → P.394 Auto Idle Stop OFF Button → P.388 Electric Parking Brake Switch → P.491 Automatic Brake Hold Button → P.494
- **8** Wireless Charger **→P.220**
- **(f)** Glove Box **←>**P.211
- Passenger's Front Airbag 
   P.53
- USB Ports ← P. 243

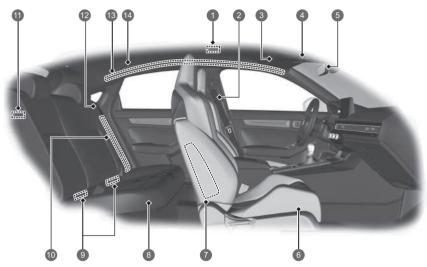

- **①** Ceiling Light **→**P.210
- 2 Seat Belts P.40
- Sun Visors
  Vanity Mirrors
- Map Lights →P.210 Ultrasonic/Tilt Sensor OFF Button\* →P.177 SOS Button →P.367
- **⑤** Rearview Mirror **○**P.200
- 6 Front Seat P. 203
- **⑦ Front Side Airbags** → P.60
- 8 Rear Seat >P.206
- ② Lower Anchorage Points to Secure a Child Restraint Systems → P.83
- Rear Side Airbags → P.60
- 1 Luggage Area Light
- ② Seat Belt (Installing a Child Restraint System) → R88
  Seat Belt to Secure a Child Restraint System → R90

## **Visual Index**



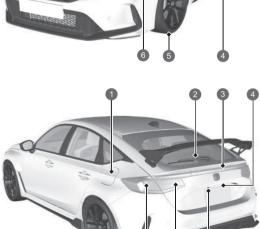

- Maintenance Under the Bonnet →P.539
- 2 Windscreen Wipers P. 194, 560
- 3 Power Door Mirrors →P. 202 Side Turn Signal Lights →P. 188, 552
- **4** Door Lock/Unlock Control **►**P. 162
- **5** Tyres **→**P. 563, 590
- Headlights →P. 186, 552
   Position/Daytime Running Lights
   →P. 186, 190, 552
   Front Turn Signal Lights →P. 188, 552

- How to Refuel ► P.514
- ② Rear Wiper\* → P. 196, 562
- **③** High-Mount Brake Light → P. 557
- ④ Opening/Closing the Hatch →P 171 Hatch Release Button →P 172 Rear Licence Plate Light →P 557
- **⑤** Multi-View Rear Camera **←>**P.511
- 6 Taillights → P. 556 Back-Up Lights → P. 556 Rear Fog Light → P. 190, 557
- ∂ Brake/Taillights → P.553Rear Turn Signal Lights → P.553

# **Auto Idle Stop Function**

To improve fuel economy, the engine stops and then restarts as detailed below. When Auto Idle Stop is on, the Auto Idle Stop indicator (green) comes on. P.386

At	Manual transmiss	Engine status	
Deceleration	Depress the brake pedal.     Fully depress the clutch pedal.		On
Stop	<ul> <li>Continue to depress the brake pedal.</li> <li>Move the shift lever to N.</li> <li>Release the clutch pedal.</li> </ul>	N	Off
Start-up	<ol> <li>Depress the clutch pedal fully again.</li> <li>Move the shift lever to 1.</li> <li>Depress the accelerator pedal to resume driving.</li> </ol>	1	Restarting


# Safe Driving Cass

## Airbags (27.51)

• Your vehicle is fitted with airbags to help to protect you and your passengers during a moderate-to-severe collision.

## Child Safety RZZ

- All children 12 and younger should be seated in the rear seat.
- Small children should be properly restrained in a front-facing child restraint system.
- Infants must be properly restrained in a rear-facing child restraint system on a rear seat.

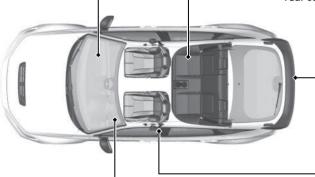

### Exhaust Gas Hazard

 Your vehicle emits dangerous exhaust gases that contain carbon monoxide. Do not run the engine in confined spaces where carbon monoxide gas can accumulate.

## Seat Belts R40

- Fasten your seat belt and sit upright well back in the seat.
- Check that your passengers are wearing their seat belts correctly.

## Before Driving Checklist P372


 Before driving, check that the front seats, steering wheel, and mirrors have been properly adjusted.




Fasten your lap belt as low as possible.

## Instrument Panel

## 

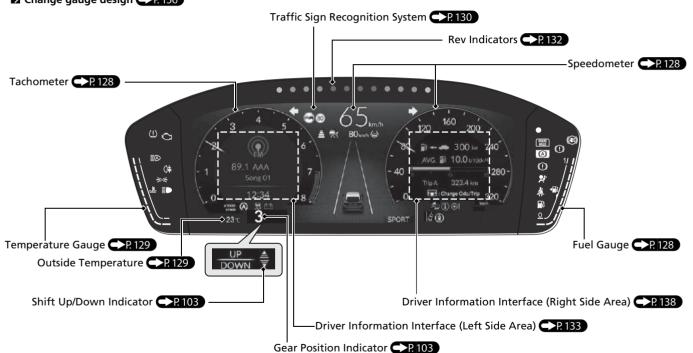

● When using the +R gauge

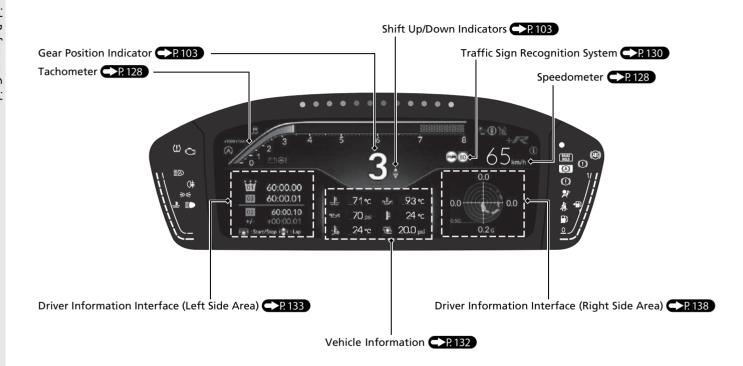

# Clock CRISS



# ENGINE START/STOP Button (\$\frac{1}{2}\text{183})

 Press the button to change the vehicle's power mode.



## Turn Signals P. 188

**Turn Signal Control Lever** 



## Lights P.186

**Light Control Switches** 



## **Wipers and Washers**

#### →P. 194

Wiper/Washer Control Lever

Adjustment Ring
: Low sensitivity
: High sensitivity



Pull towards you to spray washer fluid.

MIST — OFF

**AUTO**: Wiper speed varies automatically


**LO**: Low speed wipe **HI**: High speed wipe

**AUTO** should always be turned **OFF** before the following situations in order to prevent severe damage to the wiper system:

- Cleaning the windscreen
- Driving through a car wash
- No rain present

## Steering Wheel P. 199

 To adjust, push the adjustment lever down, adjust to the desired position, then lock the lever back in place.

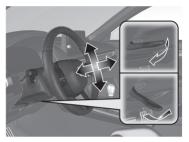

# Unlocking the Front Doors from the Inside

#### **◯** P. 168

• Pull the either front door inner handle to unlock and open it at the same time.



### Hatch CARIZE



 Press the hatch release button to unlock and open the hatch when you carry the keyless remote.

### **Power Door Mirrors**

#### →P. 202

- With the power mode in ON, move the selector switch to L or R.
- Push the appropriate edge of the adjustment switch to adjust the mirror.
- Press the folding button\* to fold in and out the door mirrors.

Folding Button\* Selector Switch




- Adjustment Switch

## Power Windows CARIST

- With the power mode in ON, open and close the power windows.
- If the power window lock button is in the off position, each passenger's window can be opened and closed with its own switch.
- If the power window lock button is in the on position (indicator on), each passenger's window switch is disabled.

#### Indicator

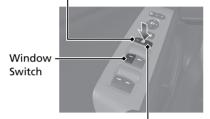



Power Window Lock Button

## Heating System\* **→P.223**

- Press the **AUTO** button to activate the heating system.
- Press the soft button to turn the system on or off.
- Press the button to defrost the windscreen.

Left-hand Drive Type

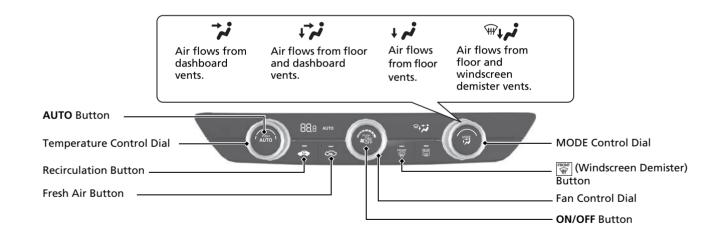


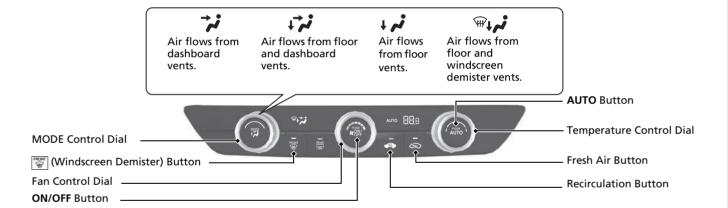


## Climate Control System\* → P. 229

- Press the **AUTO** button to activate the climate control system.
- Press the SOFF button to turn the system on or off.
- Press the button to defrost the windscreen.

Left-hand Drive Type

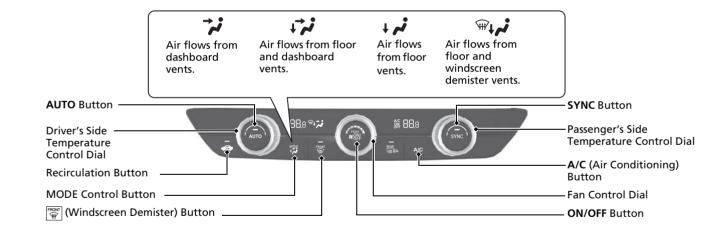

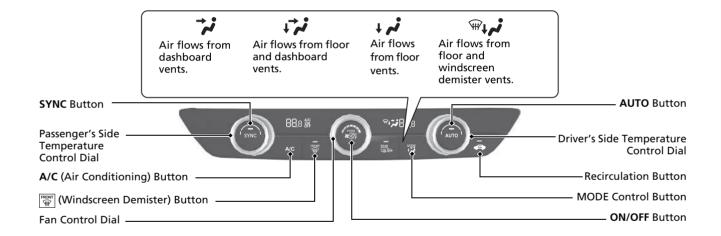

## Features CARREST


## Audio System R238

For navigation system operation See the Navigation System Manual



## **Audio Remote Controls**



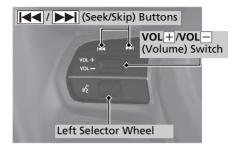

- VOL +/VOL (Volume) Switch Press to adjust the volume up/down.
- Left Selector Wheel
   When selecting the audio mode

Roll up or down: To cycle through the audio modes, roll up or down and then press the left selector wheel:
Back/Telephone/FM/AM/Traffic/DAB/iPod/
USB/Apple CarPlay/Android Auto/
Bluetooth® Audio/Customized

Depending on a connected device, the displayed modes may be changed.

Press \( \begin{align\*} \langle \begin{align\*} \langle \begin{align\*} \langle \begin{align\*} \langle \begin{align\*} \langle \begin{align\*} \langle \la

Radio:Press and hold / bb to change the strong station.

USB device:

Press and hold to change a folder.


iPod: Press and hold / to change a song.

Depending on a connected device, operations may be changed.

## Driving CREATE

### **Manual Transmission**

**◯>**P. 382

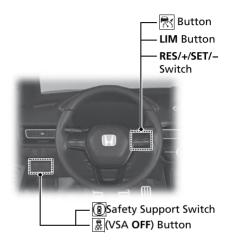

## CMBS On and Off R436

- When a possible frontal collision is likely unavoidable, the CMBS can reduce the vehicle speed and the severity of the collision.
- The CMBS is turned on every time you start the engine.
- To turn the CMBS on or off, use the safety support switch.

## VSA On and Off R414

- The Vehicle Stability Assist (VSA) system helps to stabilise the vehicle during cornering and helps to maintain traction while accelerating on loose or slippery road surfaces.
- VSA comes on automatically every time you start the engine.
- To partially disable or fully restore VSA function, press and hold the (VSA OFF) button until you hear a beep.

# Deflation Warning System R418

- Detects a change in tyre conditions and overall dimensions due to decrease in tyre pressures.
- The Deflation Warning System is turned on automatically every time you start the engine.
- A calibration procedure must be performed when certain conditions arise.

## **Adjustable Speed Limiter**

#### →P. 400

This system enables you to set a maximum speed that cannot be exceeded even if you are depressing the accelerator pedal.

- To use the adjustable speed limiter, press the 
   button. Select the adjustable speed limiter by pressing the LIM button, then press the RES/+/SET/- switch up or down when your vehicle reaches the desired speed.
- The vehicle speed limit can be set from about 30 km/h (18 mph) to about 320 km/ h (200 mph).

## Refueling Refueling

Fuel recommendation: EN 228 standards petrol/gasohol fuel

Unleaded premium petrol/gasohol up to E10 (90% petrol and 10% ethanol), research

octane number 95 or higher


Fuel tank capacity: 47 L (10.3 Imp gal)

1 Unlock the driver's door. P. 168

2 Press the edge of the fuel fill door to make it pop up slightly.


**3** Turn the fuel fill cap slowly to remove the cap.

- 4 Place the cap in the holder on the fuel fill door.
- **5** After refueling, screw the cap back on until it clicks at least once.

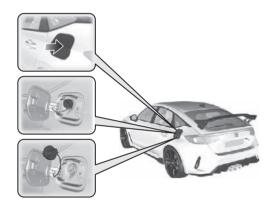

# Honda Sensing (2)2423

Honda Sensing is a driver support system which employs the use of a front wide view camera mounted to the interior side of the windscreen, behind the rearview mirror.

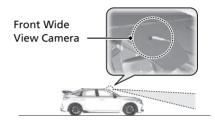

# Collision Mitigation Braking System (CMBS)

**→**P. 432

The system can assist you when it determines there is a possibility of your vehicle colliding with a vehicle (including motorcycles) ahead from behind, an oncoming vehicle in front, a pedestrian, or someone riding a bicycle (moving bicycle). The CMBS is designed to alert you when the potential for a collision is determined, as well as assist in reducing speed, avoiding collisions, and reducing collision severity.

# Adaptive Cruise Control (ACC) (ACC)

Helps to maintain a constant vehicle speed and a set following-interval behind a vehicle detected ahead of yours, without you having to keep your foot on the brake or the accelerator.

# Lane Keeping Assist System (LKAS) (27:462)

Provides steering input to help to keep the vehicle in the middle of a detected lane and provides tactile, audible and visual alerts if the vehicle is detected drifting out of its lane.

# Road Departure Mitigation System 28.474

Alerts and helps to assist you when the system detects a possibility of your vehicle crossing over detected lane markings, or approaching the outer edge of the pavement (into grass or gravel border) or a detected oncoming vehicle.

# Traffic Sign Recognition System R482

Reminds you of road sign information, such as the current speed limit and that overtaking is prohibited, your vehicle has just passed through, showing it on the gauge.

## Maintenance Casso

### Under the Bonnet ← P.539


- Check engine oil, engine coolant, and windscreen washer fluid. Add when necessary.
- Check brake/clutch fluid.
- Check the battery condition monthly.
- 1 Pull the bonnet release handle under the corner of the dashboard.



2 Locate the bonnet latch lever, push it to the side, and then raise the bonnet. Once you have raised the bonnet slightly, you can release the lever.



**3** When finished, close the bonnet and make sure it is firmly locked in place.

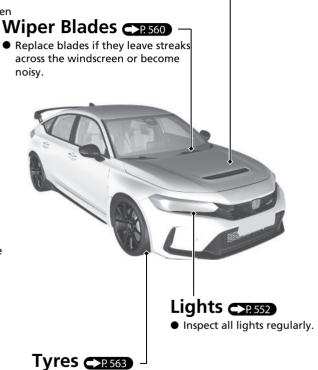

- Inspect tyres and wheels regularly.
- Check tyre pressures regularly.
- Install winter tyres for winter driving.

# Handling the Unexpected Cassan

## Flat Tyre P.590

• Park in a safe location and repair the flat tyre using the tyre repair kit.

#### Models with a compact spare tyre

 Park in a safe location and replace the flat tyre with the spare tyre in the luggage area.



#### **Indicators Come On**

#### **○**P.623

 Identify the indicator and consult the owner's manual.




## Engine Won't Start R614

• If the battery is dead, jump start using a booster battery.



## Blown Fuse R630

• Check for a blown fuse if an electrical device does not operate.

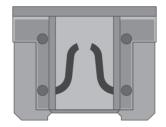

## Overheating (\$\)P.621

 Park in a safe location. If you do not see steam under the bonnet, open the bonnet, and let the engine cool down.




## Emergency Towing →P.637

 Call a professional towing service if you need to tow your vehicle.




## What to Do If

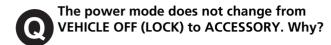



- The steering wheel may be locked.
- Move the steering wheel left and right after pressing the **ENGINE START/STOP** button.



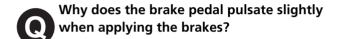



This can occur when the ABS activates and does not indicate a problem. Apply firm, steady pressure on the brake pedal. Never pump the brake pedal.

Anti-lock Brake System (ABS) P. 498



The rear door cannot be opened from inside the vehicle. Why?



Check if the childproof lock is in the lock position. If so, open the rear door with the outside door handle. To cancel this function, slide the lever up to the unlock position.







If you do not open the doors within 30 seconds, the doors are relocked automatically for security.

Why does the beeper sound when I open the driver's door?



The beeper sounds when:

- The power mode is in ACCESSORY.
- The exterior lights are left on.
- The Auto Idle Stop is in operation.

Why does the beeper sound when I start driving?



The beeper sounds when the driver and/or any passenger are not wearing their seat belts.

Pressing the electric parking brake switch does not release the parking brake. Why?




Press the electric parking brake switch with the brake pedal depressed.

I'm seeing an amber indicator of a tyre with an exclamation point. What is that?



The Deflation Warning System needs attention. If you recently inflated or changed a tyre, you have to recalibrate the system.

**Deflation Warning System** → P. 418

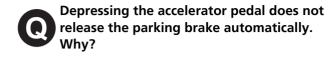



- Fasten the driver's seat belt.
- Check if the transmission is in N. If so, select any other position.

Why do I hear a screeching sound when I apply the brake pedal?



The brake pads may need to be replaced. Have your vehicle inspected by a dealer.

Unleaded petrol with a Research Octane Number (RON) of 98 or higher is recommended. Is it possible to use unleaded petrol with a Research Octane Number (RON) of 95 or lower on this vehicle?



Use of lower octane petrol can cause occasional metallic knocking noise in the engine and will result in decreased engine performance.
Use of petrol with a research octane less than 91 can lead to engine damage.

# Safe Driving

You can find many safety recommendations throughout this chapter, and throughout this manual.

For Safe Driving	
Important Safety Precautions	36
Your Vehicle's Safety Features	38
Safety Checklist	39
Seat Belts	
About Your Seat Belts	40
Fastening a Seat Belt	4
Seat Belt Inspection	49
Anchorage Points	50
Airbags	
Airbag System Components	5
Types of Airbags	5

Front Airbags (SRS)	53
Knee Airbags	56
Side Airbags	60
Side Curtain Airbags	63
Airbag System Indicators	65
Airbag Care	66
Pop-up Hood System	
About the Pop-up Hood System	67
Pop-up Hood System Care	69
Child Safety	
Protecting Child Passengers	70
Safety of Infants and Small Children	73

Safety of Larger Children	92
Exhaust Gas Hazard	
Carbon Monoxide Gas	95
Safety Labels	
Label Locations	96

# For Safe Driving

The following pages explain your vehicle's safety features and how to use them properly. The safety precautions below are ones that we consider to be among the most important.

# **Important Safety Precautions**

### ■ Always wear your seat belt

A seat belt is your best protection in all types of collisions. Airbags are designed to supplement seat belts, not replace them. So even though your vehicle is equipped with airbags, make sure you and your passengers always wear your seat belts, and wear them properly.

### ■ Restrain all children

Children aged 12 and under should ride properly restrained in a back seat, not the front seat. Infants and small children should be restrained in a child restraint system. Larger children should use a booster seat and a lap/shoulder seat belt until they can use the belt properly without a booster seat.

### ■ Be aware of airbag hazards

While airbags can save lives, they can cause serious or fatal injuries to occupants who sit too close to them, or are not properly restrained. Infants, young children, and short adults are at the greatest risk. Be sure to follow all instructions and warnings in this manual.

#### ■ Don't drink and drive

Alcohol and driving don't mix. Even one drink can reduce your ability to respond to changing conditions, and your reaction time gets worse with every additional drink. So don't drink and drive, and don't let your friends drink and drive, either.

#### **≥** Important Safety Precautions

Some countries prohibit the use of mobile phones other than hands-free devices by the driver while driving.

### ■ Pay appropriate attention to the task of driving safely

Engaging in mobile phone conversation or other activities that keep you from paying close attention to the road, other vehicles, and pedestrians could lead to a crash. Remember, situations can change quickly, and only you can decide when it is safe to divert some attention away from driving.

### **■** Control your speed

Excessive speed is a major factor in crash injuries and deaths. Generally, the higher the speed, the greater the risk, but serious injuries can also occur at lower speeds. Never drive faster than is safe for current conditions, regardless of the maximum speed posted.

### ■ Keep your vehicle in safe condition


Having a tyre blowout or a mechanical failure can be extremely hazardous. To reduce the possibility of such problems, check your tyre pressures and condition frequently, and perform all regularly scheduled maintenance.

#### ■ Do not leave children unattended in the vehicle

Children, pets, and people needing assistance left unattended in the vehicle may be injured if they activate one or more of the vehicle controls. They may also cause the vehicle to move, resulting in a crash in which they and/or another person(s) can be injured or killed. Also, depending on the ambient temperature, the temperature of the interior may reach extreme levels, which can result in harm or death. Even if the climate control system is on, never leave them in the vehicle unattended as the heating system\* / climate control system\* can shut off at any time.

\* Not available on all models

# **Your Vehicle's Safety Features**

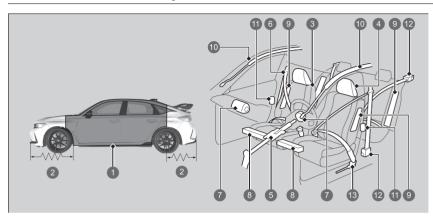

- Safety Cage
- 2 Crush Zones
- Seats and Seat-Backs
- 4 Head Restraints
- 6 Collapsible Steering Column
- 6 Seat Belts
- Front Airbags
- 8 Knee Airbags
- Side Airbags
- Side Curtain Airbags
- Door Locks
- Seat Belt Tensioners
- Outer Lap Pretensioners

The following checklist will help you take an active role in protecting yourself and your passengers.

### ∑Your Vehicle's Safety Features

Your vehicle is equipped with many features that work together to help to protect you and your passengers during a crash.

Some features do not require any action on your part. These include a strong steel framework that forms a safety cage around the passenger compartment, front and rear crush zones, a collapsible steering column, and tensioners that tighten the front and rear seat belts in a sufficient crash.

However, you and your passengers cannot take full advantage of these features unless you remain seated in the correct position and always wear your seat belts. In fact, some safety features can contribute to injuries if they are not used properly.

# **Safety Checklist**

For the safety of you and your passengers, make a habit of checking these items each time before you drive.

Adjust your seat to a position suitable for driving. Be sure the front seats are
adjusted as far to the rear as possible while allowing the driver to control the
vehicle. Sitting too close to a front airbag can result in serious or fatal injury in a
crash.

**Seats** P 203

Always wear your seat belt, and make sure you wear it properly. Confirm that any
passengers are properly belted as well.

Fastening a Seat Belt P. 45

• Protect children by using seat belts or child restraint systems according to a child's age, height, and weight.

**≧ Child Safety** P. 70

### Safety Checklist

If the door and/or hatch open message appears on the driver information interface, a door and/or the hatch is not completely closed. Close all doors and the hatch tightly until the message disappears.

Driver Information Interface Right Side
Area P. 138



### **About Your Seat Belts**

Seat belts are the single most effective safety device because they keep you connected to the vehicle so that you can take advantage of many built-in safety features. They also help to keep you from being thrown against the inside of the vehicle, against any passengers, or out of the vehicle. When worn properly, seat belts also keep your body properly positioned in a crash so that you can take full advantage of the additional protection provided by the airbags.

In addition, seat belts help to protect you in almost every type of crash, including:

- frontal impacts
- side impacts
- rear impacts
- rollovers

■ About Your Seat Belts

# **AWARNING**

Not wearing a seat belt properly increases the chance of serious injury or death in a crash, even though your vehicle has airbags.

Be sure you and your passengers always wear seat belts and wear them properly.

**WARNING:** Seat belts are designed to bear upon the bony structure of the body, and should be worn low across the front of the pelvis or the pelvis, chest and shoulders, as applicable; wearing the lap section of the belt across the abdominal area must be avoided.

**WARNING:** Seat belts should be adjusted as firmly as possible, consistent with comfort, to provide the protection for which they have been designed. A slack belt will greatly reduce the protection afforded to the wearer

**WARNING:** Belts should not be worn with straps twisted.

**WARNING:** Each belt assembly must only be used by one occupant; it is dangerous to put a belt around a child being carried on the occupant's lap.

### **■** Lap/shoulder seat belts

All four seating positions are equipped with lap/shoulder seat belts with emergency locking retractors. In normal driving the retractor lets you move freely while keeping some tension on the belt. During a collision or sudden stop the retractor locks to restrain your body.

The seat belt must be properly secured when using a front-facing child restraint system.

■ Installing a Child Restraint System with a Lap/Shoulder Seat Belt P. 88

### ■ Proper use of seat belts

Follow these guidelines for proper use:

- All occupants should sit upright, well back in the seat, and remain in that position for the duration of the trip. Slouching and leaning reduce the effectiveness of the belt and can increase the chance of serious injury in a crash.
- Never place the shoulder part of a lap/shoulder seat belt under your arm or behind your back. This could cause very serious injuries in a crash.
- Two people should never use the same seat belt. If they do, they could be very seriously injured in a crash.
- Do not put any accessories on the seat belts. Devices intended to improve comfort or reposition the shoulder part of a seat belt can reduce the protective capability and increase the chance of serious injury in a crash.

#### ■ About Your Seat Belts

If you extend the seat belt too quickly, it will lock in place. If this happens, slightly retract the seat belt, then extend it slowly.

Seat belts cannot completely protect you in every crash. But in most cases, seat belts can reduce your risk of serious injury.

Most countries require you to wear seat belts. Take time to familiarise with the legal requirements of the countries in which you will drive.

### Seat Belt Reminder



### **■** Front seats

The seat belt system includes an indicator on the instrument panel to remind the driver or a front passenger or both to fasten their seat belts. If you set the power mode to ON and a seat belt is not fastened, the indicator will come on.

The beeper will periodically sound and the indicator will blink while the vehicle is moving until the seat belt is fastened.

#### Seat Belt Reminder


The indicator will also come on if a front passenger does not fasten their seat belt within six seconds after the power mode is set to ON.

When no one is sitting in the front passenger's seat, the indicator will not come on and the beeper will not sound.

If the indicator comes on or the beeper sounds with no one sitting in the front passenger's seat. Check if:

- There is nothing heavy placed on the front passenger seat.
- The driver's seat belt is fastened. If the indicator does not light when the passenger is seated and is not fastened, something may be interfering with the occupant detection sensor. Check if:
- A cushion is placed on the seat.
- The front passenger is not sitting properly.

If none of these conditions exist, have your vehicle checked by a dealer.

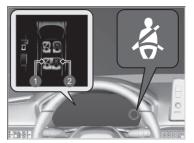

- 1 Fastened
- 2 Unfastened

### ■ Rear seats

Your vehicle monitors rear seat belt use. A driver information interface notifies you if any of the rear seat belts are not used.

The display appears when:

- Any of the rear passengers' seat belts are unfastened when the power mode is turned to ON.
- A rear door is opened and then closed.
- Any of the rear passengers fastens or unfastens their seat belt.


The seat belt reminder indicator blinks and beeper sounds if any rear passenger's seat belt is unfastened while driving.

### Automatic Seat Belt Tensioners

The front seats and the rear seats are equipped with automatic seat belt tensioners to enhance safety.

The tensioners automatically tighten the front seat belts and the rear seat belts during a moderate-to-severe frontal collision, sometimes even if the collision is not severe enough to inflate the front airbags or the driver's and passenger's knee airbag.



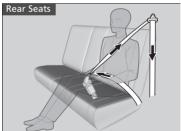

#### ■ Automatic Seat Belt Tensioners

The seat belt tensioners can only operate once. If a tensioner is activated, the SRS indicator will come on. Have a dealer replace the tensioner and thoroughly inspect the seat belt system as it may not offer protection in a subsequent crash.

During a moderate-to-severe side impact, the tensioner on both sides of the vehicle also activates.


# **Fastening a Seat Belt**

After adjusting a front seat to the proper position, and while sitting upright and well back in the seat:

**Seats** P. 203



1. Pull the seat belt out slowly.

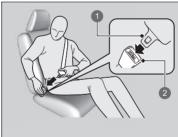

- 2. Insert the latch plate into the buckle, then tug on the belt to make sure the buckle is secure.
  - ► Make sure that the belt is not twisted or caught on anything.

#### >> Fastening a Seat Belt

No one should sit in a seat with an inoperative seat belt or one that does not appear to be working correctly. Using a seat belt that is not working properly may not protect the occupant in a crash. Have a dealer check the belt as soon as possible.

Never insert any foreign objects into the buckle or retractor mechanism.

If the seat belt appears to be locked in a fully retracted position, firmly pull out on the shoulder belt once, then push it back in.

Then smoothly pull it out of the retractor and fasten. If you are unable to release the seat belt from a fully retracted position, do not allow anyone to sit in the seat, and take your vehicle to a dealer for repair.

**About Your Seat Belts** P. 40

Seat Belt Inspection P. 49

- Latch Plate
- 2 Buckle



- **3.** Position the lap part of the belt as low as possible across your hips (see illustration), then pull up on the shoulder part of the belt so the lap part fits snugly. This lets your strong pelvic bones take the force of a crash and reduces the chance of internal injuries.
- **4.** If necessary, pull up on the belt again to remove any slack, then check that the belt rests across the centre of your chest and over your shoulder. This spreads the forces of a crash over the strongest bones in your upper body.

■ Fastening a Seat Belt

# **AWARNING**

Improperly positioning the seat belts can cause serious injury or death in a crash.

Make sure all seat belts are properly positioned before driving.

To release the belt, push the red **PRESS** button and then guide the belt by hand until it has retracted completely.

When exiting the vehicle, be sure the belt is properly stowed so that it will not get caught in the closing door.

### ■ Adjusting the Shoulder Anchorage

The front seats have adjustable shoulder anchorages to accommodate taller and shorter occupants.



- **1.** Move the anchorage up and down while holding the release button.
- **2.** Position the anchorage so that the belt rests across the centre of your chest and over your shoulder.

### ■ Adjusting the Shoulder Anchorage

After an adjustment, make sure that the shoulder anchorage position is secure.

The shoulder anchorage height can be adjusted to four levels. If the belt contacts your neck, lower the height one level at a time.

### ■ Advice for Pregnant Women

#### Consider alternative:

If you are pregnant, the best way to protect yourself and your unborn child when driving or riding in a vehicle is to always wear a seat belt. When positioning the seat belt, wear the shoulder belt section across the chest, avoiding the abdomen, and keep the lap belt portion as low as possible across the hips. (See illustration.)



### 

Each time you have a checkup, ask your doctor if it is okay for you to drive.

To reduce the risk of injuries to both you and your unborn child that can be caused by an inflating front airbag:

- When driving, sit upright and adjust the seat as far back as possible while allowing full control of the vehicle.
- When sitting in the front passenger's seat, adjust the seat as far back as possible.

# **Seat Belt Inspection**

Regularly check the condition of your seat belts as follows:

- Pull each belt out fully, and look for frays, cuts, burns, and wear.
- Check that the latch plates and buckles work smoothly and the belts retract easily.
  - ▶ If a belt does not retract easily, cleaning the belt may correct the problem. Only use a mild soap and warm water. Do not use bleach or cleaning solvents. Make sure the belt is completely dry before allowing it to retract.

Any belt that is not in good condition or working properly will not provide proper protection and should be replaced as soon as possible.

A belt that has been worn during a crash may not provide the same level of protection in a subsequent crash. Have your seat belts inspected by a dealer after any collision.

Seat Belt Inspection

### **AWARNING**

Not checking or maintaining seat belts can result in serious injury or death if the seat belts do not work properly when needed.


Check your seat belts regularly and have any problem corrected as soon as possible.

**WARNING:** No modifications or additions should be made by the user which will either prevent the seat belt adjusting devices from operating to remove slack, or prevent the seat belt assembly from being adjusted to remove slack.


**WARNING:** It is essential to replace the entire assembly after it has been worn in a severe impact even if damage to the assembly is not obvious.

**WARNING:** Care should be taken to avoid contamination of the webbing with polishes, oils and chemicals, and particularly battery acid. Cleaning may safely be carried out using mild soap and water. The belt should be replaced if webbing becomes frayed, contaminated or damaged.

# **Anchorage Points**

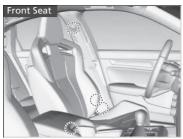

When replacing the seat belts, use the anchorage points shown in the images. The front seat has a lap/shoulder belt.

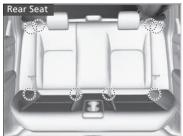

The rear seat has two lap/shoulder belts.

# Airbags

# **Airbag System Components**

The front, driver's knee, front passenger's knee, side, and side curtain airbags are deployed according to the direction and severity of impact. The airbag system includes:

- Two SRS (Supplemental Restraint System) front airbags. The driver's airbag is stored in the centre of the steering wheel; the front passenger's airbag is stored in the dashboard. Both are marked SRS AIRBAG.
- Two knee airbags. The driver's knee airbag is stored under the steering column; the front passenger's knee airbag is stored under the glove box.
   Both are marked SRS AIRBAG.
- Four side airbags, one for the driver, one for the front passenger and two for the rear outboard. The airbags are stored in the outer edges of the seat-backs. All are marked SIDE AIRBAG.

- Two side curtain airbags, one for each side of the vehicle. The airbags are stored in the ceiling, above the side windows. The front and rear pillars are marked SIDE CURTAIN AIRBAG
- An electronic control unit that, when the power mode is in ON, continually monitors information about the various impact sensors, seat and buckle sensors, airbag activators, seat belt tensioners, and other vehicle information. During a crash event the unit can record such information.
- Automatic seat belt tensioners for the front seats and rear seats.
- Impact sensors that can detect a moderate-to-severe front or side impact.
- An indicator on the instrument panel that alerts you to a possible problem with your airbag system or seat belt tensioners.

### ■ Important Facts About Your Airbags

Airbags can pose serious hazards. To do their job, airbags must inflate with tremendous force. So, while airbags help to save lives, they can cause burns, bruises, and other minor injuries, sometimes even fatal ones if occupants are not wearing their seat belts properly and sitting correctly.

**What you should do:** Always wear your seat belt properly and sit upright and as far back from the steering wheel as possible while allowing full control of the vehicle. A front passenger should move their seat as far back from the dashboard as possible.

Remember, however, that no safety system can prevent all injuries or deaths that can occur in a severe crash, even when seat belts are properly worn and the airbags deploy.

**Do not place hard or sharp objects between yourself and a front airbag.** Carrying hard or sharp objects on your lap, or driving with a pipe or other sharp object in your mouth, can result in injuries if your front airbag inflates.

Do not attach or place objects on the front, driver's knee and front passenger's knee airbag covers. Objects on the covers marked SRS AIRBAG could interfere with the proper operation of the airbags or be propelled inside the vehicle and hurt someone if the airbags inflate.

### 

Do not attempt to deactivate your airbags. Together, airbags and seat belts provide the best protection.

When driving, keep hands and arms out of the deployment path of the front airbag by holding each side of the steering wheel. Do not cross an arm over the airbag cover.

# **Types of Airbags**

Your vehicle is equipped with four types of airbags:

- Front airbags: Airbags in front of the driver's and front passenger's seats.
- **Knee airbags:** Airbags under the steering column and under the glove box.
- **Side airbags:** Airbags in the driver's and front passenger's outer seat-backs and next to the outer rear seating positions.
- **Side curtain airbags:** Airbags above the side windows.

Each is discussed in the following pages.

### ∑Types of Airbags

The airbags can inflate whenever the power mode is in ON.

After an airbag inflates in a crash, you may see a small amount of smoke. This is from the combustion process of the inflator material and is not harmful. People with respiratory problems may experience some temporary discomfort. If this occurs, get out of the vehicle as soon as it is safe to do so.

# Front Airbags (SRS)

The front SRS airbags inflate in a moderate-to-severe frontal collision to help to protect the head and chest of the driver and/or front passenger.

**SRS** (Supplemental Restraint System) indicates that the airbags are designed to supplement seat belts, not replace them. Seat belts are the occupant's primary restraint system.

# Housing Locations


The front airbags are housed in the centre of the steering wheel for the driver, and in the dashboard for the front passenger. Both airbags are marked **SRS AIRBAG**.

### Operation

Front airbags are designed to inflate during moderate-to-severe frontal collisions. When the vehicle decelerates suddenly, the sensors send information to the control unit which signals one or both front airbags to inflate.

A frontal collision can be either head-on or angled between two vehicles, or when a vehicle crashes into a stationary object, such as a concrete wall.

### ■ How the Front Airbags Work

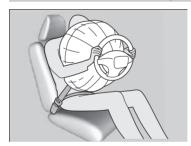

While your seat belt restrains your torso, the front airbag provides supplemental protection for your head and chest.

The front airbags deflate immediately so that they won't interfere with the driver's visibility or the ability to steer or operate other controls.

The total time for inflation and deflation is so fast that most occupants are not aware that the airbags deployed until they see them lying in front of them.

### ■ When front airbags should not deploy

**Minor frontal crashes:** Front airbags were designed to supplement seat belts and help to save lives, not to prevent minor scrapes, or even broken bones that might occur during a less than moderate-to-severe frontal crash.

**Side impacts:** Front airbags can provide protection when a sudden deceleration causes a driver or front passenger to move towards the front of the vehicle. Side airbags and side curtain airbags have been specifically designed to help to reduce the severity of injuries that can occur during a moderate-to-severe side impact which can cause the driver or passenger to move towards the side of the vehicle.

**Rear impacts:** Head restraints and seat belts are your best protection during a rear impact. Front airbags cannot provide any significant protection and are not designed to deploy in such collisions.

**Rollovers:** Seat belts and side curtain airbags offer the best protection in a rollover. Because front airbags could provide little if any protection, they are not designed to deploy during a rollover.

### ■ When front airbags deploy with little or no visible damage

Because the airbag system senses sudden deceleration, a strong impact to the vehicle framework or suspension might cause one or more of the airbags to deploy. Examples include running into a curb, the edge of a hole, or other low fixed object that causes a sudden deceleration in the vehicle chassis. Since the impact is underneath the vehicle, damage may not be readily apparent.

### ■ When front airbags may not deploy, even though exterior damage appears severe


Since crushable body parts absorb crash energy during an impact, the amount of visible damage does not always indicate proper airbag operation. In fact, some collisions can result in severe damage but no airbag deployment because the airbags would not have been needed or would not have provided protection even if they had deployed.

# **Knee Airbags**

The knee SRS airbags inflate in a moderate-to-severe frontal collision to help to keep the driver and/or front passenger in the proper position and to help to maximise the benefit provided by the vehicle's other safety features.

**SRS** (Supplemental Restraint System) indicates that the airbag is designed to supplement seat belts, not replace them. Seat belts are the occupant's primary restraint system.

# Housing Locations

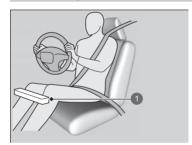

Driver's Knee Airbag Location

The knee airbag for the driver and the one for the front passenger are housed under the steering column and the glove box respectively.

Both are marked SRS AIRBAG.

### 

Do not attach accessories on or near a knee airbag as they can interfere with the proper operation of the airbag, or even hurt someone if the airbag inflates.

The driver and front passenger should not store any items under the seat or behind their feet. The items can interfere with proper airbag deployment in the event of a moderate to severe frontal collision and may result in inadequate protection.



1 Passenger's Knee Airbag Location

# Operation



Deployed Driver's Knee Airbag

The driver's and front passenger's knee airbag deploy at the same time as the driver's and front passenger's airbag respectively.

Even if the collision is not severe enough to deploy the front airbag, the knee airbag may inflate alone.



Deployed Passenger's Knee Airbag

### ■ When knee airbags deploy with little or no visible damage

Because the airbag system senses sudden deceleration, a strong impact to the vehicle framework or suspension might cause one or more of the airbags to deploy. Examples include running into a curb, the edge of a hole, or other low fixed object that causes a sudden deceleration in the vehicle chassis. Since the impact is underneath the vehicle, damage may not be readily apparent.

# ■ When knee airbags may not deploy, even though exterior damage appears severe

Since crushable body parts absorb crash energy during an impact, the amount of visible damage does not always indicate proper airbag operation. In fact, some collisions can result in severe damage but no airbag deployment because the airbags would not have been needed or would not have provided protection even if they had deployed.

# **Side Airbags**

The side airbags help to protect the torso and pelvis of the driver, front passenger, or a rear seat occupant during a moderate-to-severe side impact.

# Housing Locations



The side airbags are housed in the outside edge of the driver's and passenger's seatbacks and next to the outer rear seating positions.

Each are marked **SIDE AIRBAG**.

### Side Airbag Location




Side Airbag Location

### Side Airbags

Do not attach accessories on or near the side airbags. They can interfere with the proper operation of the airbags, or hurt someone if an airbag inflates.

### Operation

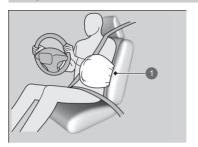

When the sensors detect a moderate-tosevere side impact, the control unit signals the side airbag on the impact side to immediately inflate.

Deployed Side Airbag



Deployed Side Airbag

#### Side Airbags

Do not cover or replace the front seat-back covers without consulting a dealer.

Improperly replacing or covering front seat-back covers can prevent your side airbags from properly deploying during a side impact.

Do not let the front passenger lean sideways with their head in the deployment path of the side airbag. An inflating side airbag can strike with strong force and seriously injure the passenger.

### ■ When a side airbag deploys with little or no visible damage

Because the airbag system senses sudden acceleration, a strong impact to the side of the vehicle's framework can cause a side airbag to deploy. In such cases, there may be little or no damage, but the side impact sensors detected a severe enough impact to deploy the airbag.


# ■ When a side airbag may not deploy, even though visible damage appears severe

It is possible for a side airbag not to deploy during an impact that results in apparently severe damage. This can occur when the point of impact was towards the far front or rear of the vehicle, or when the vehicle's crushable body parts absorbed most of the crash energy. In either case, the side airbag would not have been needed nor provided protection even if it had deployed.

# **Side Curtain Airbags**

The side curtain airbags help to protect the heads of the driver and any passengers during a moderate-to-severe side impact.

### ■ Housing Locations

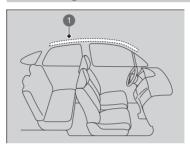

The side curtain airbags are located in the ceiling above the side windows on both sides of the vehicle.

### Side Curtain Airbags


The side curtain airbags are most effective when an occupant is wearing their seat belt properly and sitting upright, well back in their seat.

Do not attach any objects to the side windows or roof pillars as they can interfere with the proper operation of the side curtain airbags.

Do not put a coat hanger or hard objects on a coat hook. This could result in injuries if your side curtain airbag inflates.

Side Curtain Airbag Location

# Operation

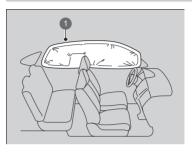

The side curtain airbag is designed to deploy in a moderate-to-severe side impact.

Deployed Side Curtain Airbag

■ When side curtain airbags deploy in a frontal collision
One or both side curtain airbags may also inflate in a moderate-to-severe angled frontal collision.

# **Airbag System Indicators**

If a problem occurs in the airbag system, the SRS indicator will come on and a message appears on the driver information interface.

### ■ Supplemental Restraint System (SRS) Indicator



■ When the power mode is set to ON The indicator comes on for a few seconds, then goes off. This tells you the system is working properly.

If the indicator comes on at any other time, or does not come on at all, have the system checked by a dealer as soon as possible. If you don't, your airbags and seat belt tensioners may not work properly when they are needed.

Supplemental Restraint System (SRS) Indicator

# **AWARNING**

Ignoring the SRS indicator can result in serious injury or death if the airbag systems or tensioners do not work properly.

Have your vehicle checked by a dealer as soon as possible if the SRS indicator alerts you to a possible problem.

# **Airbag Care**

You do not need to, and should not, perform any maintenance on or replace any airbag system components yourself. However, you should have your vehicle inspected by a dealer in the following situations:

### ■ When the airbags have deployed

If an airbag has inflated, the control unit and other related parts must be replaced. Similarly, once an automatic seat belt tensioner has been activated, it must be replaced.

#### ■ When the vehicle has been in a moderate-to-severe collision

Even if the airbags did not inflate, have your dealer inspect the following: the seat belt tensioners for the front seats and rear seats, and each seat belt that was worn during the crash.

#### 

The removal of airbag components from the vehicle is prohibited.

In case of malfunction, or shutdown, or after the airbag inflation/seat belt tensioner operation, ask a qualified personnel for handling.

We recommend against the use of salvaged airbag system components, including the airbag, tensioners, sensors, and control unit.

# Pop-up Hood System


# **About the Pop-up Hood System**

The pop-up hood system is designed to help to reduce the possible head injuries of a pedestrian if they experience a frontal impact with your vehicle.

### ■ The System Activates When

Your vehicle strikes a pedestrian or other objects at moderate or higher speed.

### How the System Works

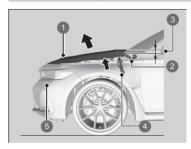

- Bonnet
- 2 Hinge
- Raises about 100mm
- Power Unit Component
- Pedestrian Impact Sensors

When the pedestrian impact sensors detect a certain amount of impact, the pop-up hood system is activated and the rear of the bonnet will raise

The raised bonnet can help to reduce pedestrian head injuries.

The power units are located in the vehicle front side of the hinges.

■About the Pop-up Hood System

# **AWARNING**

After the pop-up hood is activated, the power unit components become extremely hot and can cause burns. Do not touch the power unit components until they have cooled.

### NOTICE

Do not attempt to open the bonnet after the pop-up hood system has been activated. After the system activation, make sure the raised bonnet does not interfere with visibility, and then drive slowly and carefully.

If the bonnet is not fully closed, it may not work properly. Make sure the bonnet is fully closed before driving.

The following conditions may also activate the system.

- A severe impact on the underside of your vehicle.
- Driving over speed bumps at high speed, or over a large pothole.
- When the objects impact the pedestrian impact sensors.

The system may not activate if your vehicle is:

- Impacted from the rear or side.
- Tipped over or rolled over.
- A pedestrian is struck at an angle.

Other factors, such as where, at which angle, or at what vehicle speed the impact has occurred, may prevent the pop-up hood system from activating.


### ■ About the Pop-up Hood System

For the pop-up hood system to work properly:

- Always use the same size tyres as the original. The system may not read your vehicle speed correctly with the different size tyres.
- Never apply force to the system's power unit. It can be damaged if you slam the bonnet shut.
- Do not impact the pedestrian impact sensors in the front bumper.

Pop-up Hood System label is found under the bonnet:

Label Locations P. 96

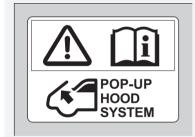

### System Warning Message for Pop-up Hood



### ■ When the power mode is set to ON

A system warning message appears on the driver information interface if there is a potential problem with the pop-up hood system.

System Warning Message for Pop-up Hood

# **AWARNING**

Ignoring the pop-up hood message can result in a malfunction of the pop-up hood. This can result in serious injury or death if your vehicle impacts a pedestrian.

If the pop-up hood message comes on, have your vehicle checked by a dealer as soon as possible.

# **Pop-up Hood System Care**

You do not need to, and should not, perform any maintenance on or replace any pop-up hood system components yourself.

However, if the pop-up hood system has ever activated, you need to have the control unit, and other related parts replaced by a dealer.

### ∑Pop-up Hood System Care

If the front bumper is damaged, have the vehicle checked by a dealer even if the pop-up hood system did not activate.

# **Child Safety**

# **Protecting Child Passengers**

Each year, many children are injured or killed in vehicle crashes because they are either unrestrained or not properly restrained. In fact, vehicle crashes are the number one cause of death of children aged 12 and under.

To reduce the number of child deaths and injuries, infants and children should be properly restrained when they ride in a vehicle.

▶ Protecting Child Passengers

Front Passenger's Sun Visor

### **AWARNING**



NEVER use a rearward facing child restraint on a seat protected by an ACTIVE AIRBAG in front of it, DEATH or SERIOUS INJURY to the CHILD can occur.

# **AWARNING**

Children who are unrestrained or improperly restrained can be seriously injured or killed in a crash.

Any child too small for a seat belt should be properly restrained in an approved child restraint system. A larger child should be properly restrained with a seat belt, using a booster seat if necessary.

#### Children should sit properly restrained in a rear seat. This is because:



- An inflating front airbag can injure or kill a child sitting in the front seat.
- A child in the front seat is more likely to interfere with the driver's ability to safely control the vehicle
- Statistics show that children of all sizes and ages are safer when they are properly restrained in a rear seat.

#### 

In many countries, the law requires all children aged 12 and under, and whose height are shorter than 150 cm (60 inches) be properly restrained in a rear seat.

In many countries, it is required to use an officially approved and suitable child restraint system for transporting a child on any passenger seat. Check your local legal requirement.

We recommend a child restraint system compliant with UN Regulation No. 44 or No. 129, or the regulations of the subject countries.

Selecting a Child Restraint System P. 76

Front Passenger's Doorjamb

## **AWARNING**



#### Extreme Hazard!

DO NOT use a rear-facing child restraint on a seat protected by an airbag in front of it!

- Never hold a child on your lap because it is impossible to protect them in the event of a collision.
- Never put a seat belt over yourself and a child. During a crash, the belt would likely press deep into the child and cause serious or fatal injuries.
- Never let two children use the same seat belt. Both children could be very seriously injured in a crash.
- Any child who is too small to wear a seat belt must be properly restrained in an approved child restraint system that is properly secured to the vehicle using the seat belt or the child restraint anchorage system.
- Do not allow children to operate the doors, windows, or seat adjustments.
- Do not leave children in the vehicle unattended, especially in hot weather when the inside of the vehicle can get hot enough to kill them. They could also activate vehicle controls causing it to move unexpectedly.

#### ▶ Protecting Child Passengers

**WARNING:** Use the power window lock button to prevent children from opening the windows. Using this feature will prevent children from playing with the windows, which could expose them to hazards or distract the driver.

Dening/Closing the Power Windows P. 181

**WARNING:** Always take the ignition key with you whenever you leave the vehicle alone or with other occupants.

To remind you of the passenger's front airbag hazard and child safety, your vehicle has the warning labels on the passenger's side sun visor.

Please read and follow the instructions on this label.

Safety Labels P. 96

## Safety of Infants and Small Children

## ■ Protecting Infants

An infant must be properly restrained in a rear-facing child restraint system until the infant reaches the child restraint system manufacturer's weight or height limit for the seat.



# ■ Positioning a rear-facing child restraint system

Child restraint system must be placed and secured in a rear seating position.

- ➤ We recommend that you install the child restraint system directly behind the front passenger's seat, move the seat as far forward as needed, and leave it unoccupied.
- ► Make sure that there is no contact between the child restraint system and the seat in front of it.

If there is, you may wish to get a smaller rearfacing child restraint system.

■Protecting Infants

## **AWARNING**

Placing a rear-facing child restraint system in the front seat can result in serious injury or death if the passenger's front airbag inflates.

Always place a rear-facing child restraint system in the back seat, not the front.

Many experts recommend use of a rear-facing child restraint system for a child up to two years old if the child's height and weight are appropriate for a rearfacing child restraint system.

When properly installed, a rear-facing child restraint system may prevent the driver or a front passenger from moving their seat all the way back, or from locking their seat-back in the desired position.

#### ■Protecting Infants

Rear-facing child restraint systems should never be installed in a front-facing position.

Always refer to the child restraint system manufacturer's instructions before installation.

If the passenger's front airbag inflates, it can hit the rear-facing child restraint system with great force, which can dislodge or strike the system, and seriously injure the child.

## Protecting Smaller Children

If a child has exceeded the weight and height limitations of a rear-facing child restraint system, the child should be properly restrained in a firmly secured front-facing child restraint system until they exceed the weight and height limitations for the front-facing child restraint system.



# ■ Front-facing child restraint system placement

We strongly recommend placing a frontfacing child restraint system in a rear seating position.

Placing a front-facing child restraint system in the front seat can be hazardous. A rear seat is the safest place for a child.

## **AWARNING**

Placing a front-facing child restraint system in the front seat can result in serious injury or death if the front airbag inflates.

If you must place a front-facing child restraint system in front, move the vehicle seat as far back as possible, and properly restrain the child.

Educate yourself about the laws and regulations regarding child restraint system use where you are driving, and follow the child restraint system manufacturer's instructions

## Selecting a Child Restraint System

Some child restraint systems are lower anchorage compatible. Some have a rigid-type connector while others have a flexible-type connector. Both are equally easy to use. Some existing and previously owned child restraint systems can only be installed using the seat belt. Whichever type you choose, follow the child restraint system manufacturer's use and care instructions including recommended expiration dates as well as the instructions in this manual. Proper installation is key to maximising your child's safety.

The flexible type may not be available in your country.

In seating positions and vehicles not equipped with lower anchorages, install a child restraint system using the seat belt and a top tether for added security. This is because all child restraint systems must be secured with the seat belt when the lower anchorage system is not in use. In addition, the child restraint system manufacturer may advise that a seat belt be used to attach an ISOFIX restraint system once a child reaches a specified weight. Please read the child restraint system owner's manual for proper installation instructions.

#### ■ Important consideration when selecting a child restraint system

Make sure the child restraint system meets the following three requirements:

- The child restraint system is the correct type and size for the child.
- The child restraint system is the correct type for the seating position.
- The child restraint system is compliant with safety standards. We recommend a child restraint system compliant with UN Regulation No. 44 or No. 129, or the regulations of the subject countries. Look for the approval mark on the system and the manufacturer's statement of compliance on the box.

#### Selecting a Child Restraint System

Installation of a lower anchorage-compatible child restraint system is simple.


Lower anchorage-compatible child restraint systems have been developed to simplify the installation process and reduce the likelihood of injuries caused by incorrect installation.

#### **■** Child Restraint Systems Standards

If a child restraint system (whether an i-Size /ISOFIX type or one that is fitted with a seat belt) meets the relevant UN Regulation, it will be affixed with an approval label as shown in the adjacent table. Before purchasing or using any child restraint system, make sure to check the approval label and ensure that it is compatible with your vehicle and the child, and that it complies with the relevant UN Regulation.

#### Selecting a Child Restraint System


Example of UN Regulation No. 44 approval label

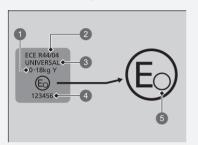

- 1 "Mass group"
- Regulation number
- Category
- Approval number
- **6** Country code

#### Selecting a Child Restraint System

Example of UN Regulation No. 129 approval label

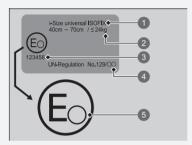

- 1 Category
- 2 Size and weight indication
- Approval number
- 4 Regulation number
- **6** Country code

## Locations for Child Restraint System Installation





Suitable for universal restraint systems installed with vehicle safety belts.



Suitable for forward facing universal restraint systems installed with vehicle safety belts.



Suitable for i-Size and ISOFIX child restraints systems.



Suitable for forward facing restraint systems only.



Never use a rearward facing child restraint system.



Seat position equipped with Top Tether anchorages.

- \*1 Forward facing only.

  When installing a child restraint system, adjust the seat slide to the most rear position.

  If you cannot fix the booster child restraint system stably, adjust the seat-back angle to be parallel with the back still keeping it forward of the seat belt shoulder anchorage.
- \*2 For installing the universal belted type, adjust the seat back to the most front lock position.
- Child restraint systems with support legs can be installed on non i-Size seating positions.

#### All models

#### Detail information for CRS installation

	Seating position and Seat pos			ition number		
	Size groups		1)	2	3	
	We	ight .	Front passenger*1	2nd row		
	Sta	ture	Front passenger	Left	Right	
	Group 0	Up to 10kg	No	Yes	Yes	
Seating position suitable for universal belted (yes/no)	Group 0+	Up to 13kg	NO	Yes	res	
diliversal belied (yes/110)	Group I	9-18kg			Yes	
	Group II	15-25kg	Yes*2	Yes		
	Group III	22-36kg				
i-Size seating position (yes/no)	≤ 150cm		No	Yes	Yes	
Seating position suitable for recommended genuine CRS*3	Refer to genuine CRS list		No	Yes	Yes	
Seating position suitable for lateral fixture (L1/L2)	_		No	No	No	
	Group 0	Up to 10kg				
Largest suitable rearward facing fixture (R1/R2X/R2/R3)	Group 0+	Up to 13kg	No	R3	R3	
	Group I	9-18kg				
Largest suitable forward facing fixture (F2X/F2/F3)	Group I	9-18kg	No	F3	F3	
Largest suitable booster fixture (B2/B3)	≤150cm		No	В3	В3	

#### **≥** Locations for Child Restraint System Installation

When purchasing a child restraint systems, make sure to check the ISOFIX size class or the fixture to ensure that the seat is compatible with your vehicle.

Fixture (CRF)	Description	
ISO/L1	Left lateral-facing (carrycot) infant seat	
ISO/L2	Right lateral-facing (carrycot) infant seat	
ISO/R1	Rearward-facing infant seat	
ISO/R2X	Reduced-size rearward-facing child restraint systems	
ISO/R2	Reduced-size rearward-facing child restraint systems	
ISO/R3	Full-size rearward-facing child restraint systems	
ISO/F2X	Reduced-height forward-facing child restraint systems	
ISO/F2	Reduced-height forward-facing child restraint systems	
ISO/F3	Full-height, forward-facing child restraint systems	
ISO/B2	Reduced width forward-facing booster seat	
ISO/B3	Full width forward-facing booster seat	

- \*1 Forward facing only.
  - When installing a child restraint system, adjust the seat slide to the most rear position.
  - If you cannot fix the booster child restraint system stably, adjust the seat-back angle to be parallel with the back still keeping it forward of the seat belt shoulder anchorage.
- \*2 For installing the universal belted type, adjust the seat back to the most front lock position.
- \*3 The named Child Restraint Systems (CRS) reflect Honda's recommendations at the date of publication. You should speak to an authorised dealer for up to date details relating to our recommended CRSs. Other CRS may also be suitable please consult CRS manufacturers for recommended vehicle lists.
- Child restraint systems with support legs can be installed on non i-Size seating positions.

## **■** Europe Genuine CRS List

## **UN R129**

Range of application	Child Restraint System	Category
40cm to 83cm	Honda baby safe	Universal Belted
up to 13kg (Birth - 15 months)	Honda baby safe ISOFIX	i-Size Universal ISOFIX
76cm to 105cm 8kg to 22kg (15 months - 4 years)	Honda ISOFIX	i-Size Universal ISOFIX
100cm to 150cm 15kg to 36kg (3.5 years - 12 years)	Honda KIDFIX	i-Size Booster seat

## **■ Installing a Lower Anchorage-Compatible Child Restraint System**

A lower anchorage-compatible child restraint system can be installed in any of the rear seats. A child restraint system is attached to the lower anchorages with either the rigid or flexible type of connectors.



- **1.** Locate the anchorage marks affixed to the base of the seat cushion.
- **2.** Pull out the anchorage covers under the marks to expose the lower anchorages.

- Marks
- 2 Cover




**3.** Place the child restraint system so that the probes are on the cover.

☑Installing a Lower Anchorage-Compatible Child Restraint System

## **AWARNING**

Never attach two child restraint systems to the same anchorage. In a collision, one anchorage may not be strong enough to hold two child restraint system attachments and may break, causing serious injury or death.

Some child restraint systems come with optional guide-cups, which avoid possible damage to the seat surface. Follow the manufacturer's instructions when using the guide-cups, and attach them to the lower anchorages as shown in the image.

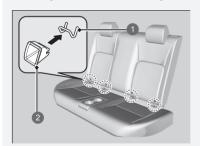


- 1 Lower Anchorage
- Guide-cup

Probes



- Lower Anchorages
- Rigid Type

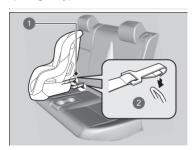

- 1 Lower Anchorages
- 2 Flexible Type

- **4.** Attach the child restraint system to the lower anchorages according to the instructions that came with the child restraint system.
  - ➤ When installing the child restraint system, make sure that the lower anchorages are not obstructed by the seat belt or any other object.



Top Tether Anchorage Symbol


≥ Installing a Lower Anchorage-Compatible Child Restraint System

**WARNING:** Never use a hook that does not come with a Top Tether Anchorage Symbol when securing an installed child restraint system.


For your child's safety, when using a child restraint system installed using the lower anchorage system, make sure that the child restraint system is properly secured to the vehicle.

A child restraint system that is not properly secured will not adequately protect a child in a crash and may cause injury to the child or other vehicle occupants.

The flexible type may not be available in your country.

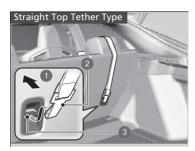

- Ahead of the Vehicle
- 2 Tether Strap Hook
- 3 Anchorage

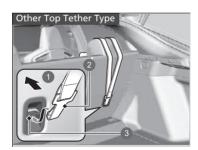

- Ahead of the Vehicle
- 2 Tether Strap Hook
- Anchorage

- **5.** Retract the luggage area cover\*.
  - Luggage Area Cover\* P. 217
- **6.** Route the tether strap over the head restraint.
  - ► Make sure the strap is not twisted.
- **7.** Secure the tether strap hook to the anchorage.
- **8.** Tighten the tether strap as instructed by the child restraint system manufacturer.
- **9.** Make sure the child restraint system is firmly secured by rocking it forward and back, and side to side; little movement should be felt.
- **10.** Make sure any unused seat belt that a child can reach is buckled.




Support Leg

#### Child restraint system with support leg

- **4.** Extend the support leg until it touches the floor as instructed by the child restraint system manufacturer.
  - Confirm that the section of the floor on which the support leg rests is level. If the section is not level, the support leg will not provide adequate support.
  - ► Make sure that there is no contact between the child restraint system and the seat in front of it.

## **■** Installing a Child Restraint System with a Lap/Shoulder Seat Belt



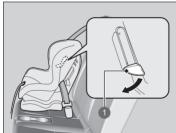

Tab

- **1.** Place the child restraint system on the vehicle seat.
- **2.** Route the seat belt through the child restraint system according to the child restraint system manufacturer's instructions, and insert the latch plate into the buckle.
  - ▶ Insert the latch plate fully until it clicks.
- **3.** Push down the tab. Route the shoulder part of the belt into the slit at the side of the restraint.
- **4.** Grab the shoulder part of the belt near the buckle, and pull up to remove any slack from the lap part of the belt.
  - When doing this, place your weight on the child restraint system and push it into the vehicle seat.
- **5.** Position the belt properly and push up the tab. Make sure the belt is not twisted.
  - ➤ When pushing up the tab, pull up the upper shoulder part of the belt to remove any slack from the belt.

≥ Installing a Child Restraint System with a Lap/Shoulder Seat Belt

A child restraint system that is not properly secured will not adequately protect a child in a crash and may cause injury to the child or other vehicle occupants.



- 6. Make sure the child restraint system is firmly secured by rocking it forward and back, and side to side; little movement should be felt.
- Make sure any unused seat belt that a child can reach is buckled.

If your child restraint system does not come with a mechanism that secures the belt, install a locking clip on the seat belt.


After going through the step 1 and 2, pull up the shoulder part of the belt and make sure there is no slack in the lap portion.

- **3.** Tightly grasp the belt near the latch plate. Pinch both parts of the belt together so they do not slip through the latch plate. Unbuckle the seat belt.
- **4.** Install the locking clip as shown in the image. Position the clip as close as possible to the latch plate.
- **5.** Insert the latch plate into the buckle. Go to step 6 and 7.



Locking Clip

## ■ Adding Security with a Tether

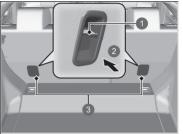

A tether anchorage point is provided behind each rear seating position.


If you have a child restraint system that comes with a tether but can be installed with a seat belt, the tether may be used for additional security.

- 1 Anchorage
- Ahead of the Vehicle
- Tether Anchorage Points


#### ■ Adding Security with a Tether

**WARNING:** Child restraint anchorages are designed to withstand only those loads imposed by correctly fitted child restraints. Under no circumstances are they to be used for adult seat belts, harnesses or for attaching other items or equipment to the vehicle.

Always use a tether for front-facing child restraint system whether using the seat belt or lower anchorages.

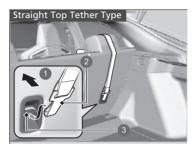

- Ahead of the Vehicle
- 2 Tether Strap Hook
- 3 Anchorage

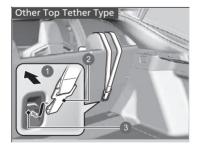

- Ahead of the Vehicle
- 2 Tether Strap Hook
- 3 Anchorage

- $\textbf{1.} \ \text{Retract the luggage area cover}^{\star}.$ 
  - **Luggage Area Cover\*** P. 217
- **2.** Locate the appropriate tether anchorage point.
- **3.** Route the tether strap over the head restraint. Make sure the strap is not twisted.
- **4.** Secure the tether strap hook to the anchorage.
- **5.** Tighten the tether strap as instructed by the child restraint system manufacturer.

## **Safety of Larger Children**

### ■ Protecting Larger Children

The following pages give instructions on how to check proper seat belt fit, what kind of booster seat to use if one is needed, and important precautions for a child who must sit in front.

## ■ Checking Seat Belt Fit

When a child is too big for a child restraint system, secure the child in a rear seat using the lap/shoulder seat belt. Have the child sit upright and all the way back, then answer the following questions.



#### ■ Checklist

- Do the child's knees bend comfortably over the edge of the seat?
- Does the shoulder belt cross between the child's neck and arm?
- Is the lap part of the seat belt as low as possible, touching the child's thighs?
- Will the child be able to stay seated like this for the whole trip?

If you answer yes to all these questions, the child is ready to wear the lap/shoulder seat belt correctly. If you answer no to any question, the child needs to ride on a booster seat until the seat belt fits properly without a booster seat.

Safety of Larger Children

## **AWARNING**

Allowing a child aged 12 or under to sit in front can result in injury or death if the passenger's front airbag inflates.

If a larger child must ride in front, move the vehicle seat as far to the rear as possible, have the child sit up properly and wear the seat belt properly, using a booster seat if needed.

#### ■ Booster Seats



If a lap/shoulder seat belt cannot be used properly, position the child in a booster seat in the rear seat. For the child's safety, check that the child meets the booster seat manufacturer's recommendations.

A backrest is available for a specific booster seat. Install the backrest to the booster seat and adjust it to the vehicle seat according to the booster seat manufacturer's instructions. Make sure the seat belt is properly routed through the guide at the shoulder of the



backrest and the belt does not touch and cross the child's neck.

Guide

#### **≫**Booster Seats

When installing a booster seat, make sure to read the instructions that came with it, and install the seat accordingly.

There are high- and low-type booster seats. Choose a booster seat that allows the child to wear the seat belt correctly.

We recommend a booster seat with a backrest as it is easier to adjust the shoulder belt.

### ■ Protecting Larger Children - Final Checks

Your vehicle has a rear seat where children can be properly restrained. If you ever have to carry a group of children, and a child must ride in front:

- Make sure you read and fully understand the instructions and safety information in this manual.
- Move the front passenger seat as far back as possible.
- Have the child sit upright and well back in the seat.
- Check that the seat belt is properly positioned so that the child is secure in the seat.

#### ■ Monitoring child passengers

We strongly recommend that you keep an eye on child passengers. Even older, more mature children sometimes need to be reminded to fasten their seat belts and sit up properly.

## **Exhaust Gas Hazard**

#### **Carbon Monoxide Gas**

The engine exhaust from this vehicle contains carbon monoxide, a colourless, odourless, and highly toxic gas. As long as you properly maintain your vehicle, carbon monoxide gas will not get into the interior.

#### ■ Have the exhaust system inspected for leaks whenever

- The exhaust system is making an unusual noise.
- The exhaust system may have been damaged.
- The vehicle is raised for an oil change.

When you operate a vehicle with the hatch open, airflow can pull exhaust gas into the interior and create a hazardous condition. If you must drive with the hatch open, open all the windows and set the heating system\* / climate control system\* as shown below.

- **1.** Select the fresh air mode.
- **2.** Select the mode.
- 3. Set the fan speed to high.
- **4.** Set the temperature control to a comfortable setting.

Adjust the heating system\* / climate control system\* in the same manner if you sit in your parked vehicle with the engine running.

## **AWARNING**

Carbon monoxide gas is toxic.

Breathing it can cause unconsciousness and even kill you.

Avoid any enclosed areas or activities that expose you to carbon monoxide.

An enclosed area such as a garage can quickly fill up with carbon monoxide gas.

Do not run the engine with the garage door closed. Even when the garage door is open, drive out of the garage immediately after starting the engine.


\* Not available on all models

## Safety Labels

### **Label Locations**

These labels are in the locations shown. They warn you of potential hazards that can cause serious injury or death. Read these labels carefully.

If a label comes off or becomes hard to read, contact a dealer for a replacement.

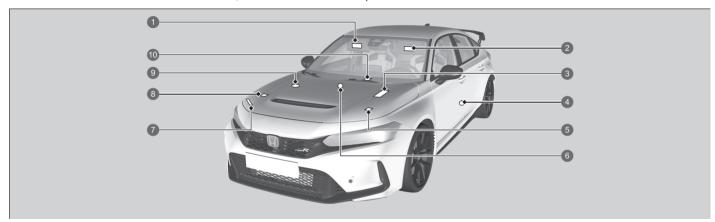

- Protecting Child Passenger (Left-hand drive type) 
   P. 70
- ② Protecting Child Passenger (Right-hand drive type) ➡ P. 70
- Battery
- 4 Child Safety (Right-hand drive type) → P. 71
- 6 Pop-up Hood ₹ P. 67
- 6 Child Safety (Left-hand drive type) ≥ P. 71
- Front Bulkhead Cover 
   P. 540
- 8 Air Conditioner\* 

  P. 577
- Reserve Tank Cap 
   P. 547
- Wireless Charger 
   P. 220
- \* Not available on all models

# **Instrument Panel**

This chapter describes the buttons, indicators, and gauges that are used while driving.

<b>ndicators</b> 98
Driver Information Interface Warning and
Information Messages116
Gauges and Driver Information Interface 128
Gauges128
Driver Information Interface Left Side Are
133
Driver Information Interface Right Side
Area 138

Indicators come on/blink depending on the condition of the vehicle. Messages may display on the driver information interface at the same time. Please take the appropriate action outlined in the message, such as contacting a dealer.

Display messages by setting **Warning message** to ON via the audio/information screen. You can also change the message language.

**■ Customized Features** P. 295

(I))*1	Parking Brake and Brake System Indicator (Red)	<b>→</b> P. 100
(1)*1	Parking Brake and Brake System Indicator (Amber)	<b>→</b> P. 102
BRAKE *1	Automatic Brake Hold System Indicator	<b>→</b> P. 102
(A) *1	Automatic Brake Hold Indicator	<b>→</b> P. 102
<b>1</b> €∑)*1	Malfunction Indicator Lamp	<b>→</b> P. 102
= + *1	Charging System Indicator	<b>→</b> P. 102

6	Gear Position Indicator	<b>→</b> P. 103
	Shift Up Indicator	<b>→</b> P. 103
₹	Shift Down Indicator	<b>→</b> P. 103
*	Seat Belt Reminder Indicator	<b>→</b> P. 103
	Low Fuel Indicator	<b>→</b> P. 104
(AB) *1	Anti-lock Brake System (ABS) Indicator	<b>→</b> P. 104
***	Supplemental Restraint System Indicator	<b>→</b> P. 104

*1	Vehicle Stability Assist (VSA) System Indicator	<b>→</b> P. 104
OFF	Vehicle Stability Assist (VSA) <b>OFF</b> Indicator	<b>→</b> P. 105
<b>⊕!</b> *¹	Electric Power Steering (EPS) System Indicator	<b>→</b> P. 105
<b>(!)</b> *1	Low Tyre Pressure/Deflation Warning System Indicator	<b>→</b> P. 106
<b>++</b>	Turn Signal and Hazard Warning Indicators	<b>→</b> P. 105
≥00€	Lights On Indicator	<b>→</b> P. 105
	High Beam Indicator	<b>→</b> P. 105

<sup>\*1:</sup> When you set the power mode to ON, these indicators come on to indicate that system checks are being performed. They go off a few seconds later or after the engine has started. If an indicator does not come on or turn off, there may be a malfunction in the corresponding system. To resolve the issue, follow the instructions in the owner's manual.

<b>■</b> A*1	Auto High-Beam Indicator	<b>→</b> P. 105
O‡	Rear Fog Light Indicator	<b>→</b> P. 106
SPORT	SPORT Mode Indicator	<b>→</b> P. 109
INDIVIDUAL	INDIVIDUAL Mode Indicator	<b>→</b> P. 109
COMFORT	COMFORT Mode Indicator	<b>→</b> P. 109
+/~	+R Mode Indicator	<b>→</b> P. 109
<b>i</b>	System Message Indicator	<b>→P</b> . 109
LIM	Adjustable Speed Limiter Indicator (White/Green)	<b>→</b> P. 110
PLIM	Intelligent Speed Limiter Indicator (White/Green)	<b>→</b> P. 110

Ā	Adaptive Cruise Control (ACC) Interval Indicator	<b>→</b> P. 111	
(A) OFF	Auto Idle Stop <b>OFF</b> Indicator	<b>→</b> P. 107	
(X)	Auto Idle Stop Suspend Indicator	<b>→</b> P. 108	
(A)*1	Auto Idle Stop System Indicator (Amber)	<b>→</b> P. 107	
(A)	Auto Idle Stop Indicator (Green)	<b>→</b> P. 108	
0	Security System Alarm Indicator	<b>→</b> P. 107	
0	Immobilizer System Indicator	<b>→</b> P. 107	
*1	Adaptive Cruise Control (ACC) Indicator (Amber)	<b>→</b> P. 110	
	Adaptive Cruise Control (ACC) Indicator (White/ Green)	<b>→</b> P. 111	

*1	Lane Keeping Assist System (LKAS) Indicator (Amber)	<b>→</b> P. 111
<b>*</b>	Lane Keeping Assist System (LKAS) Indicator (White/ Green)	→P. 111
*1 ***********************************	Collision Mitigation Braking System (CMBS) Indicator (Amber)	<b>→</b> P. 112
<b>*</b>	Collision Mitigation Braking System (CMBS) Indicator (Grey)	<b>→</b> P. 112
2 *1	Road Departure Mitigation Indicator (Amber)	<b>→</b> P. 112
2	Road Departure Mitigation Indicator (Grey)	<b>→</b> P. 112
B	Road Departure Mitigation System Steering Assist Auto OFF indicator	<b>→</b> P. 112
	Safety Support Indicator (Amber)	<b>→</b> P. 113
(1)	Safety Support Indicator (Green/Grey)	<b>→</b> P. 115

<sup>\*1:</sup> When you set the power mode to ON, these indicators come on to indicate that system checks are being performed. They go off a few seconds later or after the engine has started. If an indicator does not come on or turn off, there may be a malfunction in the corresponding system. To resolve the issue, follow the instructions in the owner's manual.

Indicator	Name	On/Blinking	Explanation
( <u>()</u> )	Parking Brake and Brake System Indicator (Red)	Comes on when the parking brake is applied, and goes off when it is released.	<ul> <li>The beeper sounds and the indicator comes on if you drive with the parking brake applied.</li> <li>Comes on for about 30 seconds when you apply the electric parking brake while the power mode is in ACCESSORY or VEHICLE OFF, then goes off.</li> <li>Stays on for about 30 seconds when you set the power mode to VEHICLE OFF while the electric parking brake is applied, then goes off.</li> </ul>
		Comes on when the brake fluid level is low.	• Comes on while driving - Make sure the parking brake is released.  Stop in a safe place and check the brake fluid level.  ■ What to do when the indicator comes on while driving P. 625

Indicator	Name	On/Blinking	Explanation
(Red)	Parking Brake and Brake System Indicator (Red)	Comes on if there is a problem with the brake system.	<ul> <li>Comes on along with the ABS indicator - Have your vehicle checked by a dealer.</li> <li>▶ If the Brake System Indicator (Red) Comes On or Blinks P. 625</li> <li>Blinks and the Parking Brake and Brake System Indicator (amber) comes on at the same time - There is a problem with the electric parking brake system. The parking brake may not be set.</li> <li>Avoid using the parking brake and have your vehicle checked by a dealer immediately.</li> <li>▶ If the Brake System Indicator (Red) Comes On or Blinks at the Same Time When the Brake System Indicator (Amber) Comes On P. 627</li> </ul>

Indicator	Name	On/Blinking	Explanation
BRAKE HOLD	Automatic Brake Hold System Indicator	<ul> <li>Comes on when the automatic brake hold system is on.</li> </ul>	<b>▶ Automatic Brake Hold</b> P. 494
	Automatic Brake Hold Indicator	<ul> <li>Comes on when the automatic brake hold is activated.</li> </ul>	<b>▶</b> Automatic Brake Hold P. 494
(Amber)	Parking Brake and Brake System Indicator (Amber)	<ul> <li>Comes on if there is a problem with a system related to braking other than the conventional brake system.</li> </ul>	<ul> <li>Comes on while driving - Have your vehicle checked by a dealer.</li> <li>With this indicator on, your vehicle still has normal braking ability.</li> </ul>
		<ul> <li>Comes on if there is a problem with the electric parking brake system and/or the automatic brake hold system.</li> </ul>	• Stays on constantly - Avoid using the parking brake and have your vehicle checked by a dealer immediately.
<b>1</b>	Malfunction Indicator Lamp	<ul> <li>Comes on if there is a problem with the emissions control systems.</li> <li>Blinks when a misfire in the engine's cylinders is detected.</li> </ul>	<b>☑</b> If the Malfunction Indicator Lamp Comes On or Blinks P. 624
= +	Charging System Indicator	<ul> <li>Comes on when there is a problem with the charging system.</li> </ul>	<ul> <li>Stop in a safe place and contact a dealer immediately.</li> <li>☑ Checking the Battery P. 569</li> <li>☑ If the Charging System Indicator Comes On P. 624</li> </ul>

Indicator	Name	On/Blinking	Explanation
6	Gear Position Indicator	• Indicates 1st to 6th gear position and N.	<ul> <li>If you shift gears very slowly, a different gear position may be displayed for a moment.</li> <li>➡ Shifting P. 382</li> <li>When the power mode is turned on, N is not displayed until it is shifted into R or 1st to 6th gear position.</li> <li>1st to 6th gear positions are not displayed when the vehicle is stopped.</li> <li>The display can be turned ON/OFF in customized features in the audio/information screen.</li> <li>➡ Customized Features P. 295</li> </ul>
<b>≜</b>	Shift Up Indicator	• Comes on when shifting up is recommended.	Shift Up/Down Indicators P. 384
₹	Shift Down Indicator	<ul> <li>Comes on when shifting down is recommended.</li> </ul>	Shift Up/Down Indicators P. 384
	Seat Belt Reminder Indicator	<ul> <li>Comes on if you are not wearing a seat belt when you set the power mode to ON.</li> <li>If the front passenger is not wearing a seat belt, the indicator comes on a few seconds later.</li> <li>Comes on for a while when the rear seat belt is unfastened while the power mode in ON.</li> <li>Blinks while driving if you and/or any passenger has not fastened a seat belt. The beeper sounds and the indicator blinks at regular intervals.</li> </ul>	<ul> <li>The beeper stops and the indicator goes off when you and the passengers fasten their seat belts.</li> <li>Stays on after you and/or the passengers have fastened the seat belt(s) - A detection error may have occurred in the sensor. Have your vehicle checked by a dealer.</li> <li>Seat Belt Reminder P. 42</li> </ul>

Indicator	Name	On/Blinking	Explanation
	Low Fuel Indicator	• Comes on when the fuel reserve is running low (approximately 7.0 Litres/1.54 Imp gal left).	• Comes on - Refuel your vehicle as soon as possible.
		• Blinks if there is a problem with the fuel gauge.	Have your vehicle checked by a dealer.
(ABS)	Anti-lock Brake System ( <b>ABS</b> ) Indicator	• Comes on if there is a problem with the ABS.	• Stays on constantly - Have your vehicle checked by a dealer. With this indicator on, your vehicle still has normal braking ability but no anti-lock function.  ■ Anti-lock Brake System (ABS) P. 498
	Supplemental Restraint System Indicator	<ul> <li>Comes on if a problem with any of the following is detected:</li> <li>Supplemental Restraint System</li> <li>Side airbag system</li> <li>Side curtain airbag system</li> <li>Seat belt tensioner</li> </ul>	Stays on constantly - Have your vehicle checked by a dealer.
<b>A</b>	Vehicle Stability Assist (VSA) System Indicator	• Blinks when VSA is active.	_
		<ul> <li>Comes on if there is a problem with the VSA system, brake assist system, hill start assist system, or agile handling assist.</li> </ul>	• Stays on constantly - Have your vehicle checked by a dealer.  ▶ Vehicle Stability Assist (VSA) System P. 413  ▶ Hill start assist system P. 379
		<ul> <li>Comes on if the VSA system is deactivated temporarily after the battery has been disconnected, then re-connected.</li> </ul>	• Drive a short distance at more than 20 km/h (12 mph). The indicator should go off. If it does not, have your vehicle checked by a dealer.

Indicator	Name	On/Blinking	Explanation
OFF	Vehicle Stability Assist (VSA) <b>OFF</b> Indicator	• Comes on when you partially disable VSA.	▶ VSA On and Off P. 414
		• Comes on when you press and hold the (XSA <b>OFF</b> ) button while <b>+R</b> mode is selected.	<b>₩hen in +R Drive mode</b> P. 415
<b>⊕!</b>	Electric Power Steering (EPS) System Indicator	Comes on if there is a problem with the EPS system.	<ul> <li>Stays on constantly - Have your vehicle checked by a dealer.</li> <li>Do not drive displays on the driver information interface - Immediately stop in a safe place and contact a dealer.</li> <li>☑ If the Electric Power Steering (EPS) System Indicator Comes On P. 626</li> </ul>
<b>++</b>	Turn Signal and Hazard Warning Indicators	<ul> <li>Blinks when you operate the turn signal lever.</li> <li>Blinks along with all turn signals when you press the hazard warning button.</li> </ul>	<ul> <li>Does not blink or blinks rapidly</li> <li>Replacing Light Bulbs P. 552</li> </ul>
		Blinks along with all turn signals when you depress the brake pedal while the high speed driving.	<b>Emergency Stop Signal</b> P. 500
≥0 0∈	Lights On Indicator	• Comes on when the position, tail, and other external lights are on.	<b>▶ Lights</b> P. 186
	High Beam Indicator	• Comes on when the high beam headlights are on.	_
<b>≣</b> A	Auto High- Beam Indicator	• Comes on when all the operating conditions of the auto high-beam are met.	<b>▶ Auto High-Beam</b> P. 191

Indicator	Name	On/Blinking	Explanation
<b>()</b> ‡	Rear Fog Light Indicator	Comes on when the rear fog light is on.	Rear Fog light P. 190
(!)	Low Tyre Pressure/ Deflation Warning System Indicator	<ul> <li>May come on briefly if the power mode is set to ON and the vehicle is not moved within 45 seconds, to indicate the initialise process is not yet complete.</li> <li>Comes on and stays on when: <ul> <li>One or more tyres' pressures are determined to be significantly low.</li> <li>The system has not been initialised.</li> </ul> </li> </ul>	<ul> <li>Comes on while driving - Stop in a safe place, check tyre pressures, and inflate the tyre(s) if necessary.</li> <li>Stays on after the tyres are inflated to the recommended pressures - The system needs to be initialised.</li> <li>Deflation Warning System Calibration P. 420</li> </ul>
		Blinks for about one minute, and then stays on if there is a problem with the deflation warning system, or when a compact spare tyre is temporarily installed.	• Blinks and remains on - Have your vehicle checked by a dealer. If the vehicle is fitted with a compact spare tyre, get your regular tyre repaired or replaced and put back on your vehicle as soon as you can.
		• Comes on if the deflation warning system is deactivated temporarily after the battery has been disconnected, then reconnected.	• Drive a short distance at more than 20 km/h (12 mph). The indicator should go off. If it does not, have your vehicle checked by a dealer.

Indicator	Name	On/Blinking	Explanation
Indicator  O	Immobilizer System Indicator	Blinks if the immobilizer system cannot recognise the key information.	<ul> <li>Blinks - You cannot start the engine. Set the power mode to VEHICLE OFF, then select the ON mode again.</li> <li>Right-hand drive type</li> <li>Depress and hold the brake pedal before setting the power mode to ON.</li> <li>All models</li> <li>Repeatedly blinks - The system may be malfunctioning. Have your vehicle checked by a dealer.</li> <li>Do not attempt to alter this system or add other devices to it. Electrical problems can occur.</li> </ul>
Indicator	Security System Alarm Indicator	Blinks when the security system alarm has been set.	<b>▶ Security System Alarm</b> P. 175
(A) OFF	Auto Idle Stop <b>OFF</b> Indicator	Comes on when the Auto Idle Stop system has been turned off by the Auto Idle Stop <b>OFF</b> button.	<b>▶ Auto Idle Stop System ON/OFF</b> P. 388
(A)	Auto Idle Stop System Indicator (Amber)	Blinks if there is a problem with the Auto Idle Stop system.	• Blinks - Have your vehicle checked by a dealer.

Indicator	Name	On/Blinking	Explanation
	Auto Idle Stop Indicator (Green)	• Comes on when Auto Idle Stop is in operation. The engine automatically shuts off.	<b>▶ Auto Idle Stop</b> P. 386
(A)		<ul> <li>Blinks when the ambient conditions may cause the windows to fog up.</li> <li>Blinks when the ambient conditions may become different from the climate control settings you have selected.</li> <li>Blinks when the (windscreen demister) button is pressed.</li> </ul>	<ul> <li>Depress the clutch pedal. The engine automatically restarts.</li> <li>▶ Auto Idle Stop P. 386</li> </ul>
	Auto Idle Stop Suspend Indicator	• Comes on while Auto Idle Stop is temporarily suspended in the following situations.	_
		- System charging is prioritised	
		- Climate control system is prioritised	<b>▶ Auto Idle Stop</b> P. 386
		- Engine coolant temperature is not in operating range	
		- +R mode is selected	<ul><li>Auto Idle Stop P. 386</li><li>Drive Mode Switch P. 393</li></ul>
		<ul><li>The battery temperature is too low.</li><li>Auto Idle Stop does not activate for some reason.</li></ul>	<b>▶ Auto Idle Stop</b> P. 386
		_	• If you press and hold the Auto Idle Stop <b>OFF</b> button, you can select whether to display the status messages or not.

Indicator	Name	On/Blinking	Explanation
SPORT	SPORT Mode Indicator	• Comes on when you set the drive mode to <b>SPORT</b> .	Drive Mode Switch P. 393
INDIVIDUAL	INDIVIDUAL Mode Indicator	• Comes on when you set the drive mode to <b>INDIVIDUAL</b> .	Drive Mode Switch P. 393
COMFORT	COMFORT Mode Indicator	• Comes on when you set the drive mode to <b>COMFORT</b> .	Drive Mode Switch P. 393
+/<	<b>+R</b> Mode Indicator	• Comes on when you set the drive mode to <b>+R</b> .	<b>Drive Mode Switch</b> P. 393
$(\mathbf{i})$	System Message Indicator	• Comes on along with a beep when a problem is detected. A system message on the driver information interface appears at the same time.	<ul> <li>While the indicator is on, roll the right selector wheel to see the message again.</li> <li>Switching the Display P. 138</li> <li>Refer to the Indicators information in this chapter when a system message appears on the driver information interface. Respond to the message accordingly.</li> <li>The driver information interface will not return to the normal screen unless the warning is cancelled, or the right selector wheel is rolled.</li> </ul>

Indicator	Name	On/Blinking	Explanation
LIM	Adjustable Speed Limiter Indicator (White/Green)	<ul> <li>Lights up in white when you press the button.</li> <li>If a different indicator comes on, subsequently press the LIM button.</li> <li>Lights up in green when the adjustable speed limiter is set.</li> </ul>	Adjustable Speed Limiter P. 400
<b>YLM</b>	Intelligent Speed Limiter Indicator (White/Green)	<ul> <li>Lights up in white when you press the button.         If a different indicator comes on, subsequently press the LIM button.         </li> <li>Lights up in green when you press the RES/+/SET/- switch up or down.</li> </ul>	<b>▶ Intelligent Speed Limiter</b> P. 406
R	Adaptive Cruise Control (ACC) Indicator (Amber)	• Comes on if there is a problem with ACC.	• Comes on while driving - Have your vehicle checked by a dealer.
		• Comes on if the ACC is deactivated temporarily after the battery has been disconnected, then re-connected.	• Drive a short distance at more than 20 km/h (12 mph). The indicator should go off. If it does not, have your vehicle checked by a dealer.
		<ul> <li>Indicator may come on temporarily when the maximum permissible weight is exceeded.</li> <li>ACC has been automatically cancelled.</li> </ul>	<ul> <li>Make sure the total load is within the maximum permissible weight.</li> <li>         ∑ Load Limit P. 375     </li> <li>Stays on constantly - Have your vehicle checked by a dealer.</li> </ul>

Indicator	Name	On/Blinking	Explanation
R	Adaptive Cruise Control (ACC) Indicator (White/Green)	<ul> <li>Lights up in white when you press the button.         If a different indicator comes on, subsequently press the LIM button.         </li> <li>Lights up in green when you press the RES/+/SET/- switch up or down.</li> </ul>	<b>▶ Adaptive Cruise Control (ACC)</b> P. 444
	Lane Keeping Assist System (LKAS) Indicator (Amber)	• Comes on if there is a problem with the LKAS.	• <b>Stays on constantly</b> - Have your vehicle checked by a dealer.
<b>(a)</b>		Indicator may come on temporarily when the maximum permissible weight is exceeded.	<ul> <li>Make sure the total load is within the maximum permissible weight.</li> <li>Load Limit P. 375</li> <li>Stays on constantly - Have your vehicle checked by a dealer.</li> </ul>
<b>6</b>	Lane Keeping Assist System (LKAS) Indicator (White/Green)	<ul> <li>Lights up in white when you press the LKAS button.</li> <li>Lights up in green when the LKAS is in operation.</li> </ul>	<b>▶ Lane Keeping Assist System (LKAS)</b> P. 462
Ā	Adaptive Cruise Control (ACC) Interval Indicator	Comes on when Adaptive Cruise Control (ACC) indicator comes on.	<ul> <li>Each time you press the interval button, the following interval (the interval behind a vehicle detected ahead of you) setting cycles through Extra long, Long, Middle, and Short following intervals.</li> <li>To Set or Change Following-interval P. 457</li> </ul>

Indicator	Name	On/Blinking	Explanation
<b>≯</b>	Collision Mitigation Braking System (CMBS) Indicator (Amber)	<ul> <li>Comes on if there is a problem with the CMBS or it cannot be used temporarily due to issues such as dirt on the windscreen near the camera.</li> </ul>	<ul> <li>The Safety Support Indicator (Amber) comes on at the same time.</li> <li>Safety Support Indicator (Amber) P. 113</li> </ul>
***	Collision Mitigation Braking System (CMBS) Indicator (Grey)	Comes on when the CMBS is off.	<b>Safety Support</b> P. 153
	Road Departure Mitigation Indicator (Amber)	• Comes on if there is a problem with the Road Departure Mitigation System or it cannot be used temporarily due to issues such as dirt on the windscreen near the camera.	<ul> <li>The Safety Support Indicator (Amber) comes on at the same time.</li> <li>Safety Support Indicator (Amber) P. 113</li> </ul>
	Road Departure Mitigation Indicator (Grey)	Comes on when the Road Departure Mitigation System is off.	<b>Safety Support</b> P. 153
	Road Departure Mitigation System Steering Assist Auto OFF indicator	<ul> <li>Comes on when the Road Departure Mitigation System steering assist is automatically turned off.</li> </ul>	<b>₽ Road Departure Mitigation System</b> P. 474

Indicator	Name	On/Blinking	Explanation
	Safety Support Indicator (Amber)	<ul> <li>Comes on if there is a problem with Road Departure Mitigation system, CMBS or blind spot information system*.</li> </ul>	• Stays on constantly - Have your vehicle checked by a dealer.
(2)		Indicator may come on temporarily when the maximum permissible weight is exceeded.	<ul> <li>Make sure the total load is within the maximum permissible weight.</li> <li>➡ Load Limit P. 375</li> <li>Stays on constantly - Have your vehicle checked by a dealer.</li> </ul>
		<ul> <li>Comes on if the Road Departure Mitigation system and CMBS are deactivated temporarily after the battery has been disconnected and then re-connected.</li> </ul>	Drive a short distance at more than 20 km/h (12 mph). The indicator should go off. If it does not, have your vehicle checked by a dealer.
		Comes on when the Road Departure Mitigation system and/or CMBS shuts itself off.	<ul> <li>Stays on - The temperature inside the camera is too high.</li> <li>Use the climate control system to cool down the camera.</li> <li>The system activates when the temperature inside the camera cools down.</li> <li>Front Wide View Camera P. 489</li> </ul>

Indicator	Name	On/Blinking	Explanation
<b>8</b>	Safety Support Indicator (Amber)	Comes on when the Road Departure Mitigation system and/or CMBS shuts itself off.	<ul> <li>Stays on - The area around the camera is blocked by dirt, mud, etc. Stop your vehicle in a safe place and wipe the debris off with a soft cloth.</li> <li>Have your vehicle checked by a dealer if the indicator and message are still displayed even after you have cleaned the area around the camera.</li> <li>Front Wide View Camera P. 489</li> <li>It may come on when the ambient conditions are dark, such as when driving in a tunnel, or at night, dawn, or dusk.</li> </ul>
		<ul> <li>Models with blind spot information system</li> <li>Comes on when mud, snow, or ice accumulates in the vicinity of the blind spot information system sensor.</li> <li>Comes on when the temperature of the blind spot information system sensor is high.</li> </ul>	<ul> <li>Comes on while driving - Something may be interfering with the blind spot information system sensor. Check the vicinity of the blind spot information system sensor and remove any obstacles.</li> <li>The system will return to normal when the temperature cools down.</li> <li>Blind Spot Information System* P. 422</li> </ul>

Indicator	Name	On/Blinking	Explanation
8	Safety Support Indicator (Green/Grey)	<ul> <li>Lights up in green when the Road Departure Mitigation system, CMBS and blind spot information system* are on.</li> <li>Lights up in green and grey when the Road Departure Mitigation system, CMBS or blind spot information system*, or any two of these systems are off.</li> <li>Lights up in grey when the Road Departure Mitigation system, CMBS, and blind spot information system* are off.</li> </ul>	<ul> <li>Road Departure Mitigation system On and Off P. 477</li> <li>Blind Spot Information System On and Off P. 425</li> <li>CMBS On and Off P. 436</li> </ul>

# **Driver Information Interface Warning and Information Messages**

The warning and information messages appear only on the driver information interface.

Roll the right selector wheel to see the message again with the system message indicator on.

### Icons

Since messages will not display on the driver information interface when Warning Message is set to OFF, you can check the messages below. Please take the appropriate action outlined in the message, such as contacting a dealer.

Red Icons P. 117

**Amber Icons** P. 119

**☑** Green Icons P. 123


Other Icons P. 124


Display messages by setting **Warning message** to ON via the audio/information screen. You can also change the message language.

**≧** Customized Features P. 295

### ■ Red Icons

lcon	Message
	Critical system failure detected. Stop driving when safe
STOP	Steering assist reduced. Stop driving when safe.
	Brake fluid low. Do not drive. Check fluid level.
	Parking brake engaged
(P)	Release parking brake
(EB)	Brake system problem. Brake performance may be reduced.
	Fasten seat belt
<b>P</b> Þ+B	Fasten passenger's seat belt

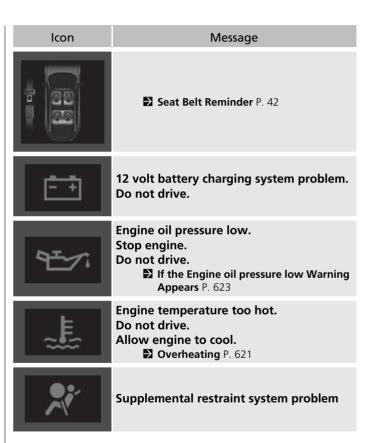

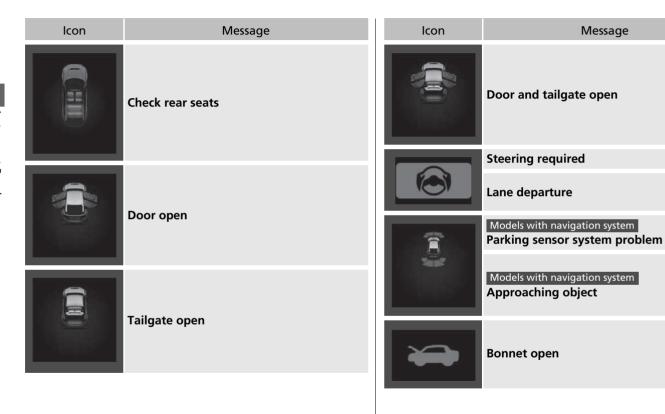

Message

# **■** Amber Icons


lcon	Message
台!	<ul> <li>➡ Adaptive Cruise Control (ACC) P. 444</li> <li>➡ Collision Mitigation Braking System (CMBS) P. 432</li> </ul>
	Steering required
	Lane departure
<b>*</b>	Outside temperature low. Road surface may be frozen.
<b>D</b> (5) 30 km/h	<b>₽ Speed Alarm</b> P. 144

lcon	Message
ركعترين	Emissions system problem. Power may be reduced.
الر	Emission system problem. Avoid strong acceleration and high speed.
(!)	Starter system problem.Engine may not restart.
	Engine oil level low. Check engine oil level.  ☑ If the Engine oil level low Warning Appears P. 629
₽ĵi	Fuel gauge system problem. Level not accurate.
	Fuel low


lcon	Message
(ABS)	Anti-lock brake system problem. Brake performance may be reduced.
(Vs)	Brake system problem. Brake performance may be reduced.
(BO)	Brake system problem. Do not depress Brake + Accelerator together.
(PS)	Brake system problem. Brake performance may be reduced.
(EP)	Electric parking brake system problem. Parking brake not available.
<b>1</b>	Vehicle stability assist system problem. Traction and handling may be reduced.





lcon	Message		
<b>E3!</b>	Pop-up hood system problem		
<b>⊕!</b>	Electric power steering system problem. Steering assist reduced.		
	Electric power steering system problem. No steering assist. Do not drive.		
	Driver attention level low. Take a rest		
AUTO	Automatic lighting control system problem. Manual controls available.		
	Headlight system problem. Headlight performance may be reduced.		

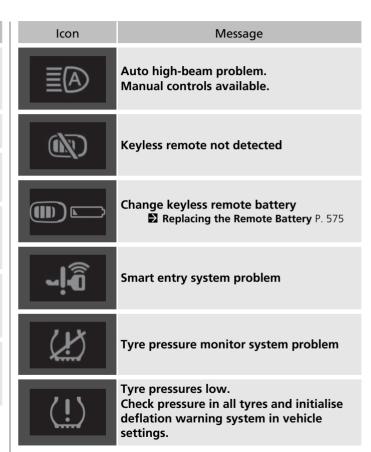

lcon	Message
	Adaptive cruise control system problem
\$\tag{\tag{\tag{\tag{\tag{\tag{\tag{	Collision mitigation braking system problem
	Lane keeping assist system problem
	Road departure mitigation system problem
B	Adaptive damper system problem
J. ← ♠	Service due soon <b>►</b> Service Reminder System* P. 524

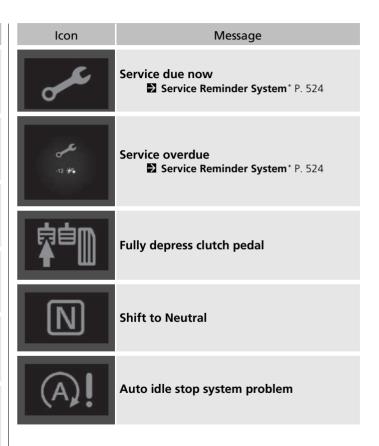


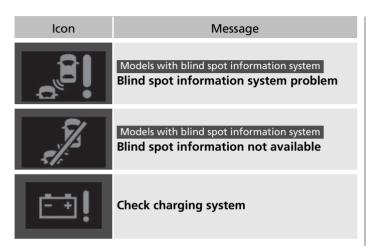

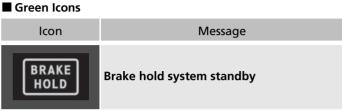


### **■** Other Icons

lcon	Message		
<b>**</b> \	Outside temperature low. Road surface may be frozen.		
	Cannot set cruise: Brake pedal is applied		
	Cannot set cruise: Clutch pedal is depressed		
	Cruise cancelled: Clutch pedal was depressed too long		
BRAKE HOLD	Brake hold system OFF		
►D+BRAKE HOLD	To enable brake hold: Seat belt + Push		

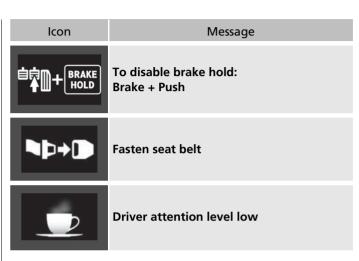

lcon	Message
<b>*</b> (%)	Cannot set cruise: Speed too high
	Cannot set cruise: Speed too low
	Cruise cancelled: Speed too high
	Cruise cancelled: Speed too low
	Cannot set cruise: System not available
	Cruise cancelled: System not available
	Cruise will cancel soon
<b>!</b>	Cannot set cruise: Too close to vehicle ahead
	Cruise cancelled: Too close to vehicle ahead
	Cruise cancelled: Loss of traction

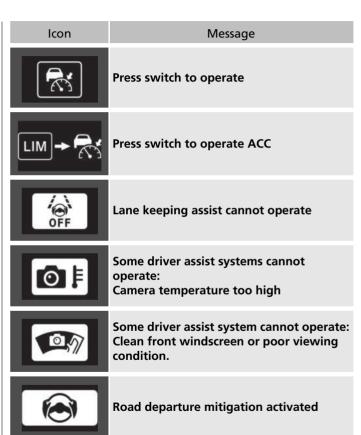

lcon	Message	lcon	Message
0	Some driver assist systems available		To start, touch start button with emblem side of remote  ☐ If the Keyless Remote Battery is Weak P. 616
<b>₩</b>	Right-hand Drive Type  To start engine: Fully depress Brake + Clutch + Push	→ () HOLD OFF	Pressing button again twice or holding will cause ignition OFF & power loss
<b>₽</b>	To start engine: Clutch + Push	白色の	Fully depress clutch pedal
	To continue to drive: Depress clutch pedal and push switch		
	To unlock wheel: Push + Turn	$\mathcal{A}$	Auto idle stop not available
			Auto idle stop interrupted: Engine restarted
	Accessory mode		
	Right-hand Drive Type  Fully release Clutch + Push		Auto idle stop not available: System warming up or charging

lcon	Message
(X) A/C	Auto idle stop not available: Adjust climate to enable
(A) L	Auto idle stop not available: Engine temperature out of range
	Auto idle stop not available: Switch drive mode to enable

# Gauges and Driver Information Interface

# Gauges

Gauges include the speedometer, fuel gauge, and other related indicators. They are displayed when the power mode is in ON.

# Speedometer

Displays your driving speed in km/h or mph.

# ■ Fuel Gauge

Displays the amount of fuel left in the fuel tank.

# ■ Tachometer

Shows the number of engine revolutions per minute.

#### Speedometer

You can set the speedometer and the displayed measurements to read in either km/h or mph.

- Speed/Distance Units P. 154
- **Customized Features** P. 295

### ≫Fuel Gauge

#### NOTICE

You should refuel when the reading approaches ①. Running out of fuel can cause the engine to misfire, damaging the catalytic converter.

The actual amount of remaining fuel may differ from the fuel gauge reading.

#### ∑Tachometer

The shift up alarm sounds when the tachometer reading approaches the red zone. You can turn the shift up alarm feature on and off.

Customized Features P. 295

# ■ Temperature Gauge

Displays the temperature of the engine coolant.

# Outside Temperature

Shows the outside temperature in Celsius.

If the outside temperature has been below 3°C at the time you set the power mode to ON, the **Outside temperature low** message appears on the driver information interface

# ■ Adjusting the outside temperature display

Adjust the temperature reading by up to  $\pm 3^{\circ}\text{C}$  if the temperature reading seems incorrect.

### ▼Temperature Gauge

#### NOTICE

Driving with the temperature gauge reading in the upper zone can cause serious engine damage. Pull safely to the side of the road and allow engine temperature to return to normal.

**⊇** Overheating P. 621

#### Outside Temperature

The temperature sensor is in the front bumper. Road heat and exhaust from another vehicle can affect the temperature reading when your vehicle speed is less than 30 km/h (19 mph).

It may take several minutes for the display to be updated after the temperature reading has stabilized.

You can adjust the temperature reading.

**⊇** Customized Features P. 295

# ■ Traffic Sign Recognition System

Shows certain detected traffic signs while driving.

The indicator blinks when the maximum speed of the traffic sign detected by the Traffic Sign Recognition System is exceeded.

**► Traffic Sign Recognition System** P. 482




### ■ Current Mode for ACC and the LKAS

Shows the current mode for ACC and the LKAS.

- **Adaptive Cruise Control (ACC)** P. 444
- **Lane Keeping Assist System (LKAS)** P. 462

### ∑Current Mode for ACC and the LKAS

If the gauge design is set to **Round** or **Bar**, when you set speed for ACC, a set speed mark will be displayed on the speedometer.

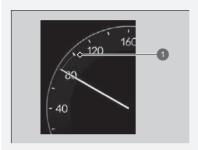

Set Speed

## ■ Rev Indicators

Light up from outside to centre according to engine speed.

# ■ Vehicle Information

When using the +R gauge, the following vehicle information can be displayed. 

▶ Honda LogR P. 339

- Water Temp.
- · Oil Temp.
- Oil Pressure
- Ext. Air Temp.
- Intake Air Temp.
- Boost Pressure
- Steering Angle
- Accel. Ped. Pos.
- Brake Pressure
- Clutch Ped. Pos.
- Yaw Rate
- Atmos. Pressure

### ■ Rev Indicators

You can turn the rev indicators on and off.

**⊇** Customized Features P. 295

#### >> Vehicle Information

Up to 6 items can be selected and displayed at once.

Honda LogR P. 339

You can set a limit for **Water Temp.** and **Oil Temp.**. When the limit is reached, the display will turn amber.

Honda LogR P. 339

When the ACC or LKAS are turned on, vehicle information is not displayed.

# **Driver Information Interface Left Side Area**

Shows the current mode for audio and phone information, etc.

**■ Audio Remote Controls** P. 244

**▶ Hands-Free Telephone System** P. 310

# Clock

Shows the clock.

#### >> Clock

You can adjust the time manually and change the clock display to show the 12 hour clock or 24 hour clock.

**S** Clock P 158

You can choose whether the clock is displayed on the driver information interface.

**Customize Display** P. 155

# Stopwatch

Measures the lap time, and displays the previously measured times and the fastest lap time.



### ■ Measuring LAP Time

- **1.** Change the display content on the left side area to **Stopwatch**.
  - Select the display content on the left side area P. 137
- **2.** Press the left selector wheel to display the stopwatch menu screen.
- **3.** Select **Lap Timer** and press the left selector wheel to display the lap time measurement screen.
- **4.** Press the left selector wheel to start measurement.
- **5.** Press the left selector wheel to stop measurement.
  - ➤ To measure the time per lap, roll the left selector wheel at the end of each lap.
  - ➤ To return to the stopwatch menu screen, press and hold the left selector wheel.

#### 

Be sure to use this measurement function only where and when it is safe to do so.

Lap time is displayed from 00:00.00 to 99:59.99.

A maximum of 20 lap times can be stored at a time.

When measuring lap time with Honda LogR, times are displayed on the driver information interface.

Honda LogR P. 339



# **■** Checking/Clearing history


To check or clear the history, select **History/ Reset** on the stopwatch menu screen and press the left selector wheel.

- To scroll through the lap times, roll the left selector wheel.
- ➤ To clear the history, press the left selector wheel on the stopwatch history screen while the lap time is not being measured, then select and press **Reset**.
- ➤ To return to the stopwatch menu screen, press and hold the left selector wheel.


# Customize Display

## ■ Arrange audio source on the left side area


You can choose which sources to display on the audio source screen.

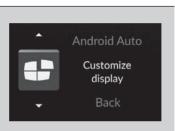

**1.** Roll the left selector wheel until **Customize display** is selected, then press the left selector wheel.

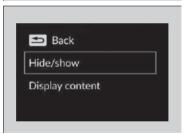

 Roll the left selector wheel to scroll to select Hide/show, then press the left selector wheel

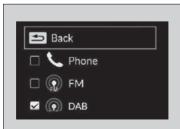


**3.** Roll the left selector wheel to scroll between audio sources, then press the left selector wheel to check or uncheck them.

### ○ Customize Display


When you customize settings, set the parking brake.

# ■ Select the display content on the left side area


You can change the display content on the left side area. Select **Audio & clock**, **Stopwatch**, or **OFF**.

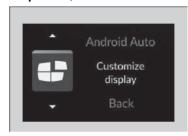

 Roll the left selector wheel until Customize display is selected, then press the left selector wheel.

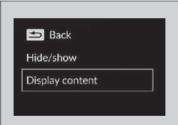

Roll the left selector wheel to scroll to select Display content, then press the left selector wheel.

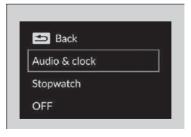

**3.** Roll the left selector wheel to scroll to select your desired content, then press the left selector wheel.

# **Driver Information Interface Right Side Area**

The driver information interface shows information such as the estimated travelable distance and fuel economy of the vehicle. It also displays messages such as warnings and other helpful information.

When a warning message displays, please check the message and contact a dealer and have the vehicle inspected if necessary. Please refer to the pages below if the **Engine oil pressure low**, **Engine temperature too hot** or **Engine oil level low** message is displayed.

**☑** If the Engine oil pressure low Warning Appears P. 623

Overheating P. 621

**☑** If the Engine oil level low Warning Appears P. 629


# **■** Switching the Display

Roll the right selector wheel to view different types of content.

### Switching the Display

You can add or delete the meter contents.

**∑** Customize Display P. 155

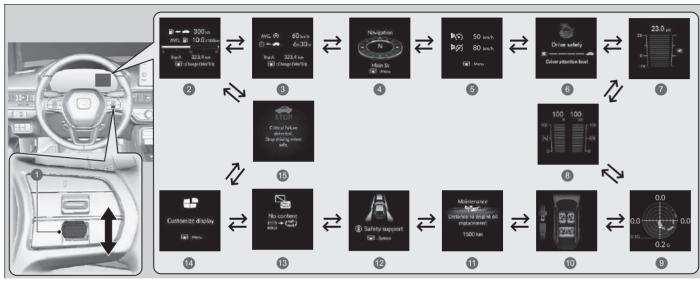


- Right Selector Wheel
- Range/Fuel/Odometer/Trip Meter P. 140
- 3 Speed/Time/Odometer/Trip Meter P. 142
- A Navigation/Compass P. 143
- Speed Alarm P. 144
- 6 Driver Attention Monitor P. 145
- Turbo Gauge P. 149
- 8 Accelerator Position/Braking Pressure Meter P. 150

- G-Meter P. 151
- Seat Belts P. 152
- Maintenance P. 152
- 2 Safety Support P. 153
- 13 No Content/Unit Change P. 154
- Customize Display P. 155
- **(B)** Warning Messages P. 156

# ■ Range/Fuel/Odometer/Trip Meter

Press the right selector wheel to switch trip meter A, trip meter B, and odometer.

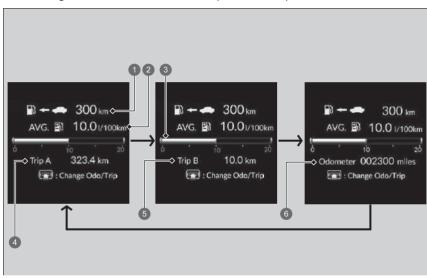

- Range
- 2 Average Fuel Economy
- Instant Fuel Economy
- 4 Trip Meter A
- **6** Trip Meter B
- **6** Odometer

#### **■** Odometer

Shows the total number of miles or kilometres that your vehicle has accumulated.

### **■** Trip meter

Shows the total number of kilometres or miles driven since the last reset. Meters A and B can be used to measure two separate trips.

### Resetting a trip meter

To reset the trip meter, display it, press and hold the right selector wheel and then select **Reset**.

▶ The trip meter is reset to 0.0.

### **■** Range

Shows the estimated distance you can travel on the remaining fuel. This estimated distance is based on the vehicle's current fuel economy.

## ■ Average fuel economy

Shows the estimated average fuel economy of each trip meter in I/100 km or mpg. The display is updated at set intervals. When a trip meter is reset, the average fuel economy is also reset.

# ■ Instant fuel economy

Shows the instant fuel economy as a bar graph in I/100 km or mpg.

### **≥** Range

The driving range displayed is only an estimate and may differ to the actual distance the vehicle can travel.


### ■ Average fuel economy

You can change when to reset the average fuel economy.

**Customized Features** P. 295

# ■ Speed/Time/Odometer/Trip Meter

Press the right selector wheel to switch trip meter A, trip meter B, and odometer.

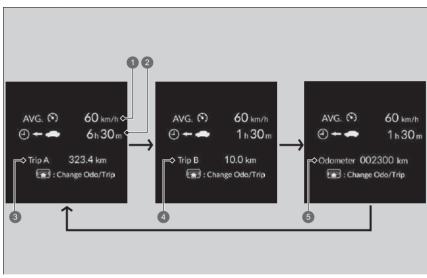

- Average Speed
- 2 Elapsed Time
- 3 Trip Meter A
- 4 Trip Meter B
- 6 Odometer

■ Odometer

Odometer P 141

■ Trip meter

Trip meter P. 141

#### ■ Average speed

Shows the average speed in km/h or mph since Trip A or Trip B was reset.

### **■** Elapsed time

Shows the time elapsed since Trip A or Trip B was reset.

# Navigation

#### ■ Compass

Shows the compass screen.

# **■** Turn-by-Turn Directions

When driving guidance is provided by the navigation system\*, Android Auto or Apple CarPlay, turn-by-turn directions to your destination appear.

Refer to the Navigation System Manual

**Android Auto™** P. 291

**■ Apple CarPlay** P. 287

#### ■ Average speed

You can change when to reset the average speed.

Customized Features P. 295

#### Elapsed time

You can change when to reset the elapsed time.

Customized Features P. 295

#### 

You can select whether to have the turn-by-turn display come on or not during the route guidance.

**Customized Features** P. 295

Turn-by-turn directions may not be available for all apps.

#### Models with navigation system


When the compass or turn-by-turn directions are displayed, you can control some navigation system functions on the driver information interface by pressing the right selector wheel.

Refer to the Navigation System Manual

# ■ Speed Alarm

Sets the speed alarm on and changes the speed alarm setting.

Press the right selector wheel to display the setting screen, then roll it, the speed alarm setting changes as follows:

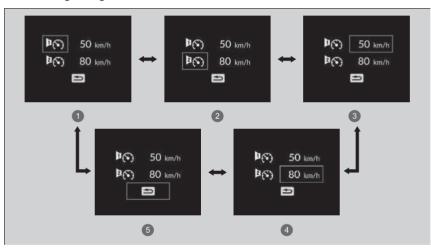


- Speed Alarm 1 On/Off\*1
- 2 Speed Alarm 2 On/Off\*1
- 3 Speed Alarm 1 Speed Setting (50 km/h\*1)
- 4 Speed Alarm 2 Speed Setting (80 km/h\*1)
- Back

<sup>\*1:</sup>Default Setting

### ■ Driver Attention Monitor

The Driver Attention Monitor analyses steering inputs to determine if the vehicle is being driven in a manner consistent with drowsy or inattentive driving. If it determines that the vehicle is being driven in such a manner, it will display the degree of the driver's attention on the driver information interface.

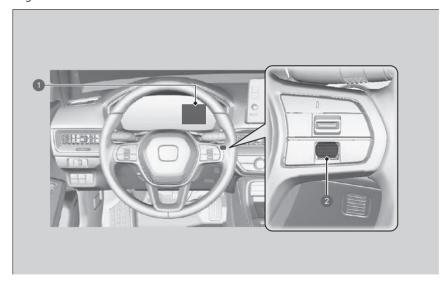

- Driver Information Interface
- Right Selector Wheel

#### Driver Attention Monitor

The Driver Attention Monitor cannot always detect if the driver is tired or inattentive.

Regardless of the system's feedback, if you are feeling tired, stop in a safe location and rest for as long as needed.

Continued 145



When you select Driver Attention Monitor on the driver information interface, bars on it light up in white to indicate the degree of the driver's attention.

Switching the Display P. 138





If two bars light up, the **Driver attention level low** message will appear.



If the number of bars drops to one, a beep will sound, the steering wheel will vibrate, and the coffee cup will turn to amber to warn the driver that he or she needs a break as his or her attention level is too low

If the coffee cup lights up in amber, stop in a safe location and rest for as long as needed. The amber coffee cup warning will disappear when the right selector wheel is rolled or when the system has determined that the driver is driving normally.

If the driver does not take a break and the monitor continues to detect that the driver is very tired, the coffee cup will light up in amber again after approximately 15 minutes, accompanied by a beep and steering wheel vibrations.

The warning does not appear when the travelling time is 30 minutes or less.

Continued 147

#### ■ The Driver Attention Monitor resets when:

- The engine is turned off.
- The driver unfastens the seat belt and opens the door while the vehicle is stopped.

#### ■ For the Driver Attention Monitor to function:

- The vehicle must be travelling above 40 km/h (25 mph).
- The electric power steering (EPS) system indicator must be off.

# ■ Depending on driving conditions or other factors, the Driver Attention Monitor may not function in the following circumstances:

- The steering assist function of the Lane Keeping Assist System (LKAS) is active.
   ▶ Lane Keeping Assist System (LKAS) P. 462
- The condition of the road is poor, e.g., the surface is unpaved or bumpy.
- It is windy.
- The driver is frequently operating the vehicle in an assertive manner such as changing lanes or accelerating.

#### **■** Customizing

You can change the Driver Attention Monitor settings. Select **Tactile and audible alert, Tactile alert only,** or **OFF**.

Customized Features P 295

#### ■ For the Driver Attention Monitor to function:


The bars on the driver information interface remain greyed out unless the Driver Attention Monitor is functioning.

# ■ Turbo Gauge

When the turbo is producing boost, this gauge indicates boost pressure is building.

Continued 149

## Accelerator Position/Braking Pressure Meter

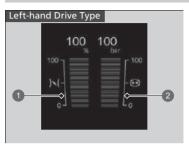


■ Accelerator Position Meter

Displays the accelerator position in degrees of %.

### **■** Braking Pressure Meter

Displays the brake pressure in bar\*1 or psi\*2 when the brake is applied.


- Accelerator Position Meter
- 2 Braking Pressure Meter

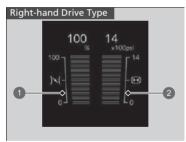

- Accelerator Position Meter
- 2 Braking Pressure Meter
- \*1: Left-hand Drive Type
- \*2: Right-hand Drive Type

## G-Meter

Displays the strength (G) and direction of the load that is applied to the vehicle during driving.

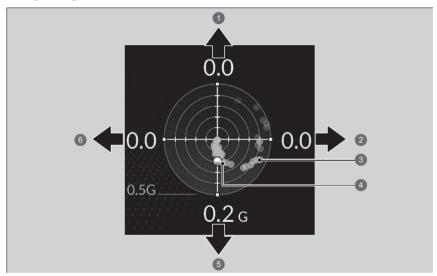

- When decelerated while moving forward/When accelerated while reversing
- When steering to the left
- 3 Lateral forces of the past three seconds (white)
- 4 Real-time lateral force (yellow)
- **5** When accelerated while moving forward/When decelerated while reversing
- 6 When steering to the right

#### ≫G-Meter

You can change the maximum displayed strength (G)

Honda LogR P. 339

Continued 151

# ■ Seat Belts

Occurs, under specified conditions, when seat belts are latched or unlatched.

Seat Belt Reminder P. 42

## ■ Maintenance

Show the service reminder system.

**Service Reminder System**\* P. 524

### Safety Support

Indicates the status of the Road Departure Mitigation system, CMBS and blind spot information system\*, such as On, Off, or Failure, by colour and letters.

The following colours indicate the status of any of the above mentioned systems:

- Green: The system is on.
- Grey: The system is off.
- Amber: There is a problem with the system.



- Area Info for CMBS
- 2 Area Info for Road Departure Mitigation System
- 3 Area Info for Bind Spot Information System\*
- 4 Road Departure Mitigation System Icon and Status Info
- **5** Bind Spot Information System Icon and Status Info\*
- 6 CMBS Icon and Status Info

#### **Safety Support**

If a system is indicated by the colour amber, have your vehicle checked by a dealer immediately.

To turn on or off each system, first press the right selector wheel to switch displays. From the next display you can select which system to turn on or off.

- **№** Road Departure Mitigation system On and Off P. 477
- EX CMBS On and Off P. 436
- **B** Blind Spot Information System On and Off P. 425

You can also confirm the status of each function by the colour of the indicator.

- Collision Mitigation Braking System (CMBS) Indicator (Amber) P. 112
- Collision Mitigation Braking System (CMBS) Indicator (Grey) P. 112
- Road Departure Mitigation Indicator (Amber) P. 112
- Road Departure Mitigation Indicator (Grey) P. 112
- Road Departure Mitigation System Steering Assist Auto OFF indicator P. 112
- Safety Support Indicator (Amber) P. 113
- Safety Support Indicator (Green/Grey)
  P. 115

# ■ Speed/Distance Units




Enables you to show another unit on the driver information interface and set the displayed measurements to read in either km and km/h or miles and mph.

Press and hold the right selector wheel when you select the **No content** screen on the driver information interface. Each time you do this, the unit will change from km and km/h to miles and mph or vice versa. After this, a confirmation screen will appear for a few seconds.


# Customize Display

#### ■ Arrange content on the right side area

You can choose which contents to display on the right side area.

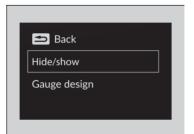

- **1.** Press the right selector wheel when you select the **Customize display** on the driver information interface.
- **2.** Roll the right selector wheel to scroll to select **Hide/show**, then press the right selector wheel.

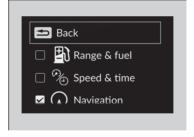

**3.** Roll the right selector wheel to scroll between contents, then press the right selector wheel to check or uncheck them.

#### 


Contents that are grey cannot be removed from the right side area.

When you customize settings, set the parking brake.


Continued 155

### **■** Change gauge design

You can change the gauge design to a round or bar design.

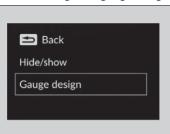

- **1.** Press the right selector wheel when you select the **Customize display** on the driver information interface.
- **2.** Roll the right selector wheel to scroll to select **Gauge design**, then press the right selector wheel.

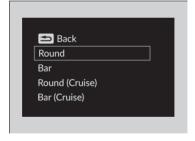

**3.** Roll the right selector wheel to scroll to select your desired settings, then press the right selector wheel.

#### ∑Change gauge design

When using the **Round (Cruise)** or **Bar (Cruise)** gauge design, a simplified display is used when ACC is in operation.

The +R gauge design cannot be changed.

# Warnings

You can check if there are any active warning messages.

Driver Information Interface Warning and Information Messages P. 116

#### Warnings Warnings

If there are multiple warnings or informations, you can roll the right selector wheel to see other warnings.

# **Controls**

This chapter explains how to operate the various controls necessary for driving.

Clock	158
Locking and Unlocking the Doors	
Key	. 159
Low Keyless Remote Signal Strength	161
Locking/Unlocking the Doors from t	he
Outside	. 162
Locking/Unlocking the Doors from t	he
Inside	
Childproof Door Locks	170
Hatch	171
Security System	. 174
Windows	181

### Operating the Switches Around the Steering Wheel

ENGINE START/STOP Button 183
Lights186
Auto High-Beam191
Wipers and Washers 194
Brightness Control 197
Rear Demister/Heated Door Mirror*
Button198
Adjusting the Steering Wheel 199
lirrors
Interior Rearview Mirror

Power Door Mirrors	20.
eats	20
nterior Convenience Items	
Interior Lights	21
Storage Items	21
Other Interior Convenience Items	21
leating System*	22
Climate Control System*	22

\* Not available on all models

# **Adjusting the Clock**



1 Clock

You can adjust the time manually or change the clock display to show the 12 hour clock or 24 hour clock on the by using the audio/ information screen.

**■ Customized Features** P. 295

### ■ Adjusting the Clock

The clock is automatically updated through the audio system.

The clock in the instrument panel also changes when the audio/information screen clock is adjusted.

# Locking and Unlocking the Doors

# Key

This vehicle comes with the following key:



Use the keys to start and stop the engine, and to lock and unlock all the doors, hatch, and fuel fill door.

#### 

All the keys have an immobilizer system. The immobilizer system helps to protect against vehicle theft.

#### **Immobilizer System** P. 174

Follow the advice below to prevent damage to the keys:


- Do not leave the keys in direct sunlight, or in locations with high temperature or high humidity.
- Do not drop the keys or set heavy objects on them.
- Keep the keys away from liquids, dust and sand.
- Do not take the keys apart except for replacing the battery.

If the circuits in the keys are damaged, the engine may not start, and the remote transmitter may not work.

If the keys do not work properly, have them inspected by a dealer.

Continued 159

# ■ Built-in Key

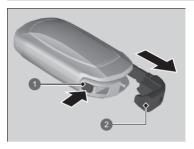

The built-in key can be used to unlock the doors when the keyless remote battery becomes weak and the power door unlock operation is disabled.

To remove the built-in key, push the release button and then pull out the key. To reinstall the built-in key, push the built-in key into the keyless remote until it clicks.

- Release Button
- 2 Built-in Key

# ■ Key Number Tag



Contains a number that you will need if you purchase a replacement key.

#### 

Keep the key number tag separate from the key in a safe place outside of your vehicle.

If you wish to purchase an additional key, contact a dealer

If you lose your key and you cannot start the engine, contact a dealer.

# **Low Keyless Remote Signal Strength**

The vehicle transmits radio waves to locate the keyless remote to start the engine, lock and unlock all the doors, hatch and fuel fill door.

In the following cases, to starting the engine, locking/unlocking the doors, hatch and fuel fill door may be inhibited or operation may be unstable:

- Strong radio waves are being transmitted by nearby equipment.
- You are carrying the keyless remote together with telecommunications equipment, laptop computers, mobile phones, or wireless devices.
- A metallic object is touching or covering the keyless remote.

#### ∑Low Keyless Remote Signal Strength


Communication between the keyless remote and the vehicle consumes the keyless remote's battery. Battery life is about two years, but this varies depending on regularity of use.

The battery is consumed whenever the keyless remote is receiving strong radio waves. Avoid placing it near electrical appliances such as televisions and personal computers.

It is possible to reduce battery consumption by turning off radio wave reception. When you hold down the lock and unlock buttons at the same time for approximately three seconds, the LED will blink twice and radio wave reception will turn off. If you press any button on the keyless remote once, it will begin receiving radio waves again.

# **Locking/Unlocking the Doors from the Outside**

# Using the Keyless Access System

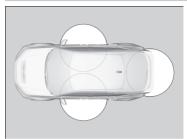

When you carry the keyless remote, you can lock/unlock the doors, fuel fill door and hatch. You can lock/unlock the doors, fuel fill door and hatch within a radius of about 80 cm (32 inches) of the outside door handle or hatch release button.

#### ∑Locking/Unlocking the Doors from the Outside

If the interior light switch is in the door activated position, the interior light comes on when you unlock the doors and hatch.

No doors opened: The light fades out after 30 seconds.

Doors and hatch relocked: The light goes off immediately.

Interior Lights P. 210


#### ∑Using the Keyless Access System

If you do not open a door or the hatch within 30 seconds of unlocking the vehicle with the keyless access system, the doors and hatch will automatically relock.

You can lock or unlock doors using the keyless access system only when the power mode is in VEHICLE OFF.

The keyless access system will not lock the vehicle when a door is open.

### ■ Locking the doors and hatch

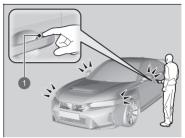

1 Door Lock Sensor



1 Lock Button

Touch the door lock sensor on the front door or press the lock button on the hatch.

Some exterior lights flash three times; all the doors and hatch lock; and the security system sets.

#### Right-hand Drive Type


▶ The super locking function is activated.

#### 

- Do not leave the keyless remote in the vehicle when you get out. Carry it with you.
- Even if you are not carrying the keyless remote, you can lock/unlock the doors and the hatch while someone else with the remote is within range.
- The door may be unlocked if the door handle is covered with water in heavy rain or in a car wash if the keyless remote is within range.
- If you grip a front door handle or touch a door lock sensor wearing gloves, the door sensor may be slow to respond or may not respond by unlocking or locking the doors.
- After locking the door, you have up to two seconds during which you can pull the door handle to confirm whether the door is locked. If you need to unlock the door immediately after locking it, wait at least two seconds before gripping the handle, otherwise the door will not unlock.
- The door may not open if you pull it immediately after gripping the door handle. Grip the handle again and confirm that the door is unlocked before pulling the handle.
- Even within the 80 cm (32 inches) radius, you may not be able to lock/unlock the doors and the hatch with the keyless remote if it is above or below the outside handle.
- The keyless access system may not operate if it is too close to the door and door glass.

Continued 163

# ■ Unlocking the doors and hatch

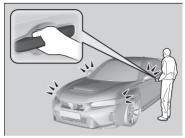



1 Hatch Release Button

Grab the driver's door handle:

- ➤ The driver's door and fuel fill door unlocks.
- Some exterior lights flash once.

Grab the front passenger's door handle:

- ► All doors and the hatch unlock.
- ► Some exterior lights flash once.

Press and hold the hatch release button.


- ► The hatch unlocks.
- ► Some exterior lights flash once.

### **≥**Using the Keyless Access System

The light flash and door unlock mode settings can be customized using the audio/information screen.

**■ Customized Features** P. 295

### Using the Remote Transmitter

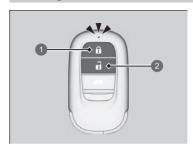

### ■ Locking the doors and hatch

Press the lock button.

➤ Some exterior lights flash three times, all the doors, hatch, and fuel fill door lock, and the security system sets.

#### Right-hand Drive Type

▶ The super locking function is activated.

- 1 Lock Button
- 2 Unlock Button



# ■ Unlocking the doors and hatch

Press the unlock button.

#### Once:

Some exterior lights flash once, and the driver's door and fuel fill door unlocks.

#### Twice:

► The remaining doors and hatch unlock.

#### Substitution States S

If you do not open a door or the hatch within 30 seconds of unlocking the vehicle with the remote transmitter, the doors and hatch will automatically relock.

You can lock or unlock doors using the remote transmitter only when the power mode is in VEHICLE OFF.

#### Right-hand Drive Type

You cannot lock any doors from the outside when the keyless remote is inside the vehicle, and the beeper sounds. If you want to lock a door while the remote is still in the vehicle, do any of the following four times:

- Press the lock button on the keyless remote.
- Turn the key in the cylinder to lock.
- Touch the door lock sensor on the door handle or press the lock button on the hatch.

The remote transmitter uses low-power signals, so the operating range may vary depending on the surroundings.

The remote will not lock the vehicle when a door is open.

If the distance at which the remote transmitter works varies, the battery is probably low.

If the LED does not come on when you press a button, the battery is dead.

Replacing the Remote Battery P. 575

# ■ Unlocking the Doors Using a Key

If the unlock button of the keyless remote does not work, use the key instead. The keyhole is on the back of the door handle.



Insert the key into the key cylinder from below the handle and then turn it.

#### Right-hand Drive Type

The super locking function is cancelled and then the driver's door is unlocked.

#### ∑Unlocking the Doors Using a Key

When unlocking, the driver's door unlocks first. Turning the key a second time within a few seconds does not unlock the remaining doors and the hatch.

If you unlock a door with the key while the security system is activated, the alarm will go off.

You can customize the door unlock mode setting.


**⊇** Customized Features P. 295

It can be locked without using the remote transmitter.

**■ Locking a Door Without Using a Key** P. 167

# ■ Locking a Door Without Using a Key

If you do not have the key on you, or if for some reason you cannot lock a door using the key, you can lock the door without it.

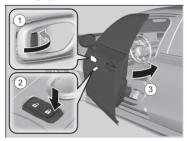

### ■ Locking the driver's door

Push the lock tab forward ① or push the master door lock switch in the lock direction ②, then pull and hold the outside door handle ③. Close the door, then release the handle.

## ■ Locking the passenger's doors

Push the lock tab forward and close the door.

### **■** Lockout prevention system

The doors and hatch cannot be locked when the keyless remote is inside the vehicle.

#### ■Locking a Door Without Using a Key

When you lock the driver's door, all the other doors and hatch lock at the same time.

Before locking a door, make sure that the key is not inside the vehicle.

# Locking/Unlocking the Doors from the Inside

# **Using the Lock Tab**



### ■ Locking a door

Push the lock tab forward.

## ■ Unlocking a door

Pull the lock tab rearward.

- To Lock
- 2 To Unlock

# **Unlocking Using the Front Door Inner Handle**



The door unlocks and opens in one motion

Pull the front door inner handle

#### **≥** Using the Lock Tab

When you lock the door using the lock tab on the driver's door, all the other doors and the hatch lock at the same time.

When you unlock the door using the lock tab on the driver's door, only the driver's door will unlock.

#### **≥** Unlocking Using the Front Door Inner Handle

The front door inner handles are designed to allow front seat occupants to open the door in one motion. However, this feature requires that front seat occupants never pull a front door inner handle while the vehicle is in motion

Children should always ride in a rear seat where childproof door locks are provided.

Childproof Door Locks P. 170

Inner Handle

# ■ Using the Master Door Lock Switch



Press the master door lock switch in as shown to lock or unlock all the doors, hatch and fuel fill door.

- To Lock
- 2 To Unlock

#### **∑**Using the Master Door Lock Switch

When you lock/unlock either of the front doors using the master door lock switch, all the other doors, hatch and fuel fill door lock/unlock at the same time.

# **Childproof Door Locks**

The childproof door locks prevent the rear doors from being opened from the inside regardless of the position of the lock tab.

# ■ Setting the Childproof Door Locks



Slide the lever in the rear door to the lock position, and close the door.

### ■ When opening the door

Open the door using the outside door handle.

#### ∑Childproof Door Locks

To open the door from the inside when the childproof door lock is on, put the lock tab in the unlock position, lower the rear window, put your hand out of the window, and pull the outside door handle.

1 Lock

2 Unlock

# **Precautions for Opening/Closing the Hatch**

Always make sure individuals and objects are clear of the hatch before opening or closing it.

- Open the hatch all the way.
  - ▶ If it is not fully opened, the hatch may begin to close under its own weight.
- Be careful when it is windy. The wind may cause the hatch to close.

Keep the hatch closed while driving to:

- Avoid possible damage.
- ▶ Prevent exhaust gas from leaking into the vehicle.
  - Carbon Monoxide Gas P. 95

# **AWARNING**

Anyone caught in the path of a hatch that is being opened or closed can be seriously injured.


Make sure that all people are clear of the hatch before opening or closing it.

Be careful not to hit your head on the hatch or to put your hands between the hatch and the luggage area when closing the hatch.

When you are storing or picking up luggage from the luggage area while the engine is idling, do not stand in front of the exhaust pipe. You may get burned.

Do not allow any passenger in the luggage space. They may get hurt during hard braking, a sudden acceleration, or a crash.


# **Opening/Closing the Hatch**

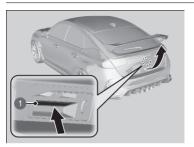

When all the doors are unlocked or you press the hatch unlock button on the remote transmitter, the hatch is unlocked. Press the hatch release button and lift open the hatch.

If you are carrying the keyless remote, you do not have to unlock the hatch before opening it.

Hatch Release Button

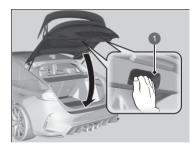

1 Inner Handle

To close the hatch, grab the inner handle, pull the hatch down, and push it closed from outside.


If you close the hatch when the driver's door is locked, the hatch locks automatically.

► Some exterior lights flash three times.

#### ∑Opening/Closing the Hatch

- Do not leave the keyless remote in the vehicle when you get out. Carry it with you.
- Even if you are not carrying the keyless remote, you can unlock the hatch while someone else with the remote is within range.
- Do not leave the keyless remote inside the luggage area and close the hatch. The beeper sounds and the hatch cannot be closed.

# ■ Using the Remote Transmitter

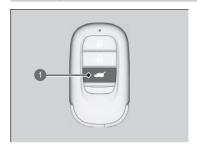

Press the hatch unlock button to unlock the hatch.

1 Hatch Unlock Button

#### **>** Using the Remote Transmitter

If you have unlocked and opened the hatch using the remote transmitter, when closing, the hatch locks automatically.

# **Security System**

# **Immobilizer System**

This system prevents a key that has not been pre-registered from starting the engine.

Pay attention to the following when pressing the **ENGINE START/STOP** button:

- Do not allow objects that emit strong radio waves near the ENGINE START/ STOP button.
- Make sure the key is not covered by or touching a metal object.
- Do not bring a key from another vehicle's immobilizer system near the ENGINE START/STOP button.

Do not put the key near magnetic items. Electronic device, such as televisions and audio systems emit strong magnetic fields. Note that even a key chain can become magnetic.

#### 

#### NOTICE

Leaving the key in the vehicle can result in theft or accidental movement of the vehicle.

Always take the key with you whenever you leave the vehicle unattended.

Do not alter the system or add other devices to it. Doing so may damage the system and make your vehicle inoperable.

If the system repeatedly does not recognise the coding of your key, contact a dealer. If you have lost your key and cannot start your vehicle, contact a dealer.

#### Right-hand Drive Type

Apply and hold the brake pedal before turning the vehicle on the first time after the battery has been disconnected.

# **Security System Alarm**

The security system alarm activates when the hatch, bonnet, or doors are forcibly opened. The alarm does not activate if the hatch or doors are opened with the remote transmitter or keyless access system.

#### ■ When the security system alarm activates

The horn sounds intermittently and some exterior lights flash.

#### ■ To deactivate the security system alarm

Unlock the vehicle using the remote transmitter or keyless access system, or turn the power mode to ON. The system, along with the horn and flashing lights, is deactivated

#### ■ Setting the security system alarm

The security system alarm automatically sets when the following conditions have been met:

- The power mode is set to VEHICLE OFF.
- The bonnet is closed.
- All doors and the hatch are locked from outside with the remote transmitter or keyless access system.

### ■ When the security system alarm sets

The security system alarm indicator in the instrument panel blinks and the blinking interval changes after about 15 seconds.

### ■ To cancel the security system alarm

The security system alarm is cancelled when the vehicle is unlocked using the remote transmitter or keyless access system, or when the power mode is set to ON. The security system alarm indicator goes off at the same time.

#### Security System Alarm

Do not alter the system or add other devices to it. Doing so may damage the system and make your vehicle inoperable.

The security system alarm will continue for approximately 5 minutes before the security system deactivates.

The system will go through ten 30-second cycles, during which the horn will sound and an emergency indicator will flash.

Depending on circumstances, the security system may continue operating for more than 5 minutes.

Do not set the security system alarm when someone is in the vehicle or a window is open. The system can accidentally activate when:

- Unlocking the door with the lock tab.
- Opening the bonnet with the bonnet release handle.

If the battery goes dead after you have set the security system alarm, the security alarm may go off once the battery is recharged or replaced. If this occurs, deactivate the security system alarm by unlocking a door using the remote transmitter or keyless access system.

If you unlock a door with the built-in key while the security system is activated, the alarm will go off.

#### Security System Alarm

#### Right-hand Drive Type


The system may accidentally activate such as when:

- The vehicle is parked in an automated garage.
- The vehicle is being washed with highly pressurized water or being put through an automated car wash.
- The vehicle is being transported by train, ferry or trailer.
- The vehicle is subjected to heavy rain or stormy weather.
- Ice is being removed from the vehicle. You can use ultrasonic/tilt sensor **OFF** button not to accidentally activate the security system alarm.
  - Ultrasonic Sensors\* P. 177

### **Ultrasonic Sensors\***

The ultrasonic sensors activate only when the security system alarm is set. If the sensors detect an intruder moving around inside or entering the interior of the vehicle through a window, the sensor will activate the alarm.

#### ■ To set the security system alarm without activating the ultrasonic sensors

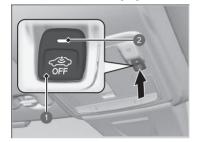

- Ultrasonic/Tilt Sensor OFF Button
- 2 Indicator

You can set the security system without activating the ultrasonic sensor.

To turn off the ultrasonic sensor system, set the power mode to VEHICLE OFF by pressing the **POWER** button and then press the ultrasonic/tilt sensor **OFF** button

► The indicator is on in red.

To turn it on again, press the ultrasonic sensor **OFF** button.

Ultrasonic sensors are turned on every time you set the security system alarm, even if you turned it off the last time

#### ■Ultrasonic Sensors \*

Whether the ultrasonic sensors have been activated or not, the security system can only be turned off by the remote transmitter or keyless access system, not the key.

It is possible to confirm whether the vehicle security system was activated without your knowledge. If the security system has been activated, the indicator will blink for 5 minutes after you unlock the door and disable the system.

If, however, you turn the power system on, the indicator will stop blinking after 5 seconds.

If the ultrasonic sensor is malfunctioning or there is another problem, the indicator will come on for 5 minutes after you unlock the door and disable the system.

If, however, you turn the power system on, the indicator will shut off.

The security system may accidentally activate by ultrasonic sensors such as when:

- Someone is in the vehicle
- A window is open
- Accessories or clothes are hanging in the vehicle

## Tilt Sensor\*

The tilt sensor activates only when the security system alarm is set. If someone raises the vehicle in an attempt to tow the vehicle or remove the wheels etc., the sensor will activate the alarm.

#### ■ To set the security system alarm without activating the tilt sensor



Ultrasonic/Tilt Sensor OFF Button

2 Indicator

You can set the security system without activating the tilt sensor.

To turn off the tilt sensor system, set the power mode to VEHICLE OFF by pressing the **POWER** button and then press the ultrasonic/tilt sensor **OFF** button.

▶ The indicator is on in red.

To turn it on again, press the ultrasonic/tilt sensor **OFF** button.

Tilt sensor is turned on every time you set the security system alarm, even if you turned it off the last time.

#### ∑Tilt Sensor\*

Whether the tilt sensor has been activated or not, the security system can only be turned off by the remote transmitter or keyless access system, not the key.

It is possible to confirm whether the vehicle security system was activated without your knowledge. If the security system has been activated, the indicator will blink for 5 minutes after you unlock the door and disable the system.

If, however, you turn the power system on, the indicator will stop blinking after 5 seconds.

If the tilt sensor is malfunctioning or there is another problem, the indicator will come on for 5 minutes after you unlock the door and disable the system. If, however, you turn the power system on, the indicator will shut off.

Do not set the tilt sensor when the vehicle is lifted or jacked up.

## **Super Locking\***

The super locking function disables the lock tabs on all doors for better theft protection.

Doors cannot be opened from the inside once super locking has been enabled.

# Locking the doors without super locking when using a master lock switch

- 1. Keep the driver's door closed.
- **2.** Open the passenger door or rear door and push either the driver or passenger side master lock door switch in the lock direction.
- **3.** Close the passenger door or rear door without touching the door handle.



- To Lock
- 2 Driver's Door Master Door Lock Switch
- Passenger's Door Master Door Lock Switch

#### Super Locking \*

## **AWARNING**

No one must be inside the vehicle with the super locking set. Persons locked in can get seriously sick or die from the heat built inside the vehicle if left in the sun.

Make sure there is no one inside the vehicle before setting the super locking.


If you unlock a door with the built-in key while the security system is activated, the alarm will go off.

Once the super locking function has been enabled, it will remain enabled even if you unlock the hatch.

# ■ Locking the doors without super locking when using the built-in key

The built-in key can be used to lock the doors without activating super locking even if you are not carrying the keyless remote.

- **1.** With the driver's door open, pull out the door handle and lock the door with the built-in key.
- **2.** Take out the built-in key and close the door while still pulling on the door handle.

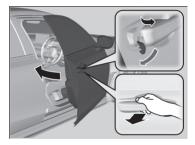


## **Opening/Closing the Power Windows**

The power windows can be opened and closed when the power mode is in ON, using the switches on the doors.

The driver's side switches can be used to open and close all the windows. The power window lock button on the driver's side must be switched off (not pushed in, indicator off) to open and close the windows from anywhere other than the driver's seat.

When the power window lock button is pushed in, the indicator comes on and you can only operate the driver's window. Turn the power window lock button on if a child is in the vehicle.

## Opening/Closing the Windows with Auto-Open/Close Function

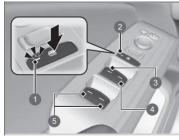

Indicator

2 Power Window Lock Button

3 Driver's Window Switch

Front Passenger's Window Switch

S Rear Passenger's Window Switch\*

#### ■ Manual operation

**To open:** Push the switch down lightly, and hold it until the desired position is reached. **To close:** Pull the switch up lightly, and hold it until the desired position is reached.

#### **■** Automatic operation

**To open:** Push the switch down firmly. **To close:** Pull the switch up firmly.

The window opens or closes completely. To stop the window at any time, push or pull the switch briefly.

**∑**Opening/Closing the Power Windows

## **AWARNING**

Closing a power window on someone's hands or fingers can cause serious injury.

Make sure your passengers are away from the windows before closing them.

**WARNING:** Always take the ignition key with you whenever you leave the vehicle alone or with other occupants.

#### Auto-open/close function on front windows

The power windows can be operated for up to 10 minutes after you set the power mode to VEHICLE OFF.

Opening either front door cancels this function.

#### Auto-open/close function on all windows

The power windows can be operated for up to 10 minutes after you set the power mode to VEHICLE OFF

Closing driver's door cancels this function.

## Opening/Closing Windows without Auto-Open/Close Function\*



**To open:** Push the switch down. **To close:** Pull the switch up.

Release the switch when the window reaches the desired position.

#### ∑Opening/Closing the Power Windows

#### Auto Reverse


If a power window senses resistance when closing automatically, it will stop closing and reverses direction.

The driver's window auto reverse function is disabled when you continuously pull up the switch.

The auto reverse function stops sensing when the window is almost closed to ensure that it fully closes.

- 1 Close
- 2 Open

## Opening/Closing the Windows with the Remote\*

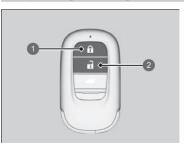

**To open:** Press the unlock button, and then within 10 seconds, press it again and hold it.

**To close:** Press the lock button, and then within 10 seconds, press it again and hold it.

If the windows stop midway, repeat the procedure.

#### ■Opening/Closing the Windows with the Remote\*

You can turn off or on to open the windows with the remote transmitter setting using the audio/information screen.


**Customized Features** P. 295

- 1 Lock Button
- Unlock Button

## Operating the Switches Around the Steering Wheel

### **ENGINE START/STOP Button**

## **■ Changing the Power Mode**

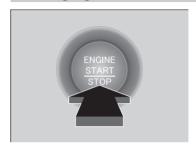

If you carry the keyless remote and press **ENGINE START/STOP** button without depressing the brake pedal, the power mode will change in this order:

VEHICLE OFF→ACCESSORY→ON→ VEHICLE OFF.

#### **VEHICLE OFF:**

Vehicle power is turned OFF.

#### ACCESSORY:

The audio system and some accessories can be used.

#### ON:

All accessories can be used.

#### **■**ENGINE START/STOP Button

If the keyless remote is set in a storage box or another place where its signal can be interrupted, the power mode may not change.

Continued 183

### Automatic Power Off

If you leave the vehicle for 30 to 60 minutes with the power mode in ACCESSORY, the vehicle automatically goes into the mode similar to VEHICLE OFF (LOCK) to avoid draining the battery.

When in this mode:

The steering wheel does not lock.

You cannot lock or unlock doors with the remote transmitter or the keyless access system.

Press the **ENGINE START/STOP** button twice to switch the mode to VEHICLE OFF (LOCK).

### **■** Power Mode Reminder

If you open the driver's door when the power mode is set to ACCESSORY, a warning beep sounds.

### Keyless Remote Reminder



When the power mode is set to any mode other than OFF and you remove the keyless remote from the vehicle and shut the door, an alarm will sound. If the alarm continues to sound, place the keyless remote in another location.

# ■ When the power mode is in ACCESSORY

The alarm will sound from outside the vehicle.

#### ■ When the power mode is in ON

An alarm will sound both inside and outside the vehicle. In addition, a warning indicator will appear on the instrument panel.

#### 

When the keyless remote is within the system's operational range, and the driver's door is closed, the warning function cancels.

If the keyless remote is taken out of the vehicle after the engine has been started, you can no longer change the **ENGINE START/STOP** button mode or restart the engine. Always make sure if the remote is in your vehicle when you operate the **ENGINE START/STOP** button.


Removing the keyless remote from the vehicle through a window does not activate the warning buzzer.

Do not put the keyless remote on the dashboard or in the glove box. It may cause the warning buzzer to go off. Under some other conditions that can prevent the vehicle from locating the remote, the warning buzzer may also go off even if the remote is within the system's operational range.

## Lights

## ■ Headlights/Position Lights

The lights will turn on automatically depending on the ambient brightness. They can also be switched on and off manually.

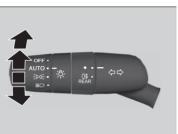

The exterior lights will switch on automatically when the light switch is set to **AUTO** while the power mode is in ON.

### ■ Manual operation Headlights/position lights:

Turn the light switch to **≣**○.

#### **Position lights:**

Turn the light switch to 3005.

### Headlight/position lights off:

Turn the light switch to **OFF** and release it while the parking brake is applied.

- ▶ The lights will come back on automatically when:
- The light switch is turned to **OFF** again and released.
- The parking brake is released.

#### ≥Lights

When the lights are on, the lights on indicator in the instrument panel will be on.

#### Lights On Indicator P. 105

The headlights are suitable for only left-hand or only right-hand drive. When driving on roads with different traffic rules, the headlight beam must be adjusted.

Adjusting Headlight Distribution P. 427

#### 

When the position lights are on, the tail and rear licence plate lights will also switch on.


When the light switch is turned to  $\boxed{300}$  or  $\boxed{100}$  and the power is turned to OFF, a beeper sounds when the driver's door is opened.

When the light switch is turned to **AUTO** and the ambient light levels are low, the headlights and position lights will switch on if you unlock a door. They will switch off when the door is locked.

Your vehicle is equipped with the automatic headlight adjusting system that automatically adjusts the vertical angle of the low beam headlights. If you find a significant change in the vertical angle of the headlights, there may be a problem with the system. Have your vehicle checked by a dealer.


#### 

The light sensor is in the location shown below. Do not cover the light sensor.

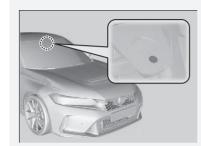

## ■ High Beams

When the headlights are on, push the lever forward. Pull the lever back to return to low beams.

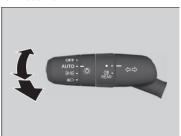


### **■** Flashing the high beams

Pull the lever back to switch on the high beams.

▶ Release the lever to return to low beams.

Continued 187

## ■ Turn Signals

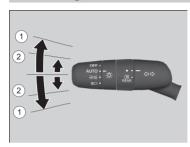

The turn signals can be used when the power mode is in ON.

### ■ ①: Turn signal

Push the lever up or down based on the direction you want to turn, and the turn signal will blink.

### ■ ②: One-touch turn signal

When you lightly push the lever up or down and release it, the turn signal will blink 3 times.

► If you lightly push the lever in the opposite direction while it is blinking, the blinking will stop.

#### ∑Turn Signals

The turn signal indicator on the instrument panel will blink when the external turn signal blinks.

**▶ Turn Signal and Hazard Warning Indicators**P. 105

### Headlight Integration with Wipers

The headlights automatically come on when the wipers are used several times within a certain number of intervals with the headlight switch in **AUTO**.

The headlights automatically go off a few minutes later if the wipers are stopped.

## Automatic Lighting Off Feature

The headlights, all other exterior lights, and the instrument panel lights turn off 15 seconds after you set the power mode to VEHICLE OFF, take the remote with you, and close the driver's door.

However, when the switch is in 505 the position lights remain on.

If you set the power mode to VEHICLE OFF with the headlight switch on, but do not open the door, the lights turn off after 10 minutes (3 minutes, if the switch is in the **AUTO** position).

The lights turn on again when you unlock or open the driver's door. If you unlock the door, but do not open it within 15 seconds, the lights go off. If you open the driver's door, you will hear a reminder chime alerting you that the lights are on.

#### 

This feature activates while the headlights are off in **AUTO**. The instrument panel brightness does not change when the headlights come on.

At dark ambient light levels, the automatic lighting control feature turns on the headlights, regardless of the number of wiper sweeps.

You can turn the headlight integration with wipers function on and off.


**■ Customized Features** P. 295

You can change the headlight auto off timer setting.

**■ Customized Features** P. 295

Continued 189

## ■ Rear Fog light

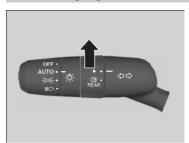

Can be used when the headlights are on.

■ To turn the rear fog light on Rotate the switch to ① The ① Indicator comes on.

## Daytime Running Lights

The daytime running lights come on when the following conditions have been met:

- The power mode is in ON.
- The headlight switch is **AUTO**.
- The ambient light is bright.

While the vehicle is stopped, if you turn the light switch to **OFF** and release it, the daytime running lights will turn off. When the parking brake is released, the lights will come on again. Otherwise, if the light switch is once more turned to **OFF**, the lights will come on again.

#### **≥** Daytime Running Lights

Daytime running lights and the position lights share the same light source.

Daytime running lights are brighter than the position lights.

The daytime running lights will not switch on if the position lights have been turned on manually.

## **Auto High-Beam**

The front wide view camera detects the light sources ahead of the vehicle such as the lights of a preceding or oncoming vehicle, or street lights. When you are driving at night, the system automatically switches the headlights between low beam and high beam depending on the situation.

## ■ How to Use the Auto High-Beam

#### ■ Activating the system

When all of the following conditions have been met, the auto high-beam indicator comes on and between the high beam and low beam switches automatically depending on the situation.



- The power mode is in ON. • The light switch is in **AUTO**.
- The lever is in the low beam position.
- The headlights have been automatically activated.
- It is dark outside the vehicle.

- Light Switch
- 2 Auto High-Beam Indicator

#### Muto High-Beam

The auto high-beam system does not always operate in every situation. This system is just for assisting the driver. Always observe your surroundings and switch the headlights between high beam and low beam manually if necessary.

The range and the distance at which the camera can recognise varies depending on conditions surrounding your vehicle.

Regarding the handling of the camera mounted to the inside of the windscreen, refer to the following.

Front Wide View Camera P 489

For the auto high-beam to work properly:

- Do not place an object that reflects light on the dashboard.
- Keep the windscreen around the camera clean. When cleaning the windscreen, be careful not to apply windscreen cleanser to the camera lens.
- Do not attach an object, sticker or film to the area around the camera
- Do not touch the camera lens.

If the camera receives a strong impact, or repairing of the area near the camera is required, consult a dealer.

How to turn off the Auto High-Beam System

You can change the auto high-beam system on and off

Customized Features P 295

If the auto high-beam indicator does not come on even when all the conditions have been met, carry out either of the procedures below and the indicator will come on.

- Pull the lever towards you and release it.
- Turn the light switch to Turn the light switch to **AUTO**.

### ■ Automatic switching between high-beam and low-beam

When the auto high-beam indicator comes on, the headlights switch between high beam and low beam based on the following conditions.

#### High beam

All of the following conditions must be met before the high beams turn on.

- Your vehicle speed is 40 km/h (25mph) or more.
- There are no preceding or oncoming vehicles with headlights or taillights turned on.
- There are few street lights on the road ahead.

#### Low beam

One of the following conditions must be met before the low beams turn on.



- Your vehicle speed is 24 km/h (15mph) or less.
- There is a preceding or oncoming vehicles with headlights or taillights turned on.
- There are many street lights on the road ahead.

#### ∑How to Use the Auto High-Beam

In the following cases, the auto high-beam system may not switch the headlights properly or the switching timing may be changed. In case of the automatic switching operation does not fit for your driving habits, please switch the headlights manually.

- The brightness of the lights from the preceding or oncoming vehicle is intense or poor.
- Visibility is poor due to the weather (rain, snow, fog, windscreen frost, etc.).
- Surrounding light sources, such as street lights, electric billboards and traffic lights are illuminating the road ahead.
- The brightness level of the road ahead constantly changes.
- The road is bumpy or has many curves.
- A vehicle suddenly appears in front of you, or a vehicle in front of you is not in the preceding or oncoming direction.
- Your vehicle is tilted with a heavy load in the rear.
- A traffic sign, mirror, or other reflective object ahead is reflecting strong light towards the vehicle.
- The oncoming vehicle frequently disappears under roadside trees or behind median barriers.
- The preceding or oncoming vehicle is a motorcycle, bicycle, mobility scooter, or other small vehicle.

The auto high-beam system keeps the headlight low beam when:

- Windscreen wipers are operating at a high speed.
- The camera has detected a dense fog.

### ■ Manual switching between high-beam and low-beam

If you want to manually switch the headlights between high beam and low beam, follow either of the procedures below. Note that when you do this, the auto high-beam indicator will turn off and the auto high-beam will be deactivated.

#### Using the lever:

Pull the lever towards you for flashing the high beams then release it.

- ➤ To reactivate the auto high-beam, follow either of the procedures below and the auto high-beam indicator will come on.
- Pull the lever towards you and release it.
- Turn the light switch to and then to **AUTO** when the lever is in the low beam position.


#### Using the light switch:

Turn the light switch to **EO**.

► To reactivate the auto high-beam, turn the light switch to **AUTO** when the lever is in the low beam position, the auto high-beam indicator will come on.

## **Wipers and Washers**

## Windscreen Wipers/Washers

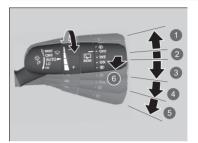

- MIST
- OFF
- AUTO
- 4 LO: Low speed wipe
- **6 HI**: High speed wipe
- Washer

The windscreen wipers and washers can be used when the power mode is in ON.

#### **■** MIST

The wipers run at high speed until you release the lever.

■ Wiper switch (OFF, AUTO, LO, HI) Move the lever up or down to change the wiper settings.

#### ■ Washer

Sprays while you pull the lever towards you. When you release the lever for more than one second, the spray stops, the wipers sweep two or three more times to clear the windscreen, then stop.

#### 

#### NOTICE

Do not use the wipers when the windscreen is dry. The windscreen will get scratched, or the rubber blades will get damaged.

#### NOTICE

Turn the washers off if no washer fluid comes out. The pump may get damaged.


The wiper motor may stop motor operation temporarily to prevent an overload. Wiper operation will return to normal within a few minutes.

#### NOTICE

In cold weather, the blades may freeze to the windscreen.

Operating the wipers in this condition may damage the wipers. Use the demister to warm the windscreen, then turn the wipers on.

### Automatic Intermittent Wipers

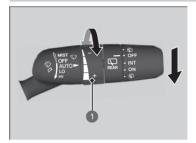

- Adjustment RingLow Sensitivity
  - +: High Sensitivity

When you push the lever down to **AUTO**, the windscreen wipers sweep once, and go into the automatic mode.

The wipers operate intermittently, at low speed, or at high speed and stop in accordance with the amount of rainfall the rainfall sensor detects.

#### ■ AUTO sensitivity adjustment

When the wiper function is set to **AUTO**, you can adjust the sensitivity of the rainfall sensor (using the adjustment ring) so that wipers will operate in accordance with your preference.

#### Wipers and Washers

If the wipers stop operating due to an obstacle such as the builtup of snow, park the vehicle in a safe place.

Rotate the wiper switch to **OFF**, and set the power mode to ACCESSORY or VEHICLE OFF, then remove the obstacle.

#### 

The rainfall sensor is in the location shown below.




#### NOTICE

**AUTO** should always be turned **OFF** before the following situations in order to prevent severe damage to the wiper system:

- Cleaning the windscreen
- Driving through a car wash
- No rain present

Continued 195

## ■ Rear Wiper/Washer\*

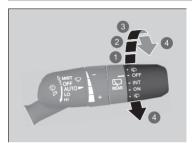

- OFF
- 2 INT (Intermittent)
- **3 ON** (Continuous wipe)
- Washer

The rear wipers and washers can be used when the power mode is in ON.

#### ■ Wiper switch (OFF, INT, ON)

Change the wiper switch setting according to the amount of rain.

## ■ Washer (😩)

Sprays while you rotate the switch to this position.


Hold it to activate the rear wiper and to spray the washer. Once released, the washer spray will stop and the rear wiper will return to its selected switch setting after a few sweeps.

### ■ Operating in reverse

When you put the transmission into  $\boxed{\textbf{R}}$  with the windscreen wipers activated, the rear wiper operates automatically as follows even if its switch is off.

Windscreen Wiper Operation	Rear Wiper Operation
Intermittent	Intermittent
Low speed wipe High speed wipe	Continuous

## **Brightness Control**

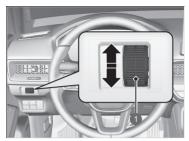

Control Dial

The brightness of the gauge is automatically adjusted depending on the ambient brightness.

- The brightness becomes darker when the ambient light is dark.
- The brightness becomes brighter when the ambient light is bright.


### ■ Adjusting the brightness manually

You can use the control dial to adjust instrument panel brightness.

Brighten: Turn the dial up.

Dim: Turn the dial down.


➤ You can change the setting even when the ambient lighting is bright, but the brightness of the gauge won't change.

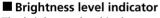

The brightness level is shown on the display while you are adjusting it.




Several seconds after you have adjusted the brightness, you will be returned to the previous screen.

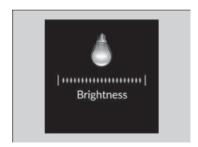


## Rear Demister/Heated Door Mirror\* Button

Press the rear demister and heated door mirror\* button to demist the rear window and mirrors when the power mode is in ON.

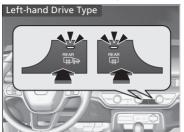

The rear demister and heated door mirrors\* automatically switch off after 10-30 minutes depending on the outside temperature. However, if the outside temperature is 0°C or below, they do not automatically switch off.

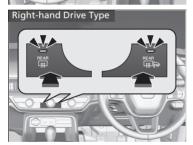

#### ■ Rear Demister/Heated Door Mirror\* Button


This system consumes a lot of power, so turn it off when the window has been demisted. Also, do not use the system for a long time while the engine is idling. This may weaken the battery, making it difficult to start the engine.

#### Models with heated door mirror

When the power mode is set to ON and the outside temperature is below 5°C, the heated door mirror may automatically activate for 10 minutes.

## **Adjusting the Steering Wheel**

The steering wheel height and distance from your body can be adjusted so that you can comfortably grip the steering wheel in an appropriate driving posture.

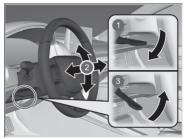

- Release
- Adjust
- 3 Lock

- **1.** While the vehicle is stopped, push the steering wheel adjustment lever down.
  - ► The steering wheel adjustment lever is under the steering column.
- **2.** Move the steering wheel up or down, and in or out.
  - ► Make sure you can see the instrument panel gauges and indicators.
- **3.** Pull the steering wheel adjustment lever up to lock the steering wheel in position.
  - ➤ After adjusting the position, make sure you have securely locked the steering wheel in place by trying to move it up, down, in, and out.

∑Adjusting the Steering Wheel

## **AWARNING**

Adjusting the steering wheel position while driving may cause you to lose control of the vehicle and be seriously injured in a crash.

Adjust the steering wheel only when the vehicle is stopped.

## **Interior Rearview Mirror**

Adjust the angle of the rearview mirror when you are sitting in the correct driving position.

## ■ Rearview Mirror with Day and Night Positions\*



Flip the tab to switch the position. The night position will help to reduce the glare from headlights behind you when driving after dark.

- Daytime Position
- 2 Night Position


#### 

Keep the inside and outside mirrors clean and adjusted for best visibility.

Adjust the mirrors before you start driving.

Front Seats P. 203

## Automatic Dimming Rearview Mirror\*

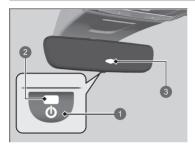

When you are driving after dark, the automatic dimming rearview mirror reduces the glare from headlights behind you. Press the AUTO button to turn this function on and off. When activated, the AUTO indicator comes on.

The auto dimming function cancels when the transmission is in  $\boxed{\mathbf{R}}$ .

- 1 AUTO Button
- 2 AUTO Indicator
- Sensor

\* Not available on all models

### **Power Door Mirrors**



- Selector Switch
- 2 Adjustment Switch
- S Folding Button\*

You can adjust the door mirrors when the power mode is in ON.

### ■ Mirror position adjustment

**L/R selector switch:** Select the left or right mirror. After adjusting the mirror, return the switch to the centre position.

**Mirror position adjustment switch:** Press the switch left, right, up, or down to move the mirror.

### ■ Folding door mirrors\*

Press the folding button to fold in and out the door mirrors.

## Automatic Folding Door Mirror Function\*

### ■ Folding in the door mirrors

Press the lock button on the keyless remote, or touch the door lock sensor on the front door.

► The mirrors start folding in automatically.

### **■** Folding out the door mirrors

Unlock all doors and the hatch using the remote transmitter or keyless access system.

► The mirrors start folding out automatically.

### ■ Automatic Folding Door Mirror Function\*

You cannot turn the automatic folding out automatically if they have been folded in using the folding button.

You can turn the automatic folding door mirror function on and off.

Customized Features P. 295

Door mirrors will not fold automatically when locking from inside the vehicle using lock tab or master door lock switch.

### **Front Seats**



Move back to allow sufficient space.

Adjust the driver's seat as far back as possible while allowing you to maintain full control of the vehicle. You should be able to sit upright, well back in the seat and be able to adequately press the pedals without leaning forward, and grip the steering wheel comfortably. The passenger's seat should be adjusted in a similar manner, so that it is as far back from the front airbag in the dashboard as possible.

#### Seats

Always make seat adjustments before driving.

≫Front Seats

## **AWARNING**


Sitting too close to a front airbag can result in serious injury or death if the front airbags inflate.

Always sit as far back from the front airbags as possible while maintaining control of the vehicle.

In addition to the seat adjustment, you can adjust the steering wheel up and down, in and out. Allow at least 25 cm (10 inches) between the centre of the steering wheel and the chest.

Continued 203

## ■ Adjusting the Seat Positions

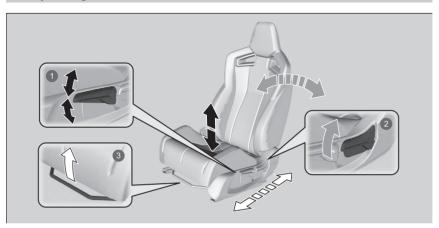

- Height Adjustment (Driver's side only)
  Pull up or push down the lever to raise or lower the seat.
- **2 Seat-back Angle Adjustment**Pull up the lever to change the angle.
- **3 Horizontal Position Adjustment**Pull up on the bar to move the seat, then release the bar.

#### ■ Adjusting the Seat Positions

Once a seat is adjusted correctly, rock it back and forth to make sure it is locked in position.

## Adjusting the Seat-Backs



Adjust the driver's seat-back to a comfortable, upright position, leaving ample space between your chest and the airbag cover in the centre of the steering wheel.

The front seat passenger should also adjust their seat-back to a comfortable, upright position.

Reclining a seat-back so that the shoulder part of the belt no longer rests against the occupant's chest reduces the protective capability of the belt. It also increases the chance of sliding under the belt in a crash and being seriously injured. The farther a seat-back is reclined, the greater the risk of injury.

■ Adjusting the Seat-Backs

## **AWARNING**

Reclining the seat-back too far can result in serious injury or death in a crash.

Adjust the seat-back to an upright position, and sit well back in the seat.

Do not put a cushion, or other object, between the seat-back and your back.

Doing so may interfere with proper seat belt or airbag operation.

If you cannot get far enough away from the steering wheel and still reach the controls, we recommend that you investigate whether some type of adaptive equipment may help.

## **Rear Seats**

## ■ Folding Down the Rear Seats

Separately fold down the left and right halves of the rear seat to make room for luggage.

Pull the release lever and fold down the seat-back.

- Release Lever
- Red Tab

**∑**Folding Down the Rear Seats

## **AWARNING**

Make sure the seat-backs are latched securely before driving.

The rear seat-back(s) can be folded down to accommodate bulkier items in the luggage area.

To lock a seat-back upright, push it backwards until it locks, so that the red tabs in the release lever go down.

When returning the seat-back to its original position, push it firmly back.

Make sure all items in the luggage area or items extending to the rear seats are properly secured. Loose items can fly forward if you have to brake hard.

The front seat(s) must be far enough forward so they do not interfere with the rear seats as they fold down.

#### ■ Rear Seat Reminder

This feature alerts you to the possible presence of passengers or items in the rear seats before you exit the vehicle. It activates when the power mode is set to VEHICLE OFF if the rear doors were opened shortly before or after the power mode was set to ON.



A reminder appears on the driver information interface and an alert will sound when the power mode is set to VEHICLE OFF.

#### ■ Rear Seat Reminder

When the power mode is set to VEHICLE OFF, reminder will go off and the function will terminate.

The reminder will not work if the power mode has not been set to ON within 10 minutes of operating the rear doors.

The system does not detect passengers in the rear seats. Instead, it can detect when a rear door is opened and closed, indicating that there may be something in the rear seats.

You can turn off the notification setting.

Customized Features P. 295

## **Maintain a Proper Sitting Position**

After all occupants have adjusted their seats, and put on their seat belts, it is very important that they continue to sit upright, well back in their seats, with their feet on the floor until the vehicle is safely parked and the engine is off.

Sitting improperly can increase the chance of injury during a crash. For example, if an occupant slouches, lies down, turns sideways, sits forward, leans forward or sideways, or puts one or both feet up, the chance of injury during a crash is greatly increased.

In addition, an occupant who is out of position in the front seat can be seriously or fatally injured in a crash by striking interior parts of the vehicle or being struck by an inflating front airbag.

Maintain a Proper Sitting Position


## **AWARNING**

Sitting improperly or out of position can result in serious injury or death in a crash.

Always sit upright, well back in the seat, with your feet on the floor.

## **Armrest**

## **■** Using the Front Seat Armrest

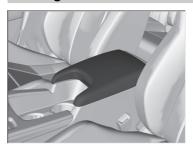


The console lid can be used as an armrest.

## **Interior Convenience Items**

## **Interior Lights**

### ■ Interior Light Switch

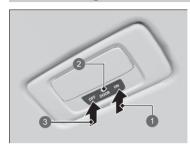

- 1 On
- 2 Door Activated Position
- Off

#### ON

The interior light comes on regardless of whether the doors are open or closed.

#### ■ Door activated

The interior light comes on in the following situations:

- When any doors are opened.
- You unlock the driver's door.
- When the power mode is set to VEHICLE OFF.

#### ■ OFF

The interior lights remain off regardless of whether the doors are open or closed.

## ■ Map Light Switches



The map lights can be turned on and off by pressing the buttons.

#### 

In the door activated position, the interior lights fade out and go off about 30 seconds after the doors are closed.

The lights go off after about 30 seconds in the following situations:

- When you unlock the driver's door but do not open it.
- When you set the power mode to VEHICLE OFF but do not open a door.

You can change the interior light dimming time.

#### Customized Features P. 295

The interior lights go off immediately in the following situations:


- When you lock the driver's door.
- When you close the driver's door in ACCESSORY mode.
- When you set the power mode to ON.

If you leave any of the doors open in VEHICLE OFF mode, the interior light goes off after about 15 minutes

To avoid draining the battery, do not leave the interior light on for an extended length of time when the engine is off.

## **Storage Items**

### ■ Glove Box

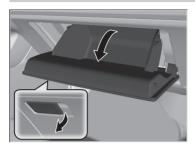

Pull the handle to open the glove box.

#### Solove Box

## **AWARNING**

An open glove box can cause serious injury to your passenger in a crash, even if the passenger is wearing the seat belt.

Always keep the glove box closed while driving.


Continued 211

## **■** Console Compartment




Pull the handle to open the console compartment.


## ■ Beverage Holders

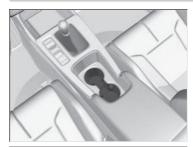

### **■** Front seat beverage holders

Are located in the console between the front seats.

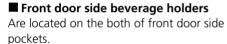

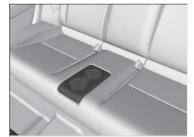

## ■ Rear seat beverage holders

#### ■ Beverage Holders

### NOTICE

Spilled liquids damage the upholstery, carpeting, and electrical components in the interior.

Be careful when you are using the beverage holders. Hot liquid can scald you.

Continued 213



## ■ Rear door side beverage holders

Are located on the both of rear door side pockets.

### Coat Hook



There is a coat hook on the rear driver's side grab handle.

#### ○ Coat Hook

The coat hook is not designed for large or heavy items.

## **■ Luggage Hook**




The luggage hook in the luggage area can be used to hang a light items.

#### ∑Luggage Hook

#### NOTICE

Do not hang a large object or an object that weighs more than 3 kg on the luggage hook. Hanging heavy or large objects may damage the hook.

## ■ Tie-down Anchorages\*

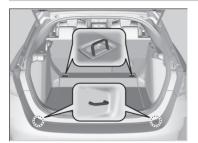

The tie-down anchorages on the luggage area floor can be used to install a net for securing items.

#### ∑Tie-down Anchorages\*

Do not let anyone access items in the luggage area while driving. Loose items can cause injury if you have to brake hard.

### ■ Luggage Area Cover\*



The luggage area cover can be used to cover the luggage space.

### ■ To pull out

Pull the cover handle straight out, and hang both ends on the hooks.

When storing, remove it from the hook and gently put it back.

#### • Handle



Hooks

#### ≥ Luggage Area Cover\*


Do not access parcels in the luggage area while driving.

This may cause injury if you have to brake hard.

Do not stack objects higher than the top of the seat in the luggage area. They could block your view and be thrown about the vehicle during a sudden stop.

To prevent luggage area cover damage:


- Do not place items on the luggage area cover.
- Do not put weight on the luggage area cover.

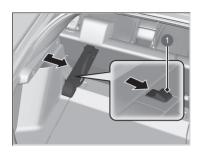

### ■ To remove:

Slide the lever on the luggage area cover case and remove it while pulling it towards you.

1 Lever

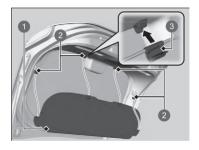

## ■ Luggage area cover extension

The extension is attached at the back of the hatch by four clips. It extends the covering area when you close the hatch. To remove, unclip the extension from the hatch. When reinstalling the extension, make sure that the tabs come to the near side.

- ① Extension
- 2 Clips
- Tab

### **Other Interior Convenience Items**

### Accessory Power Socket

The accessory power sockets can be used when the power mode is in ACCESSORY or ON.



#### **■** Console panel

Open the cover to use it.

#### 


Do not insert an automotive type cigarette lighter element. This can overheat the accessory power socket.

The accessory power socket is designed to supply power for 12-volt DC accessories that are rated 180 watts (15 amps) or less.

To prevent battery drain, only use the accessory power socket with the engine running.

When the accessory power socket is not in use, close the cover to prevent any small foreign objects from getting into the accessory power socket.

### Wireless Charger

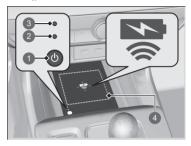

- ① (Power) Button
- 2 Green Indicator
- Amber Indicator
- 4 Charging Area

- 1. To turn the system on and off, press and hold the (b) (power) button.
  - ➤ When the system is activated, the green indicator light comes on.
- **2.** Place the device you want to charge on the charging area.
  - ➤ The system will automatically start charging the device and the amber indicator light will come on.
  - ▶ Make sure that the device is compatible with the system and placed with the chargeable side in the centre of the charging area.
- **3.** When charging is completed, the green indicator light will come on.
  - ▶ Depending on the device, the amber indicator light will stay on.

Wireless Charger

■ Marger

Wireless Charger

■ Marger

■ Ma

### **ACAUTION**

Metal objects between the charge pad and the device to be charged will get hot and can burn you.

- Always remove foreign objects from the charge pad before charging the device.
- Be sure the surface is clear of dust and other debris before charging.
- Do not spill liquids (i. e. water, drinks, etc.) on the charger and the device.
- Do not use oil, grease, alcohol, benzine or thinner for cleaning the charge pad.
- Do not cover the system with towels, clothing, or other objects while charging etc.
- Avoid spraying aerosols which may come in contact with the charge pad surface.

This system consumes a lot of power. Do not use the system for a long time when the engine is not running. This may weaken the battery, making it difficult to start the engine.

When using the wireless charger, check the user's manual that came with the compatible device you want to charge.

### ■ When charging does not start

Perform one of the solutions in the following table.

Indicator		Cause	Solution
Green & Amber	Blinking simultaneously	There is an obstacle(s) between the charging area and the device.	Remove the obstacle(s).
		The device is not within the charging area.	Pick up and reset the device to the centre of the charging area where 👺 is located.
		The temperature of the wireless charger pad increases.	Temporarily suspend charging the device. Wait for the temperature to drop and attempt to charge the device again.
Amber	Blinking	The wireless charger is faulty.	Contact a dealer for repairs.

#### Wireless Charger

The wireless charger can support up to 15W, but the charging rate varies based on the device and other conditions.

#### NOTICE

Do not place any magnetic recording media or precision machines within the charging area while charging. The data on your cards such as credit cards can be lost because of the magnetic effect. Also, precision machines such as watches can be affected.

"Qi" and @ marks are the registered trademarks owned by Wireless Power Consortium (WPC).

In the following cases, charging may stop or not start:

- The device is already fully charged.
- The temperature of the device is extremely high while charging.
- You are at a place that emits strong electromagnetic waves or noises, such as a TV station, electric power plant, or petrol station.
- The device has a cover, case or accessories which are not compatible with wireless charging.

A device may not charge if the size or shape of its chargeable side is not appropriate for use with the charging area.

Not all devices are compatible with the system.

During the charging phase, it is normal for the charging area and device to heat up.

#### 

Charging may be briefly interrupted when:

- All the doors and the hatch are closed
- to avoid interference with the proper functioning of the keyless access system.
- The position of the device is altered.

Do not charge more than one device at a time on a charging area.



#### Burn risk:

Any metal objects placed between pad and device may become hot.

If the device becomes too hot and its battery protection function activates, it may charge extremely slowly or no longer charge. The temperature at which the battery protection function activates depends on the device.

## **Heating System**\*

## **Using Automatic Heating**

The automatic heating system maintains the interior temperature you select. The system also selects the proper mix of heated or outside air that raises or lowers the interior temperature to your preference.

Use the system when the engine is running.

- **1.** Press the **AUTO** button.
- 2. Adjust the interior temperature using the temperature control dial.
- **3.** Press the SON/OFF) button to cancel.



- 1 Fan Control Dial
- 2 MODE Control Dial
  - > Dashboard vents
  - Dashboard and floor vents
  - I Floor vents
  - Floor and windscreen demister vents

- ON/OFF Button
- 4 Fresh Air Button
- Recirculation Button
- **6 AUTO** Button
- Temperature Control Dial

#### **≥** Using Automatic Heating

If any buttons are pressed while using the heating system in auto, the function of the button that was pressed will take priority.

The **AUTO** indicator will go off, but functions unrelated to the button that was pressed will be controlled automatically.


During idle-stops, heating system is suspended, and only the blower remains active.

If you do not want heating system suspended, press the Auto Idle Stop **OFF** button to cancel idle-stop.

To prevent cold air from blowing in from outside, the fan may not start immediately when the **AUTO** button is pressed.

When you set the temperature to the lower or upper limit, **Lo** or **Hi** is displayed.

Pressing the solve button switches the heating system between on and off. When turned on, the system returns to your last selection.

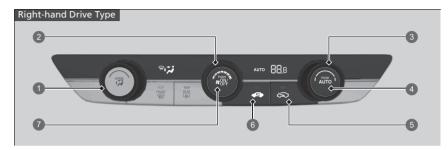

- 1 MODE Control Dial
  - 🔀 Dashboard vents
  - Dashboard and floor vents
  - Floor vents نړ نه
  - Floor and windscreen demister vents

- Pan Control Dial
- 3 Temperature Control Dial
- **4 AUTO** Button
- **5** Fresh Air Button
- **6** Recirculation Button
- ON/OFF Button


### ■ Switching between the recirculation and fresh air modes

Press the (recirculation) or (fresh air) button to switch the mode depending on environmental conditions.

Recirculation mode (indicator on): Recirculates air from the vehicle's interior through the system.

Fresh air mode (indicator on): Maintains outside ventilation. Keep the system in fresh air mode in normal situations.

### Defrosting the Windscreen and Windows

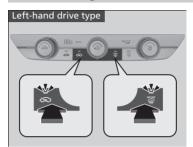

Pressing the (windscreen demister) button automatically switches the system to fresh air mode.

Press the button again to turn off, the system returns to the previous settings.

**>** Defrosting the Windscreen and Windows


# For your safety, make sure you have a clear view through all the windows before driving.

Do not set the temperature near the upper or lower limit.


When cold air hits the windscreen, the outside of the windscreen may fog up.


To defog during the Auto Idle Stop, restart the engine as follows.

- 1. Make sure the shift lever is in N.
- 2. Depress the clutch pedal fully.
- 3. Press the button.

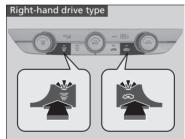

### ■ To rapidly defrost the windows

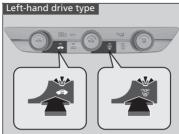

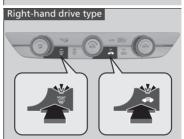


- **1.** Press the button.
- 2. Press the button.

#### ∑To rapidly defrost the windows

After defrosting the windows, switch over to fresh air mode. If you keep the system in recirculation mode, the windows may fog up from humidity. This impedes visibility.

## **Automatic Heating Sensors**

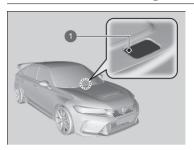

The automatic heating system is equipped with sensors. Do not cover or spill any liquid on them.

Sensor



Sensor

## Climate Control System\*

## **Using Automatic Climate Control**

The automatic climate control system maintains the interior temperature you select. The system also selects the proper mix of heated or cooled air that raises or lowers the interior temperature to your preference as guickly as possible.

Use the system when the engine is running.

- 1. Press the **AUTO** button.
- **2.** Adjust the interior temperature using the driver's side or passenger's side temperature control dial.
- **3.** Press the SON/OFF) button to cancel.



- **1 AUTO** Button
- 2 Driver's Side Temperature Control Dial
- 3 Fan Control Dial
- Passenger's Side Temperature Control Dial
- **6** SYNC Button
- 6 A/C (Air Conditioning) Button
- ON/OFF Button

- MODE Control Button
  - 🔀 Dashboard vents
  - Dashboard and floor vents
  - J Floor vents
  - Floor and windscreen demister vents
- Recirculation Button

#### 

If any buttons are pressed while using the climate control system in auto, the function of the button that was pressed will take priority.

The auto button indicator will go off, but functions unrelated to the button that was pressed will be controlled automatically.

During idle-stops, air-conditioning is suspended, and only the blower remains active.


If you do not want air-conditioning suspended, press the Auto Idle Stop **OFF** button to cancel idle-stop.

To prevent cold air from blowing in from outside, the fan may not start immediately when the **AUTO** button is pressed.

If the interior is very warm, you can cool it down more rapidly by partially opening the windows, turning the system on auto, and setting the temperature to low. Change the fresh air mode to recirculation mode until the temperature cools down.

When you set the temperature to the lower or upper limit, **Lo** or **Hi** is displayed.

Pressing the 60 button switches the climate control system between on and off. When turned on, the system returns to your last selection.

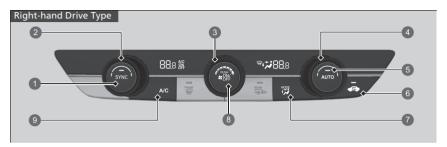

- **11 SYNC** Button
- Passenger's Side Temperature Control Dial
- Fan Control Dial
- 4 Driver's Side Temperature Control Dial
- **6** AUTO Button
- **6** Recirculation Button

- **⋒** MODE Control Button
  - 🔀 Dashboard vents
  - Dashboard and floor vents
  - Floor vents نم ب
  - Floor and windscreen demister vents
- **3 ON/OFF** Button
- A/C (Air Conditioning) Button


### ■ Switching between the recirculation and fresh air modes

Press the (recirculation) button and switch the mode depending on environmental conditions.

Recirculation mode (indicator on): Recirculates air from the vehicle's interior through the system.


Fresh air mode (indicator off): Maintains outside ventilation. Keep the system in fresh air mode in normal situations.

### Defrosting the Windscreen and Windows

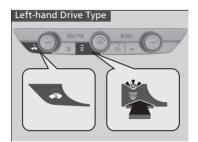

Pressing the (windscreen demister) button turns the air conditioning system on and automatically switches the system to fresh air mode.

Press the button again to turn off, the system returns to the previous settings.

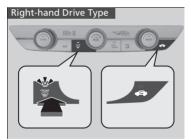

Defrosting the Windscreen and Windows

# For your safety, make sure you have a clear view through all the windows before driving.


Do not set the temperature near the upper or lower limit.


When cold air hits the windscreen, the outside of the windscreen may fog up.

To defog during the Auto Idle Stop, restart the engine as follows.

- 1. Make sure the shift lever is in N.
- 2. Depress the clutch pedal fully.
- 3. Press the button.

### ■ To rapidly defrost the windows

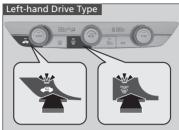

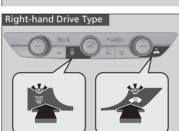


- **1.** Press the work button.
- **2.** Press the button.

#### ∑To rapidly defrost the windows

After defrosting the windows, switch over to fresh air mode. If you keep the system in recirculation mode, the windows may fog up from humidity. This impedes visibility.

### ■ Synchronization Mode

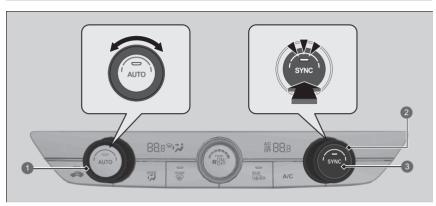

- Driver's Side Temperature Control Dial
- Passenger's Side Temperature Control Dial
- **3 SYNC** Button

You can set the temperature synchronously for the driver's side and the passenger's side in synchronization mode.

- 1. Press the **SYNC** button.
  - ▶ The system switches to synchronization mode.
- **2.** Adjust the temperature using the driver's side temperature control dial.


Press the **SYNC** button or change the passenger's side temperature setting to return to dual mode.

#### Synchronization Mode

When you press the  $\overline{\mbox{\mbox{\mbox{$\cong$}}}}$  button, the system changes to synchronization mode.

When the system is in dual mode, the driver's side temperature and the passenger's side temperature can be set separately.

## **Automatic Climate Control Sensors**

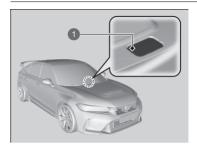

The automatic climate control system is equipped with sensors. Do not cover or spill any liquid on them.

Sensor



Sensor



Nudio System	238			
Display Audio	240			
Audio Error Messages	328			
General Information on the Audio				
System	329			
londa LogR	339			
mergency Call (eCall)	365			
Refuel Recommend*	370			


\* Not available on all models

## **Audio System**

## **About Your Audio System**

The audio system features FM/AM radio and Digital Audio Broadcasting (DAB) service. It can also play USB flash drives, iPod, iPhone, *Bluetooth*® devices, and smartphone.

You can operate the audio system from the buttons and knobs on the panel, the remote controls on the steering wheel or the icons on the touchscreen interface.

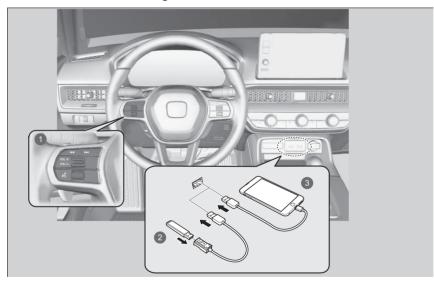

- Remote Controls
- USB Flash Drive
- iPod

## **Audio System Theft Protection**

The audio system is disabled when it is disconnected from the power source, such as when the battery is disconnected or goes dead. In certain conditions, the system may display a code entry screen. If this occurs, reactivate the audio system.

#### ■ Reactivating the audio system

- 1. Set the power mode to ON.
- **2.** Turn on the audio system.
- 3. Press and hold the **VOL**/ **AUDIO** (Volume/Power) knob for more than two seconds.
  - ► The audio system is reactivated when the audio control unit establishes a connection with the vehicle control unit. If the control unit fails to recognise the audio unit, you must go to a dealer and have the audio unit checked.

## **Display Audio**

## **Start Up**

The Display Audio starts automatically when you set the power mode to ACCESSORY or ON. At start-up, the following screen about the data upload will be displayed.





#### Select Start.

- ▶ If you do not select **Start**, the system will automatically be switched the home screen after a certain period of time.
- ▶ If there is no registered device, select Start and the Bluetooth® pairing screen will be displayed.
- If you want to change the settings for data upload, select **Settings**, then select the ON/OFF settings on the **Location** and vehicle data sharing screen.
- To pair a mobile phone (when there is no phone paired to the system)
- **1.** Make sure your phone is in search or discoverable mode.
- **2.** Select **Honda HFT** from your phone.
  - ▶ If you want to pair a phone from this Display Audio, select Search for Devices, and then select your phone when it appears on the list.
  - ► If you check the box with Do not show this again, this screen will not be displayed.

#### Start Up

#### **Except Turkish models**

#### Location and vehicle data sharing

**ON**: Available the data communication.

OFF: Not available the data communication.

## **Basic Operation**

### Audio System Function

To use the audio system function, the power mode must be in ACCESSORY or ON.



- 1 All Apps
- Status Icons
- 3 App Shortcut Icons
- Arrow
- **5** \* Display Mode Icon

- **6** Mode Change Switch Icons
- **8 VOL/ (b) AUDIO** (Volume/Power) Knob
- (Back) Button
- (Home) Button

#### ■ Audio System Function

This screen is shown for the left-hand drive models. For the right-hand drive models, these are located at the symmetrically opposite to the left-hand drive model.

#### **Key Off Operation**

After you set the power mode to VEHICLE OFF (LOCK), you can use the audio system for up to 30 minutes per driving cycle. However, whether you can continue using the audio system depends on the battery condition. Repeatedly using this feature may drain the battery.

All Apps: Displays the all apps.

**Status Icons**: Show the indicators of the information for the vehicle, connected

phones, etc. in the header area.

**App Shortcut Icons**: Display the app shortcut icons.

**Arrow**: Displays the next pages on the audio/information screen.

**Display Mode Icon**: Changes the audio/information screen brightness. Select

\*) once and select or to make an adjustment.

**Mode Change Switch Icons**: Display icons to change the mode directly.


[◄◄ / ▶► (Seek/Skip) **Buttons**: Press to change station, song or file.

**VOL/ (b) AUDIO (Volume/Power) Knob**: Turns the audio system on and off and turns to adjust the volume.

(Back) Button: Presses to go to back to the previous screen.

(Home) Button: Presses to go to the home screen.

#### **USB Ports**

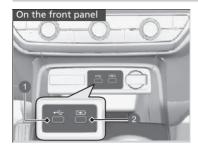

- Playing audio files and connecting compatible phones
- Only for charging devices

### ■ On the front panel ( )



The USB port (2.5A) on the front panel is for charging devices, playing audio files and connecting compatible phones with Apple CarPlay or Android Auto.

To prevent any potential issues, be sure to use an Apple MFi Certified Lightning Connector for Apple CarPlay, and for Android Auto, the USB cables should be certified by USB-IF to be compliant with USB 2 0 Standard

### ■ On the front panel ( )



The USB port (2.5A) on the front panel is only for charging devices.

You cannot play music even if you have connected music players to it.

#### ■USB Ports


- Do not leave the iPod or USB flash drive in the vehicle. Direct sunlight and high temperatures may damage it.
- We recommend that you use a USB cable if you are attaching a USB flash drive to the USB port.
- Do not connect the iPod or USB flash drive using a hub
- Do not use a device such as a card reader or hard disk drive, as the device or your files may be damaged.
- We recommend backing up your data before using the device in your vehicle.
- Displayed messages may vary depending on the device model and software version.

#### USB charge

The USB port can supply up to 2.5A of power. It does not output 2.5A unless requested by the device. For amperage details, read the operating manual of the device that needs to be charged.

Under certain conditions, a device connected to the port may generate noise in the radio you are listening to.

#### Audio Remote Controls

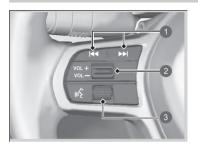

Allow you to operate the audio system while driving. The information is shown on the driver information interface.

- (Seek/Skip)
- 2 VOL +/VOL (Volume) Switch
- 3 Left Selector Wheel

VOL +/VOL - (Volume) Switch

**Press Up:**To increase the volume.

**Press Down:**To decrease the volume.

#### **Left Selector Wheel**

• When selecting the audio mode

Roll up or down to select **Audio** on the driver information interface, and then press the left selector wheel.

#### 

Some modes appear only when an appropriate device or medium is used.

Depending on the *Bluetooth*® device you connect, some functions may not be available.

#### Roll up or down:

To cycle through the audio modes, roll up or down and then press the left selector wheel:

Back/Phone/FM/DAB/AM/USB/Bluetooth/Apps/Customized display

▶ Depending on a connected device, the displayed modes may be changed.

### |◀◀/▶▶| (Seek/Skip) Buttons

- When listening to the radio
  - **Press** To select the next preset radio station.
  - **Press** To select the previous preset radio station.
  - **Press and hold** To select the next strong station.
  - **Press and hold** To select the previous strong station.
- When listening to an iPod, USB flash drive, Bluetooth® Audio, or Smartphone Connection
  - ▶ Depending on a connected device, operations may be changed.
  - **Press** To skip to the next song.
  - **Press** To go back to the previous song.
- When listening to a USB flash drive
  - **Press and hold** To skip to the next folder.
  - **Press and hold** To go back to the previous folder.
- When listening to an iPod:
  - **Press and hold** To skip to the next song.
  - **Press and hold** [ To go back to the previous song.

### **On-Board Owner's Manual\***

You can view the content of the owner's manual on the Display Audio.

## Open the Owner's Manual

- 1. Select 
  All Apps.
- 2. Select Owner's Manual.

### ■ Install/Update the Owner's Manual

When you can install or update the owner's manual, the notification will be sent automatically.

#### To update:

- **1.** Tap the notification.
  - ► The version screen will display.
- **2.** Select items to be updated.
- 3. Tap Update.

If you unselect an item on the version screen, you will not receive any notifications for it.

#### ■On-Board Owner's Manual\*

This function does not cover all languages available for the Display Audio.

Changing the language of the Display Audio will also change the language of the owner's manual. If the owner's manual is not available or installed in that language, the owner's manual will default to English.

#### ≥ Install/Update the Owner's Manual

There may be differences in the displayed content depending on the version of the owner's manual.

If the owner's manual is not installed yet, you can install it via Wi-Fi.

Connecting to a Wi-Fi Hotspot P. 286

## For languages except English, Germany, French, Italian and Spanish

If you install the owner's manual in a new language, the owner's manual you previously downloaded will be removed.

## **Voice Control Operation**

Your vehicle has a voice control system that allows hands-free operation. The voice control system uses the <u>occ</u> (talk) button on the steering wheel and a microphone near the map lights on the ceiling.

### ■ Voice Recognition

To achieve optimum voice recognition when using the voice control system:

• Make sure the correct screen is displayed for the voice command that you are using.

The system recognises only certain commands.

Available voice commands.

#### **▶ Voice Portal Screen** P. 248


- Close the windows.
- Adjust the dashboard and side vents so air does not blow onto the microphone on the ceiling.
- Speak clearly in a clear, natural speaking voice without pausing between words.
- Reduce any background noise if possible. The system may misinterpret your command if more than one person is speaking at the same time.

#### 

When you press the button, a helpful prompt asks what you would like to do. Press and release the button again to bypass this prompt and give a command.

Languages that the voice control system recognises are English, German, French, Spanish, and Italian.

### ■ Voice Portal Screen

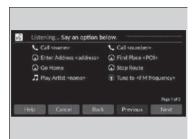

When the [6] (talk) button is pressed, available voice commands appear on the screen.

For a complete list of commands, say "Help" after the beep.

Depending on the selected mode, the displayed commands are different on the voice portal screen. The commands recognised are the same regardless of which screen is selected.

Normal Mode: A list of example commands is displayed to quickly complete your desired function.

Assist Mode: A list of basic commands is displayed to guide you step by step through the voice menu.

You can change the mode on the **General Settings** screen.

Voice Control P. 301

The system only recognises the commands on the following pages, at certain screens. Free form voice commands are not recognised.

#### General Commands

When the voice portal screen is displayed, it will change to the top screen of each function by using the global commands.

- Music Search
- AM
- FM
- Navigation\*
- Phone

### ■ Phone Commands

This can be only used when the phone is connected. When the system recognises the Phone command, the screen will change the dedicated screen for the voice recognition of the phone.

#### **■** Phone Commands

- Call <name>
- Call <number>

The system recognises an only contact name in the stored phonebook of your phone. If full name is registered in first name field, the system will recognise the first name and last name as one contact name.

Phone commands are not available if using Apple CarPlay.

#### Audio Commands

When the system recognises the Audio command, the screen will change the dedicated screen for the voice recognition of the audio.

#### ■ FM Commands

• Tune to <FM frequency>

#### ■ AM Commands

• Tune to <AM frequency>

#### **■** iPod Commands

- List Album <name>
- List Artist <name>
- List Genre <name>
- List Playlist <name>
- Play <artist> <album>
- Play
- Play Album <name>
- Play Artist <name>
- Play Genre <name>
- Play Music <text:media\_combo>
- Play Playlist <name>
- Play Song <name>

#### **■ USB Commands**

- List Album <name>
- List Artist <name>
- List Playlist <name>
- Play <artist> <album>
- Play
- Play Album <name>
- Play Artist <name>
- Play Music <text:media\_combo>
- Play Playlist <name>
- Play Song <name>

### ■ Navigation Commands\*

The screen changes to the navigation screen.

Refer to the Navigation System Manual

#### ■ Standard Commands

- Voice Help
- Cancel
- Back

Voice Help are readout voice guidance for Help on current screen.

### List Commands

- Previous
- Next
- Yes
- No

### **Audio/Information Screen**

Displays the audio status and clock. From this screen, you can go to various setup options.



>> Audio/Information Screen


#### **Touchscreen Operation**

- Use simple gestures including touching, swiping, and scrolling to operate certain audio functions.
- Some items may be greyed out during driving to reduce the potential for distraction.
- You can select them when the vehicle is stopped or use voice commands.
- Wearing gloves may limit or prevent touchscreen response.

You can change the touchscreen sensitivity setting.

Customized Features P. 295

# ■ App Shortcut Function

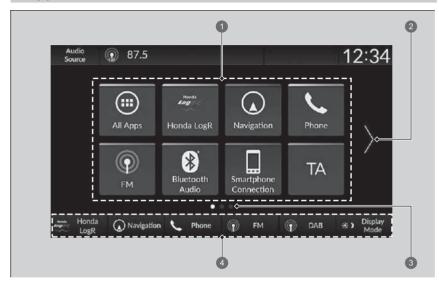

- App Shortcut Icons
- 2 Arrow
- 3 Page Indicator
- 4 Mode Change Switches

### ■ To move to the next screen

Selecting < or >, or swiping the screen left or right changes to the next screen.


### ■ App Shortcut Function

The home screen can be added up to 6 pages.

Press the button to go directly back to the first page of the home screen from any page.

## ■ To add app icons on the home screen

App icons can be added on the home screen.

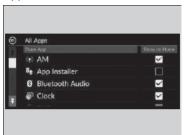

- 1. Press the button.
- 2. Select 
  All Apps.
- **3.** Select the box checked on the desired apps.

### ∑To add app icons on the home screen

Pre-installed apps may not start up normally. If this occurs, you need to re-start the system. Set the power mode to VEHICLE OFF, then set the power mode to ON. After that, start up an app again. If you are still unable to start up the apps, you need to reset the system.

**Defaulting All the Settings** P. 309

If you perform **Factory Data Reset**, it may reset all the settings to their factory default.

Defaulting All the Settings P. 309

In case those apps still do not start up normally even after **Factory Data Reset**, contact your dealer.

## ■ To move icons on the home screen

You can change location on the home screen.



- 1. Press the toutton.
- **2.** Select and hold an icon.
  - ► The screen switches to the customization screen.
- **3.** Drag and drop the icon to where you want it to be.
- 4. Select Done.
  - ➤ The screen will return to the home screen.

### ∑To move icons on the home screen

Select **Tips** to show tips. To hide them, select it again.

### ■ To remove icons on the home screen

You can delete the icons on the home screen.



- **1.** Press the button.
- 2. Select and hold an icon.
  - ► The screen switches to the customization screen.
- **3.** Drag and drop the icon you want to remove to the header area.
  - ► The icon is removed from the home screen.
- 4. Select Done.
  - ► The screen will return to the home screen.

### ∑To remove icons on the home screen

Apps will not be deleted by deleting the icon on the home screen.

Select Tips to show tips. To hide them, select it again.

### ■ To shortcut icons on the home screen

You can store up to six icons on the bottom of the home screen.



Mode Change Switches

- **1.** Press the toutton.
- **2.** Select and hold an icon.
  - ► The screen switches to the customization screen.
- **3.** Drag and drop the icon you want to store to the bottom of the home screen.
  - ➤ The icon is stored on the mode change switch area.
- 4. Select Done.
  - ► The screen will return to the home screen.

#### ∑To shortcut icons on the home screen

Select **Tips** to show tips. To hide them, select it again.

### ■ Status Area

Shows the indicators of the information for the vehicle, connected phones, etc. in the header area. You can confirm the detail information by selecting these icons.

- **1.** Select the system status icon.
  - ► The status area appears.
- 2. Select an item to see the details.
- **3.** Press the button or select the system status icon to close the area.

System Status Icon

# ■ Selecting an Audio Source



Select **Audio Source** on the header area, then select an icon on the source list to switch the audio source.


# **■ Limitations for Manual Operation**

Certain manual functions are disabled or inoperable while the vehicle is in motion. You cannot select a greyed-out option until the vehicle is stopped.

# **Clock Setup**

# Adjusting the Clock

You can adjust the time manually and set the wallpaper of the clock in the audio/information screen.

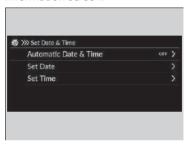

- 1. Press the button.
- 2. Select General Settings.
- 3. Select System.
- 4. Select Date & Time.
- 5. Select Set Date & Time.
- **6.** Select **Automatic Date & Time**, then select **OFF**.

To adjust date:

- 7. Select Set Date.
- **8.** Select **▲**/▼.
- **9.** Select **Save** to set the date.

To adjust time:

- 7. Select Set Time.
- **8.** Select **▲**/▼.
- **9.** Select **Save** to set the time.

### ■ Adjusting the Clock

The clock is automatically updated through the audio system.

You can also adjust the clock by touching the clock displayed on the header area of the audio/information screen, **Clock** displayed on the home screen, or All Apps.


- 1. Touch the clock on the screen.

  The clock screen of the face-type appears.
- 2. Select Settings.
- 3. Select Date & Time.
- 4. Select Set Date & Time.
- 5. Select Automatic Date & Time, then select OFF.
- 6. Select Set Date or Set Time.
- 7. Adjusting the dates, hours and minutes by selecting ▲/▼.
- 8. Select **Save** to set the time.

You can customise the clock display.

**≥ System** P. 296

## Clock Wallpaper Setup

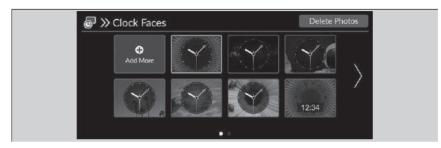

## **■** Import clock wallpaper

- 1. Connect the USB flash drive to the USB port.
  - USB Ports P. 243
- 2. Press the button.
- 3. Select Clock.
- 4. Select Settings.
- 5. Select Clock Faces.
- 6. Select Add More.
  - The image of the pictures stored in the USB flash drive are displayed on the list.
- 7. Select a desired picture to import.
  - ▶ Multiple pictures can be selected at the same time.
- 8. Select OK.
  - ► The selected pictures are displayed.
- 9. Select Transfer.
  - ► It will return to the clock wallpaper setting screen.

### 

- When importing wallpaper files, the image must be in the USB flash drive's root directory.
   Images in a folder cannot be imported.
- The file name must be less than 64 bytes.
- The file format of the image that can be imported is BMP (bmp) or JPEG (jpg).
- The individual file size limit is less than 10 MB.
- If the USB flash drive does not have any pictures, the message appears.
- Up to 11 pictures can be imported.
- The maximum image size is 4,096 x 2,304 pixels. If the image size is less than 1,280 x 720 pixels, the image is displayed in the middle of the screen with the extra area appearing in black.


## ■ Select clock wallpaper

- **1.** Press the button.
- 2. Select Clock.
- 3. Select Settings.
- 4. Select Clock Faces.
- **5.** Select a desired picture to set.
  - ► The preview is displayed on the screen.
- 6. Select Save.
  - ▶ The clock screen which the wallpaper has been set is displayed.

### **■** Delete clock wallpaper

- **1.** Press the button.
- 2. Select Clock.
- 3. Select Settings.
- 4. Select Clock Faces.
- 5. Select Delete Photos.
- **6.** Select a desired picture to delete.
  - ► Multiple pictures can be selected at the same time.
- 7. Select OK.
  - ► The selected pictures are displayed.
- 8. Select Delete.
  - ▶ It will return to the clock wallpaper setting screen.

# **Adjusting the Sound**

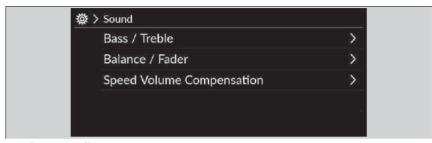

- 1. Select an audio source.
- 2. Select Sound.
- **3.** Select the setting you want.

Select an item from the following choices:

- Bass / Treble: Treble, Midrange, Bass
- Balance / Fader: Balance, Fader
- **Speed Volume Compensation**: Sets the amount of volume increase.

### ■ Adjusting the Sound

The Speed Volume Compensation (SVC) adjusts the volume level based on the vehicle speed. As you go faster, audio volume increases. As you slow down, audio volume decreases.

You can also adjust the sound the following procedure.

- 1. Press the button.
- 2. Select General Settings.
- 3. Select **Sound**.

To reset each setting for **Bass / Treble**, **Balance / Fader**, and **Speed Volume Compensation**, select **Default** on each setting screen.

# **Display Setup**

You can set the screen brightness separately for Day and Night modes.

# ■ Switching Display Mode Manually



Select 🔆 🕽 (Display Mode).

- ► The brightness bar is displayed for a few seconds.
- ➤ Select or to adjust the brightness.

### **™** Display Setup

You can adjust the screen brightness by swiping or tapping on the brightness bar.

You can also change the screen brightness on the following procedures.

- 1. Press the toutton.
- 2. Select **General Settings**.
- 3. Select **Display**.
- 4. Select the setting you want.

To reset the settings, select **Default**.



# **System Updates**

The audio system's firmware can be updated with a Wi-Fi connection, or with a USB device

# How to Update

When the audio system update is available, the notification is shown on the status area. Use the following procedure to update the system.

- 1. Press the button.
- 2. Select System Updates.
  - ▶ If **System Updates** is not displayed on the home screen, select **All Apps**.
  - ► The system will check for updates.
  - ► If the update icon is appeared on the home screen, select the status icon. 

    ► Status Area P. 256
- 3. Select Download.
  - A notification appears on the screen if need to user acceptance for download.
- 4. Select Install Now or Install While Vehicle Off.
  - A notification appears on the screen if the update is ready.

#### 

You can update the system via Wi-Fi, but cannot use the captive portal that require login or agreement the terms of use on the browser


Your download will be cancelled if:

- Your Wi-Fi connection is severed.
- You turn off the power system when the 12-volt battery is low on power.

Your download will recommence the next time a Wi-Fi connection is established

For the 12-volt battery protection, **Install While Vehicle Off** cannot be selected when the battery is low on power. If you want to install the updated data, recharge the battery or select **Install Now**.

# System Updates Settings

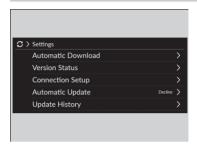

The following settings can be set.

- Automatic Download
- Version Status
- Connection Setup
- Automatic Update
- Update History

### ■ Automatic download settings

Use the following procedure to change to the automatic download setting.

- **1.** Press the button.
- 2. Select System Updates.
- 3. Select Settings.
- 4. Select Automatic Download.
- **5.** Select the access point, then select **Enable**.
  - If you do not want to system update automatically, select **Disable**.

### ■ View a version and update status

Use the following procedure to confirm the version and update status.

- **1.** Press the button.
- 2. Select System Updates.
  - ▶ If **System Updates** is not displayed on the home screen, select **All Apps**.
- **3.** Select **Settings**.
- 4. Select Version Status.

### ■ Connection setup

Use the following procedure to connect to the Internet via a Wi-Fi network.

- **1.** Press the toutton.
- 2. Select System Updates.
  - ▶ If **System Updates** is not displayed on the home screen, select **All Apps**.
- 3. Select Settings.
- 4. Select Connection Setup.
- **5.** Select **OK**.
- 6. Select Change Mode.
- 7. Select Network.
  - ► If the vehicle's Wi-Fi is turned off, select **OFF**.

### ■ Automatic update settings

Use the following procedure to change to the automatic update setting.

- **1.** Press the toutton.
- 2. Select System Updates.
- 3. Select Settings.
- 4. Select Automatic Update.
- 5. Select Accept.
  - ▶ If you do not want to system update automatically, select **Decline**.

## ■ View the update history

Use the following procedure to confirm the update history.

- **1.** Press the button.
- 2. Select System Updates.
  - ▶ If **System Updates** is not displayed on the home screen, select **All Apps**.
- **3.** Select **Settings**.
- 4. Select Update History.

## ■ How to Update Wirelessly

## ■ Wireless connection mode setup

- 1. Press the button.
- 2. Select System Updates.
- 3. Select Settings.
- 4. Select Connection Setup.
- 5. Select OK.
- 6. Select Change Mode.
- 7. Select **Network**.
  - It will return to the network list.
- 8. Select an access point from the network list.
  - ▶ If the audio system requires a password, enter a password.
- 9. Select Connect.

## ■ How to update

- **1.** Press the toutton.
- 2. Select System Updates.
  - ▶ If **System Updates** is not displayed on the home screen, select **All Apps**.
- 3. Select via Wireless.
- 4. Select Download.
  - ▶ A notification appears on the screen if need to user acceptance for download.
- 5. Select Install Now or Install While Vehicle Off.
  - A notification appears on the screen if the update is ready.

## How to Update with a USB Device

### ■ Download the update files from the server

- 1. Press the button.
- 2. Select System Updates.
- 3. Select Other Methods.
- 4. Select Via USB.
  - A notification appears on the screen.
- 5. Connect a USB device into the USB port.
  - ▶ The inventory data is copied into the USB device.

USB Ports P. 243

- **6.** Remove the USB device from the USB port.
- 7. Connect the USB device into your computer, and then download the update files.
  - ► Follow the link to download the required software update files. Refer to https://usb.honda.com for instructions.

### **■** Update the audio system

- **1.** Press the button.
- 2. Select System Updates.
- 3. Select Other Methods.
- 4. Select Via USB.
  - A notification appears on the screen.
- **5.** Connect the USB device with the update files into the USB port.
  - ► A notification appears on the screen.

USB Ports P. 243


- 6. Select Install Now.
  - A notification appears on the screen if the update is successful.

#### 

A FAT32-formatted USB device between 8GB and 32GB in size with at least 8GB of free space is recommended.

Be sure to delete any previous inventory or update files from the USB before starting the USB update process.

# **Playing FM/AM Radio**

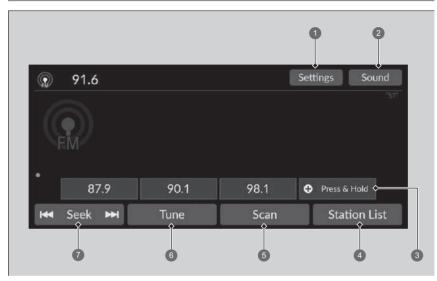

- Settings Icon
- Sound Icon
- Preset Icons
- 4 Station List Icon

- **6** Scan Icon
- **6** Tune Icon
- Seek Icon

# Preset Memory

Tunes the radio frequency for preset memory.

To store a station:

- **1.** Tune to the selected station.
- **2.** Select and hold the preset icon to store that station.
  - ► Selecting **Press & Hold** can be set a new preset station.

## ■ Station List

Lists the strongest stations on the selected band.

- **1.** Select **Station List** to display a list.
- 2. Select the station.

## ■ Manual update

Updates your available station list at any time.

- **1.** Select **Station List** to display a list.
- 2. Select Refresh.

### Scan

Samples each of the strongest stations on the selected band for 10 seconds. To begin scanning, select **Scan**, and to turn it off, select **Stop** or press the button.

### Seek

Selects  $\boxed{\blacktriangleleft}$  or  $\boxed{\blacktriangleright}$  to search the selected band up or down for a station with a strong signal.

#### 

The **ST** indicator appears on the display indicating stereo FM broadcasts.

Switching the Audio Mode
Roll up or down to select (audio) on the left selector wheel.

Audio Remote Controls P. 244

You can store 12 AM/FM stations into preset memory.

### Sound

Adjusts the sound settings.

Adjusting the Sound P. 261

# ■ Radio Frequency Manual Tune Screen

Selects to use the on-screen keyboard for entering the radio frequency directly.

- 1. Select Tune.
- **2.** Enter the desired radio frequency using the on-screen keyboard.
- **3.** Select **Enter** to tune into the frequency.



1 On-screen Keyboard

■ Radio Frequency Manual Tune Screen



Select ◀ or ▶ to tune the radio frequency.

## ■ Radio Data System (RDS)

Provides text data information related to your selected RDS-capable FM station.

#### ■ To find an RDS station from Station List

- **1.** Select **Station List** to display a list while listening to an FM station.
- 2. Select the station.

## ■ Manual update

Updates your available station list at any time.

- **1.** Select **Station List** to display a list while listening to an FM station.
- 2. Select Refresh.

## **■** Traffic announcement (TA)

The TA standby function allows the system to stand by for traffic announcements in any mode while the function is on. The last tuned station must be an RDS capable traffic program station.

**To turn the function on:** Select **TA**. When a traffic announcement begins, the information screen appears on the audio/information screen. The system returns to your last selected mode after the traffic announcement is finished.

▶ If you want to go back to your last selected mode during the traffic announcement, select **Stop**.

To turn the function off: Select TA again.

#### 

When you select an RDS-capable FM station, the RDS automatically turns on, and the frequency display changes to the station name. However, when the signals of that station become weak, the display changes from the station name to the frequency.

### ∑Traffic announcement (TA)

The **TA** indicator appears on the header area while the TA standby function is on.

If you select **Scan** while the TA standby function is on, the system searches TP station only.


Selecting **TA** while the traffic announcement is on does not cancel the TA standby function.

# Settings

Changes the RDS settings.

- 1. Settings.
- 2. Select an option.
- TA-Information: Turns on and off the traffic information. (ON/OFF\*1)
- **AF:** Turns on and off to automatically change the frequency of the same program you enter different regions. **(ON**\*1/**OFF)**
- **REG:** Turns on and off to keep the same stations within that region even if the signal gets weak. (**ON**\*1/**OFF**)
- NEWS: Turns on and off to automatically to tune to the news program. (ON/ OFF\*1)

# Playing DAB (Digital Audio Broadcasting)

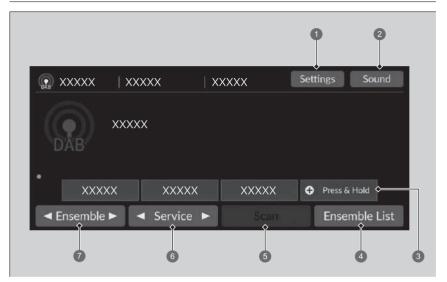

- Settings Icon
- Sound Icon
- Preset Icons
- 4 Ensemble List Icon

- **6** Scan Icon
- **6** Service Icons
- Ensemble Icons

# ■ Preset Memory

Tunes the preset frequency.

To store a service:

- 1. Tune to the selected service.
- **2.** Select and hold the preset icon to store that station.
  - ► Selecting **Press & Hold** can be set a new preset station.

## Ensemble List

Lists the receivable ensembles on the selected service.

- **1.** Select **Ensemble List** to display a list.
- 2. Select the ensemble.

## ■ Manual update

Updates your available ensemble list at any time.

- 1. Select Ensemble List to display a list.
- 2. Select Refresh.

## Ensemble

Tunes the ensemble.

- **1.** Select **■** to **▶** the tune ensemble.
- 2. Select and hold or to search the selected service up to down for an ensemble until a receivable ensemble is found.

# Service

Tunes the service component.

To tune it, select **◄** or **▶**.

### 

Switching the Audio Mode
Roll up or down to select (audio) on the left selector wheel.

**Audio Remote Controls** P. 244

You can store 12 DAB stations into preset memory.

## ■ Scan

Samples each of the receivable ensemble or service on the selected service for 10 seconds.

To begin scanning, select **Scan**, and to turn it off, select **Cancel** or press the button.

## Sound

Adjusts the sound settings.

■ Adjusting the Sound P. 261

# Settings

Changes the DAB settings.

- 1. Settings.
- 2. Select the option you want to change.

# Playing an iPod

Using your USB connector, connect the iPod to the USB port, then select the USB mode.

USB Ports P. 243



- Sound Icon
- Shuffle Icon
- Repeat Icon
- 4 Play/Pause Icon

- Track Icons
- 6 Browse Icon
- Cover Art

### 

Available operating functions vary on models or versions. Some functions may not be available on the vehicle's audio system.

If there is a problem, you may see an error message on the audio/information screen.

iPod/USB Flash Drive P. 328

If you operate the music app on your iPhone/iPod while the phone is connected to the audio system, you may no longer be able to operate the same app on the audio/information screen.

Reconnect the device if necessary.

If a smartphone is connected via Apple CarPlay or Android Auto, the iPod/USB source will be unavailable and audio files on the phone will be playable only within Apple CarPlay or Android Auto.

## ■ How to Select a Song from the Music Search List

You can select to display the music search list screen.

- 1. Select Browse.
- 2. Select a search category.
- **3.** Continue making selections until you find the song of your choice.

# ■ How to Select a Play Mode

You can select shuffle and repeat modes when playing a song.

### **■** Shuffle/Repeat

Select shuffle or repeat icon repeatedly until a desired mode.

#### Shuffle

(shuffle off): Shuffle mode to off.

(shuffle all songs): Plays all available songs in a selected list in random order.

### Repeat

(repeat off): Repeat mode to off.

(repeat song): Repeats the current song.

(repeat all): Repeats the all songs.

### ■ To pause or resume a song

Select the play/pause icon.

# ■ How to Change a Song

You can select  $\blacksquare$  or  $\blacksquare$  to change songs. Select and hold to move rapidly within a song.

# Sound


You can adjust the sound settings.

**■ Adjusting the Sound** P. 261

# Playing a USB Flash Drive

Your audio system reads and plays sound and video files on a USB flash drive. Connect your USB flash drive to the USB port, then select the USB mode.

USB Ports P. 243

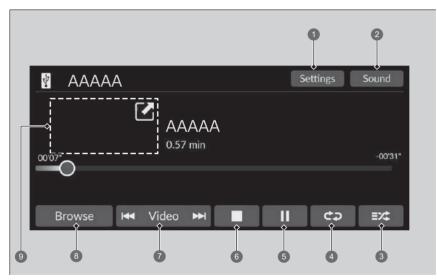

- Settings Icon\*
- Sound Icon
- Random Icon
- 4 Repeat Icon
- S Play/Pause Icon

- Stop Icon\*
- Track\*/Video\* Icons
- 8 Browse Icon
- Over Art\* (Playing a music)/ Mini Player\* (Playing a video)

### ∑Playing a USB Flash Drive

You can use the following formats to play sound or video files on a USB flash drive.

When playing a sound file: MP3, WMA, AAC\*1, FLAC, PCM/WAVE

When playing a video file: MP4, AVI, MKV, ASF/ WMV

\*1: Only AAC format files recorded with iTunes are playable on this unit.

### ■ How to Select a File from the Music Search List

You can select to display the music search list screen.

- 1. Select Browse.
- 2. Select Current Playlist, Music, or Video.
- **3.** Continue making selections until you find the file or video of your choice.

#### ▶ Playing a USB Flash Drive

Use the recommended USB flash drives.

**■ General Information on the Audio System** P. 329

WMA and AAC files protected by digital rights management (DRM) cannot be played. The audio system displays **Unplayable File**, then skips to the next file.

If there is a problem, you may see an error message on the audio/information screen.

iPod/USB Flash Drive P. 328

# ■ How to Select a Play Mode

You can select repeat and random modes when playing a file.

### ■ Random/Repeat

Select random or repeat icon repeatedly until a desired mode.

#### Random

(random off): Random mode to off.

(random all files): Plays all files in random order.

(random in folder): Plays all files in the current folder in random order.

### Repeat

(repeat off): Repeat mode to off.

(repeat file): Repeats the current file.

(repeat folder): Repeats all files in the current folder.

## ■ When playing a video file\*

(stop): Select to stop a file.

[4] / [2]: Select [4] to shrink a video screen. Select [2] to expand a video screen.

## ■ To pause or resume a file

Select the play/pause icon.

# ■ How to Change a File

Track\*/Video\* Icons

You can select or but to change files. Select and hold to move rapidly within a file.

## Sound

You can adjust the sound settings.

**■ Adjusting the Sound** P. 261

# Settings

Changes the USB settings when playing a video file.


- 1. Settings.
- 2. Select an option.
- Image Settings: Changes the brightness of the audio/information screen. To reset the settings, select Default. (Brightness/Contrast/Black Level/Colour/ Tint).
- Aspect Ratio: Selects the display mode with a different aspect ratio. (Original/ Normal\*1/Full/Zoom)
- Overlay Clock Location: Changes the clock display layout. (Upper right\*1/ Upper left/Lower right/Lower left/OFF)

# Playing Bluetooth® Audio

Your audio system allows you to listen to music from your *Bluetooth*-compatible phone.

This function is available when the phone is paired and connected to the vehicle's Hands-Free Telephone (HFT) system.

Phone Setup P. 317

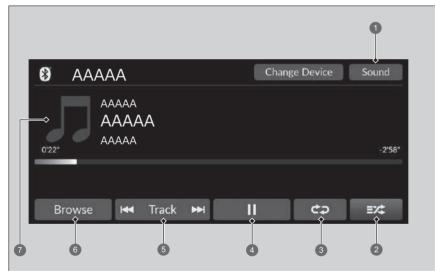

- Sound Icon
- Shuffle Icon
- Repeat Icon
- 4 Play/Pause Icon

- **6** Track Icons
- **6** Browse Icon
- Cover Art

### 

Not all *Bluetooth*-enabled phones with streaming audio capabilities are compatible with the system. To check if your phone is compatible, ask a dealer.

It may be illegal to perform some data device functions while driving.

Only one phone can be used with HFT at a time. When there are more than two paired phones in the vehicle, the latest paired phone the system finds is automatically connected.

If more than one phone is paired to the HFT system, there may be a delay before the system begins to play.

In some cases, the name of the artist, album, or track may not appear correctly.

Some functions may not be available on some devices.

If a phone is currently connected via Apple CarPlay or Android Auto, *Bluetooth*® Audio from that phone will be unavailable. However, if the other phone is connected to the system, it can be used as *Bluetooth*® Audio by selecting the audio mode.

Phone Setup P. 317

# ■ To Play *Bluetooth*® Audio Files

- **1.** Make sure that your phone is paired and connected to the system.
  - Phone Setup P. 317
- 2. Select the Bluetooth® Audio mode.

If the phone is not recognised, another HFT-compatible phone, which is not compatible for *Bluetooth*® Audio, may already be connected.

# ■ How to Select a Play Mode

You can select shuffle and repeat modes when playing a song.

#### Shuffle

- (shuffle off): Shuffle mode to off.
- (shuffle all songs): Plays all available songs in a selected list in random order.

### Repeat

- (repeat off): Repeat mode to off.
- (repeat song): Repeats the current song.
- (repeat all): Repeats the all songs.

### ■ To play or pause a file

Select the play/pause icon.

# Searching for Music

- 1. Select Browse.
- **2.** Select a search category.
- 3. Select an item.
  - ► The selection begins playing.

### ∑To Play Bluetooth® Audio Files

To play the audio files, you may need to operate your phone. If so, follow the phone maker's operating instructions.

Switching to another mode pauses the music playing from your phone.

You can change the connected phone by selecting **Change Device**.

Phone Setup P. 317

#### Searching for Music

Depending on the *Bluetooth*® device you connect, some or all of the lists may not be displayed.

# Sound

You can adjust the sound settings.

■ Adjusting the Sound P. 261

## Wi-Fi Connection

This vehicle is equipped with Wi-Fi connectivity. You can connect to an external Wi-Fi hotspot or communication device.

• Connect the vehicle to a Wi-Fi hotspot

# ■ Connecting to a Wi-Fi Hotspot



- 1. Press the \_\_\_\_\_ button.
- 2. Select General Settings.
- **3.** Select **Connections**.
- 4. Select Wi-Fi.
- 5. Select OK.
- **6.** Select **Change Mode**.
- 7. Select **Network**.
  - ▶ If the data sharing settings is to OFF, the message will be displayed on the screen. You need to change to ON.
    - **System** P. 296
  - ► If you want to turn off the Wi-Fi mode, select **OFF**.
- **8.** Select the access point you want to connect to the system.
  - ➤ To add a new network or select the saved networks, select **Options**.
  - ► If **Options** is selected, **Add Network** and **Saved Networks** can be registered.

#### Wi-Fi Connection

Wi-Fi and Wi-Fi Direct are registered trademarks of Wi-Fi Alliance®.



#### ○ Connecting to a Wi-Fi Hotspot

You cannot go through the setting procedure while a vehicle is moving. Park in a safe place to set the audio system in Wi-Fi mode.

Some mobile phone carriers charge for tethering and smartphone data use. Check your phone's data subscription package.

Check your phone manual to find out if the phone has Wi-Fi connectivity.

You can confirm whether Wi-Fi connection is on or off with the icon on the system status area. Transmission speed and others will not be displayed on this screen.

#### Status Area P. 256

In case of Wi-Fi connection with your phone, make sure your phone's Wi-Fi setting is in access point (tethering) mode.

# **Apple CarPlay**

If you connect an Apple CarPlay-compatible iPhone to the system via the USB port or wirelessly, you can use the audio/information screen, instead of the iPhone display, to make a phone call, listen to music, view maps (navigation), and access messages.

USB Ports P. 243



Apple CarPlay

#### 

We recommend that you update iOS to the latest version when using Apple CarPlay.

Park in a safe place before connecting your iPhone to Apple CarPlay and when launching any compatible apps.

While connected to Apple CarPlay, calls are only made through Apple CarPlay. If you want to make a call with the Hands-Free Telephone (HFT) system, turn Apple CarPlay off.


Setting Up Apple CarPlay P. 289

When your iPhone is connected to Apple CarPlay, it is not possible to use the *Bluetooth®* Audio or the Hands-Free Telephone (HFT) system. However, other previously paired phones can stream audio via *Bluetooth®* while Apple CarPlay is connected.

Phone Setup P. 317

For details on countries and regions where Apple CarPlay is available, as well as information pertaining to function, refer to the Apple homepage.

### Apple CarPlay Menu

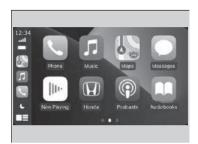

#### Phone

Access the contact list, make phone calls, or listen to voice mail.

#### • Music

Play music stored on your iPhone.

### Maps

Display Apple Maps and use the navigation function just as you would on your iPhone

#### Messages

Check and reply to text messages, or have messages read to you.

#### • Honda

Select the Honda icon to go back to the home screen.

### • [ ]

Go back to the Apple CarPlay menu screen.

#### ■ Apple CarPlay

# Apple CarPlay Operating Requirements & Limitations

Apple CarPlay requires a compatible iPhone with an active mobile connection and data plan. Your carrier's rate plans will apply.

Changes in operating systems, hardware, software, and other technology integral to providing Apple CarPlay functionality, as well as new or revised governmental regulations, may result in a decrease or cessation of Apple CarPlay functionality and services. Honda cannot and does not provide any warranty or guarantee of future Apple CarPlay performance or functionality.

It is possible to use 3rd party apps if they are compatible with Apple CarPlay. Refer to the Apple homepage for information on compatible apps.

### Setting Up Apple CarPlay

After you have connected your iPhone to the system via the USB port or wirelessly, use the following procedure to set up Apple CarPlay. Use of Apple CarPlay will result in the transmission of certain user and vehicle information (such as vehicle location, speed, and status) to your iPhone to enhance the Apple CarPlay experience. You will need to consent to the sharing of this information on the audio/information screen.

# Enabling Apple CarPlay

### ■ Connecting Apple CarPlay using the USB cable to the USB port

- **1.** Connect the iPhone to the USB port using the USB cable.
  - USB Ports P. 243
  - ► The confirmation screen will be displayed.
- 2. Select Yes.
  - ▶ If you do not want to connect Apple CarPlay, select **No**.

You may change the consent settings under the **Smartphone Connection** settings menu.

### ■ Connect Apple CarPlay wirelessly

- 1. Pair and connect the iPhone to the vehicle's Hands-Free Telephone (HFT) system. 

  ▶ Phone Setup P. 317
- 2. Check the box on Apple CarPlay.
  - ▶ If you select **Apple CarPlay**, you cannot select **Audio** and **Phone**.
- 3. Select Connect.
  - ▶ If your iPhone asks to accept for connecting Apple CarPlay, accept for connection.

#### Setting Up Apple CarPlay

You can also use the method below to set up Apple CarPlay:
Select General Settings →

Smartphone Connection → Apple CarPlay → Select device

#### Use of user and vehicle information

The use and handling of user and vehicle information transmitted to/from your iPhone by Apple CarPlay is governed by the Apple iOS terms and conditions and Apple's Privacy Policy.

#### ○ Connect Apple CarPlay wirelessly

Wireless Apple CarPlay and Hotspot cannot be used at the same time. When using Apple CarPlay and Hotspot at the same time, connect to Apple CarPlay with a USB cable.

# ■ Operating Apple CarPlay with Siri

Press and hold the 🖟 (talk) button to activate Siri.



1 (Talk) Button

Press and hold to activate Siri.

Press again to deactivate Siri.

Press and release to activate standard voice recognition system.

### ■Operating Apple CarPlay with Siri

Below are examples of questions and commands for Siri:

- What movies are playing today?
- Call dad at work.
- What song is this?
- How's the weather tomorrow?
- Read my latest email.

For more information, please visit www.apple.com/ios/siri.

### Android Auto™

When you connect an Android phone to the audio system via the USB port, Android Auto is automatically initiated. When connected via Android Auto, you can use the audio/information screen to access the Phone, Google Maps (Navigation), Google Play Music, and Google Now functions. When you first use Android Auto, a tutorial will appear on the screen.

We recommend that you complete this tutorial while safely parked before using Android Auto.

- USB Ports P. 243
- **▶ Auto Pairing Connection** P. 293



Android Auto

#### Android Auto™

We recommend that you update Android OS to the latest version when using Android Auto.

Bluetooth A2DP cannot be used while your phone is connected to Android Auto.

To use Android Auto on a smartphone with Android 9.0 (Pie) or earlier, you need to download the Android Auto app from Google Play to your smartphone.

Park in a safe place before connecting your Android phone to Android Auto and when launching any compatible apps.

To use Android Auto, connect the USB cable to the USB port.

USB Ports P. 243

When your Android phone is connected to Android Auto, it is not possible to use the *Bluetooth*® Audio. However, other previously paired phones can stream audio via *Bluetooth*® while Android Auto is connected.

Phone Setup P. 317

Android Auto is a trademark of Google LLC.

#### Android Auto Menu



### Maps

Display Google Maps and use the navigation function just as you would with your Android phone. When the vehicle is in motion, it is not possible to make keyboard entries. Stop the vehicle in a safe location to undertake a search or provide other inputs.

Phone

Make and receive phone calls as well as listen to voicemail.

- Honda
- 🌓

Operate Android Auto with your voice.

· Þ

You can check Android notifications.

(Android Auto Home)

 Display useful information

Display useful information organised by Android Auto into simple cards that appear just when they're needed.

#### 

For details on countries and regions where Android Auto is available, as well as information pertaining to function, refer to the Android Auto homepage.

Screens may differ depending on the version of the Android Auto app you are using.

# Android Auto Operating Requirements & Limitations

Android Auto requires a compatible Android phone with an active mobile connection and data plan. Your carrier's rate plans will apply.

Changes in operating systems, hardware, software, and other technology integral to providing Android Auto functionality, as well as new or revised governmental regulations, may result in a decrease or cessation of Android Auto functionality and services. Honda cannot and does not provide any warranty or guarantee of future Android Auto performance or functionality.

It is possible to use 3rd party apps if they are compatible with Android Auto. Refer to the Android Auto homepage for information on compatible apps.

### Auto Pairing Connection

When you connect an Android phone to the unit via the USB port, Android Auto is automatically initiated.

### **■** Enabling Android Auto

To enable Android Auto after connecting an Android phone to the system, select **Yes** on the screen.

You may change the consent settings under the **Smartphone Connection** settings menu.

#### Enabling Android Auto

Only initialise Android Auto when you are safely parked. When Android Auto first detects your phone, you will need to set up your phone so that auto pairing is possible. Refer to the instruction manual that came with your phone.

You can use the method below to change Android Auto settings after you have completed the initial setup:

Select General Settings →
Smartphone Connection → Android Auto →
Select device

### Use of user and vehicle information

The use and handling of user and vehicle information transmitted to/from your phone by Android Auto is governed by the Google's Privacy Policy.

# ■ Operating Android Auto with Voice Recognition

Press and hold the 🖟 (talk) button to operate Android Auto with your voice.



1 (Talk) Button

Press and hold to operate Android Auto with your voice. Press and release to activate standard voice recognition system.

#### ■ Operating Android Auto with Voice Recognition

Below are examples of commands you can give with voice recognition:

- Reply to text.
- Call my wife.
- Navigate to Honda.
- Play my music.
- Send a text message to my wife.
- Call flower shop.

For more information, please refer to the Android Auto homepage.


You can also activate the voice recognition function by selecting the icon in the lower-left corner of the screen.

### **Customized Features**

Use the audio/information screen to customize certain features.

# How to Customize the General Settings

With the power mode in ON, select **General Settings**, then select a setting item.

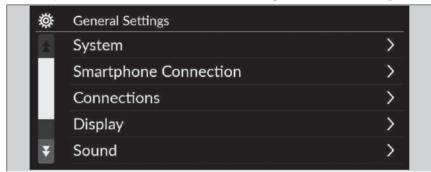

- **System ≥** P. 296
- Smartphone Connection **≥** P. 298
- Connections ▶ P. 299
- **Display ≥** P. 300
- **Sound** ▶ P. 300
- Camera P. 301
- Voice Control ₽ P. 301

#### ○ Customized Features

When you customize settings, make sure that the vehicle is at a complete stop and set the parking brake.

# **■** System

Custor	Customizable Features		Description	Selectable Settings
		Automatic Date & Time	Selects <b>ON</b> to have the GPS automatically adjust the clock. Select <b>OFF</b> to cancel this function.	ON*1/OFF
	Set Date & Time	Set Date	Adjusts date.  Adjusting the Clock P. 258	Day/Month/Year
		Set Time	Adjusts time.  Adjusting the Clock P. 258	Hour/Minute AM/PM
Date & Time	Time Zone	Automatic Time Zone	Sets the audio system to automatically adjust the clock when driving through different time zones.	Models with navigation system  ON*1/OFF  Models without navigation system  ON/OFF*1
		(Select time zone)	Changes the time zone manually.	_
	Auto Daylight Saving Time		Sets the clock to update based on daylight savings time.	ON*1/OFF
	Date For	mat	Select a date format.	MM/DD/YYYY/ DD/MM/YYYY*1/YYYY/ MM/DD
	Time For	mat	Select a time format.	12-H*1/24-H

<sup>\*1:</sup>Default Setting

<b>Customizable Features</b>		Description	Selectable Settings
Language		Changes the driver information interface and audio/information screen language separately.	<b>English</b> *1or <b>Turkish</b> *1 See other selectable languages on the screen.
Touch Panel Sensitivity		Sets the sensitivity of the touch panel screen.	High/Normal*1
	System Sounds	Sets the system sound volume level.	<del>_</del>
	Text-to-Speech	Sets the text-to-speech volume level.	_
System Volumes	Navigation Guidance	Sets the navigation guidance volume level.	_
	Phone Calls	Sets the phone call volume level.	_
	Default	Resets all <b>System Volumes</b> settings to default values.	
Location and vehicle data sharing*	Location and vehicle data sharing	Turns the data sharing setting on and off.  ■ Start Up P. 240	ON/OFF*1
Refuel Recommend*		Turns the refuel recommend function on and off. <b>► Refuel Recommend*</b> P. 370	ON*1/OFF

<sup>\*1:</sup>Default Setting

\* Not available on all models

Customizable Features		Description	Selectable Settings	
	Status		_	
	Legal Information			
A basse	Model Number	Displays the Andreid setting items		
About	Android Version	— Displays the Android setting items.		
	Kernel Version	_		
	Build Number	_		
Factory Data Reset		Resets all the settings to their factory default.  Defaulting All the Settings P. 309	Continue/Cancel	
Detail Information	App Manager	Displays the Android system memory and apps information.	_	

# **■** Smartphone Connection

<b>Customizable Features</b>		Description	Selectable Settings
Apple CarPlay	+ Connect New Device	Pairs a new phone to Apple CarPlay.  ▶ Phone Setup P. 317	_
Apple CarPlay	(Saved Devices)	Connects, disconnects, or deletes a paired phone.  ▶ Phone Setup P. 317	_
Android Auto	(Saved Devices)	Connects, disconnects, or deletes a paired phone.   ▶ Phone Setup P. 317	_

### **■** Connections

Customizable Features		Features	Description	Selectable Settings
Change Mode		lode	Changes the Wi-Fi mode.	Network/ Smartphone*2/OFF*1
Wi-Fi	(Available Networks/Connected Devices)		Displays the available network(s) or current connected device(s).	-
	Options	Add Network	Adds a new network to connect Wi-Fi.	_
		Saved Networks	Saves the connected network.	_
	Options Bluetooth Priority Dev	Bluetooth	Turns the <i>Bluetooth</i> ® on and off.	ON*1/OFF
		Priority Device	Sets a device as the priority device.	
+ Connect New Device (Saved Devices)		New Device	Pairs a new phone to HFT.  ▶ Phone Setup P. 317	_
		rices)	Connects, disconnects, or deletes a paired phone.  ▶ Phone Setup P. 317	_

<sup>\*1:</sup>Default Setting
\*2:Appears only when Apple CarPlay is connected.

# **■** Display

Customizable Features	Description	Selectable Settings
Brightness	Changes the brightness of the audio/information screen.	_
Contrast	Changes the contrast of the audio/information screen.	_
Black Level	Changes the black level of the audio/information screen.	_
Default	Resets all customized settings for the brightness, contrast, and black level.	_

# **■** Sound

Customiza	ble Features	Description	Selectable Settings
	Treble		
Bass / Treble	Midrange Bass	Adjusts the settings of the audio speakers' sound.  Adjusting the Sound P. 261	
			_
Balance / Fader			
Speed Volume Compensation			

### **■** Camera

Customizable Features		Description	Selectable Settings
	Fixed Guideline	Shows the guideline that does not move with the steering wheel.  Multi-View Rear Camera P. 511	ON*1/OFF
Rear Camera	Dynamic Guideline	Shows the guideline that moves with the steering wheel.  Multi-View Rear Camera P. 511	ON*1/OFF
Cross Traffic Monitor*		Shows arrows on the rear camera image to indicate vehicles approaching from the sides.  ▶ Cross Traffic Monitor* P. 507	ON*1/OFF

<sup>\*1:</sup>Default Setting

### **■** Voice Control

Customizable Features	Description	Selectable Settings
Voice Control Mode	Selects a mode of the voice portal screen.  ▶ Voice Control Operation P. 247	Assist/Normal*1

<sup>\*1:</sup>Default Setting

# ■ How to Customize the Vehicle Settings

With the power mode in ON, select **Vehicle Settings**, then select a setting item.



- **Deflation warning system ▶** P. 303
- Driver assist system setup 
  ▶ P. 303
- Meter setup 

  P. 304
- Keyless access setup 
  ▶ P. 306
- Lighting setup 

  P. 306
- **Door/window setup** ▶ P. 307
- INDIVIDUAL Settings 
  ▶ P. 307
- Maintenance info. ▶ P. 308

#### ∑How to Customize the Vehicle Settings

If **Vehicle Settings** is not displayed on the home screen, select All **Apps**. You can change the displayed icons on the home screen.

**■ App Shortcut Function** P. 251

# **■** Deflation warning system

Customizable Features	Description	Selectable Settings
Deflation warning system	Cancels/Calibrates Deflation Warning System.  Deflation Warning System P. 418	Calibrate/Cancel

# ■ Driver assist system setup

Customizable Features	Description	Selectable Settings
Preceding vehicle proximity warning distance	Selects distance for Forward Collision Warning audible and visual alerts.  ■ Collision Mitigation Braking System (CMBS) P. 432	Far/Normal*1/Near
ACC vehicle ahead detected beep	Turns On/Off audible notification when vehicle has moved in/out of adaptive cruise control range.  ▶ Adaptive Cruise Control (ACC) P. 444	ON/OFF*1
Road departure mitigation setting	Selects operating mode of the Road Departure Mitigation system.  ▶ Road Departure Mitigation System P. 474	Early/Normal/Delayed*1
Lane keep assist beep	Selects On/Off the LKAS alert for not detecting road lines.  ▶ Lane Keeping Assist System (LKAS) P. 462	ON/OFF*1
Blind spot information	Selects On/Off the blind spot information system audible alert.  Blind Spot Information System* P. 422	Audible and visual alert*1/ Visual alert only

<sup>\*1:</sup>Default Setting

Customizable Features	Description	Selectable Settings
Traffic sign recognition system display	Displays the traffic sign recognition system on the instrument panel.  Traffic Sign Recognition System P. 482	Display* <sup>1</sup> /None
Traffic sign recognition system over speed warning	Enables over speed limit warning when speed limit is exceeded.  Traffic Sign Recognition System P. 482	ON*1/OFF
Driver attention monitor	Selects alert type for Driver Attention Monitor.  Driver Attention Monitor P. 145	OFF/Tactile alert only/ Tactile and audible alert*1
Rev match system	Selects On/Off the rev match system.  ▶ Rev Match System P. 383	ON*1/OFF

<sup>\*1:</sup>Default Setting

# ■ Meter setup

<b>Customizable Features</b>	Description	Selectable Settings
Warning message	Selects whether to display the warning message.  Driver Information Interface Warning and Information Messages P. 116	ON/OFF*1
Adjust outside temp. display	Selects to adjust outside temperature reading by a few degrees.  Outside Temperature P. 129	-3°C ~ ±0°C*1 ~ +3°C
Gear position display	Turns on and off the gear position display feature.  ■ Gear Position Indicator P. 103	ON*1/OFF

<sup>\*1:</sup>Default Setting

Customizable Features	Description	Selectable Settings
Trip A reset timing	Selects the timing to reset Trip A.  ■ Range/Fuel/Odometer/Trip Meter P. 140 ■ Speed/Time/Odometer/Trip Meter P. 142	When fully refueled/When ignition is turned OFF/Manual reset*1
Trip B reset timing	Selects the timing to reset Trip B.  ■ Range/Fuel/Odometer/Trip Meter P. 140 ■ Speed/Time/Odometer/Trip Meter P. 142	When fully refueled/When ignition is turned OFF/Manual reset*1
Alarm volume control	Changes volume level of all system warnings, door opening warning and indicator.	Max/Mid*1/Min
Rev. indicator	Turns the rev indicators on and off.  ▶ Rev Indicators P. 132	ON*1/OFF
Turn by turn display	Turns on/off the pop-up warning in the turn-by-turn navigation in the driver information interface.  Turn-by-Turn Directions P. 143	ON*1/OFF
Speed/distance units	Selects the trip computer units.  ■ Speed/Distance Units P. 154	Left-hand drive type km/h·km*1/mph·miles Right-hand drive type km/h·km/mph·miles*1
Rear seat reminder	Turns the Rear Seat Reminder feature on and off.  ▶ Rear Seat Reminder P. 207	ON*1/OFF
Shift up alarm	Changes whether alarm sounds when the tachometer reading approaches the red zone.  Tachometer P. 128	ON*1/OFF

<sup>\*1:</sup>Default Setting

# ■ Keyless access setup

Customizable Features	Description	Selectable Settings
Door unlock mode	Selects which door unlocks when grabbing the driver's door handle.	Driver door only*1/All doors
Keyless access light flash	Causes some exterior lights to flash when you unlock/lock the doors.	ON*1/OFF

<sup>\*1:</sup>Default Setting

# **■** Lighting setup

Customizable Features	Description	Selectable Settings
Auto High Beam	Turns on/off auto high beam function.  ▶ Auto High-Beam P. 191	ON*1/OFF
Interior light dimmer duration	Selects the length of time the interior lights stay on after doors are closed.  ▶ Interior Lights P. 210	60sec/30sec*1/15sec
Headlight auto OFF timer	Selects the length of time the exterior lights stay on after you close the driver's door.  Automatic Lighting Off Feature P. 189	60sec/30sec/15sec*1/0sec
Headlight integration with wipers	Selects On/Off headlight function and wiper operation when the headlight is in <b>AUTO</b> setting.  ▶ Headlight Integration with Wipers P. 189	ON*1/OFF

<sup>\*1:</sup>Default Setting

### ■ Door/window setup

Customizable Features	Description	Selectable Settings
Key and remote unlock mode	Selects which door unlocks when using the key or keyless access remote.	Driver door only*1/All doors
Keyless lock notification	Turns On/Off flash of exterior lights when doors are locked/ unlocked by remote.	ON*1/OFF
Auto folding door mirror*	Selects door mirror auto folding operation.	ON*1/OFF
Remote Window Control*	Changes the settings for the remote window control function.	ON*1/OFF
*1.D-flt C-tti		

<sup>\*1:</sup>Default Setting

# ■ INDIVIDUAL Settings

Customizable Features	Description	Selectable Settings
Engine	Selects the responsiveness of the engine.  Customizing the INDIVIDUAL Settings P. 399	COMFORT/SPORT*1/+R
Steering	Selects the level of steering effort.  Customizing the INDIVIDUAL Settings P. 399	COMFORT/SPORT*1/+R
Suspension	Selects the firmness of the suspension.  Customizing the INDIVIDUAL Settings P. 399	COMFORT/SPORT*1/+R
Engine Sound	Selects the effect of Engine Sound.  Customizing the INDIVIDUAL Settings P. 399	COMFORT/SPORT*1/+R
Rev Match	Selects the Rev Match responsiveness.  ■ Customizing the INDIVIDUAL Settings P. 399	COMFORT/SPORT*1

\* Not available on all models

Customizable Features	Description	Selectable Settings
Gauge	Selects the gauges to be displayed in the Driver Information Interface.  Description: Customizing the INDIVIDUAL Settings P. 399	COMFORT/SPORT*1/+R

<sup>\*1:</sup>Default Setting

### ■ Maintenance info.

Customizable Features	Description	Selectable Settings
Maintenance info.	Resets the maintenance information.  Service Reminder System* P. 524	Selects Reset Items

# **Defaulting All the Settings**

Reset all the menu and customized settings as the factory defaults.

# Defaulting General Settings

- **1.** Press the button.
- 2. Select General Settings.
- 3. Select System.
- 4. Select Factory Data Reset.
  - ► A confirmation message appears on the screen.
- **5.** Select **Continue** to reset the settings.
- **6.** Select **Continue** again to reset the settings.
  - ► The system will reboot.

# ■ Defaulting Vehicle Settings

- **1.** Press the toutton.
- 2. Select Vehicle Settings.
- 3. Select Default.
- 4. Select Yes.

### Defaulting All the Settings

When you transfer the vehicle to a third party, reset all settings to default and delete all personal data.

If you perform **Factory Data Reset**, it will reset the preinstalled apps to their factory default.

# **Hands-Free Telephone System**

Hands-Free Telephone (HFT) system allows you to place and receive phone calls using your vehicle's audio system, without handling your mobile phone.

#### ■ HFT Buttons



- **1 VOL** +/**VOL** − (Volume) Switch
- 2 Left Selector Wheel
- **3** 似 (Talk) Button

#### 

Place your phone where you can get good reception.

To use HFT, you need a *Bluetooth*-compatible mobile phone. For a list of compatible phones, pairing procedures, and special feature capabilities, ask a dealer or your local Honda.

To use the system, the **Bluetooth** setting must be **ON**.

Phone Setup P. 317

Voice control tips

- Aim the vents away from the ceiling and close the windows, as noise coming from them may interfere with the microphones.
- Press the figure button when you want to call a number using a phonebook name or a number. Speak clearly and naturally after a beep.
- If the microphone picks up voices other than yours, the command may be misinterpreted.
- To change the volume level, the volume level is able to change by the audio system's volume.

If there is no Favourite contacts entry in the system, the pop-up notification appears on the screen.

Favourite Contacts P. 322

(Talk) button: Press to access Voice Portal.

**Left Selector Wheel:** Roll up or down to select **Phone** on the driver information interface, and then press the left selector wheel.

While receiving a call, the incoming call screen is displayed on the driver information interface. You can pick up the call using the left selector wheel.

Receiving a Call P. 326

#### 

Bluetooth® Wireless Technology


The *Bluetooth*® word mark and logos are registered trademarks owned by *Bluetooth* SIG, Inc., and any use of such marks by Honda Motor Co., Ltd., is under licence. Other trademarks and trade names are those of their respective owners.

#### **HFT Limitations**

An incoming call on HFT will interrupt the audio system when it is playing. It will resume when the call is ended.

# **■ HFT Status Display**

The audio/information screen notifies you when there is an incoming call.

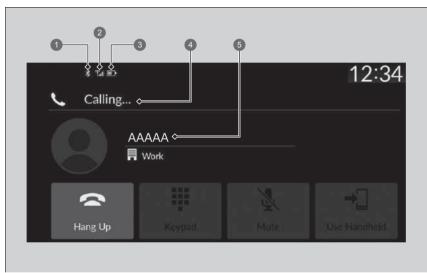

- **1** Bluetooth® Indicator Appears when your phone is connected to HFT.
- 2 Signal Strength
- Battery Level Status
- 4 HFT Mode
- **5** Caller's Name (If registered)/Caller's Number (If not registered)

#### 

The information that appears on the audio/information screen varies between phone models.

# ■ Limitations for Manual Operation


Certain manual functions are disabled or inoperable while the vehicle is in motion. You cannot select a greyed-out option until the vehicle is stopped.

Only previously stored phonebook names, or numbers can be called using voice commands while the vehicle is in motion.

**► Favourite Contacts** P. 322

### ■ HFT Menus

The power mode must be in ACCESSORY or ON to use the system. Select **Phone** to display the phone screen.

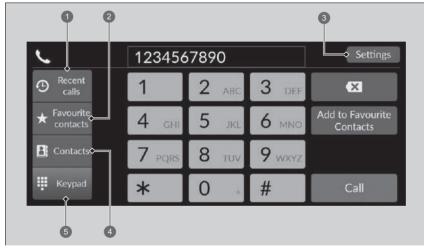

- Recent calls
- Pavourite contacts
- Settings
- Contacts
- 6 Keypad

#### >> HFT Menus

Some functions are limited while driving.

315

**Recent calls:** Displays the last outgoing, incoming, and missed calls.

**▶** To make a call using the recent calls P. 324

**Favourite contacts:** Dials the selected number in the Favourite contacts entry.

To make a call using a Favourite contacts entry P. 324

**Settings:** Changes the phone settings.

**▶ Phone Settings Screen** P. 316

**Contacts:** Displays the phonebook of the paired phone.

**▶** To make a call using the imported phonebook P. 325

**Keypad:** Enters a phone number to dial.

To make a call using a phone number P. 325

# ■ Phone Settings Screen

To display the phone settings screen, select **Settings** on the phone screen.



**Change Devices:** Pairs a new phone to the system and connect, disconnect, or delete a paired device.

Phone Setup P. 317

**Auto Sync Phone:** Sets phonebook and recent calls data to be automatically imported when a phone is paired to HFT.

**■ Automatic Import of Mobile Phonebook and Recent calls** P. 320

**Auto Phone Call Transfer:** Sets calls to automatically transfer from your phone to HFT when you enter the vehicle.

**■ Automatic Transferring** P. 321

**Ringtone:** Selects the ringtone.

Ringtone P. 321

# ■ Phone Setup

### ■ Bluetooth® setup

You can turn Bluetooth® function on and off.

- 1. Press the toutton.
- 2. Select General Settings.
- 3. Select Connections.
- 4. Select Bluetooth.
- **5.** Select **Options**.
- **6.** Select **Bluetooth**, then select **ON**.



- To pair a mobile phone (when there is no phone paired to the system)
- 1. Select Phone.
- 2. Select Connect New Device.
- **3.** Make sure your phone is in search or discoverable mode.
- **4.** Select **Honda HFT** from your phone.
  - ▶ If you want to pair a phone from this audio system, select Search for Devices, and then select your phone when it appears on the list.
- **5.** The system gives you a pairing code on the audio/information screen.
  - Confirm if the pairing code on the screen and your phone match.

    This may vary by a phone.
- **6.** Select desired functions and then select **Connect**.
- **7.** A notification appears on the screen if pairing is successful.
- 8. Select OK.

#### ▶ Phone Setup

Your *Bluetooth*-compatible phone must be paired to the system before you can make and receive handsfree calls.

#### Phone Pairing Tips:

- You cannot pair your phone while the vehicle is moving.
- Up to six phones can be paired.
- Your phone's battery may drain faster when it is paired to the system.

Once you have paired a phone, you can see it displayed on the screen with the following icons.

- **ID**: The phone is compatible with *Bluetooth*® Audio.
- : The phone can be used with HFT.
- E: The phone is compatible with Apple CarPlay.

If there is an active connection to Apple CarPlay pairing of additional *Bluetooth*® compatible devices is unavailable.



#### ■ To change the currently paired phone

- 1. Select Phone.
- 2. Select Settings.
- 3. Select Change Devices.
- **4.** Select a phone to connect.
  - ► HFT disconnects the connected phone and starts searching for another paired phone.
  - ➤ You can set the connected phone priority. Select the box checked on the phone you want to prioritize.
- **5.** Select (audio), (phone), or (Apple CarPlay).
- 6. Select Apply.

### ■ To delete a paired phone

- 1. Select Phone.
- 2. Select Settings.
- 3. Select Change Devices.
- **4.** Select a phone you want to delete.
- 5. Select Delete.
- **6.** A confirmation message appears on the screen. Select **Delete**.

#### ∑To change the currently paired phone

If no other phones are found or paired when trying to switch to another phone, HFT will inform you that the original phone is connected again.

To pair other phones, select **+ Connect New Device** from the **Bluetooth** screen.



# ■ Automatic Import of Mobile Phonebook and Recent calls


When your phone is paired, the contents of its phonebook and recent calls are automatically imported to the system.

- 1. Select Phone.
- 2. Select Settings.
- 3. Select Auto Sync Phone.
- 4. Select ON or OFF.
  - ► The default setting is **ON**.

#### ■ Automatic Import of Mobile Phonebook and Recent calls

On some phones, it is necessary to set up it enabled to be imported the mobile phonebook.

When you select a name from the list in the mobile phonebook, you can see a category icon. The icons indicate what types of numbers are stored for that name.

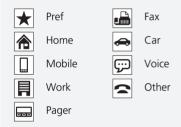

On some phones, it may not be possible to import the category icons to the system.

The phonebook is updated after every connection. Recent calls are updated after every connection or call.

# ■ Automatic Transferring

If you get into the vehicle while you are on the phone, the call can be automatically transferred to HFT

- 1. Select Phone.
- 2. Select Settings.
- 3. Select Auto Phone Call Transfer.
- 4. Select ON or OFF.
  - ► The default setting is **ON**.

# ■ Ringtone

You can change the ringtone setting.


- 1. Select Phone.
- 2. Select Settings.
- 3. Select Ringtone.
- 4. Select Vehicle or Phone.
  - ▶ The default setting is **Phone**.

#### 


**Vehicle**: The fixed ringtone sounds from the speakers.

**Phone**: Depending on the make and model of the mobile phone, the ringtone stored in the phone will sound if the phone is connected.

### ■ Favourite Contacts

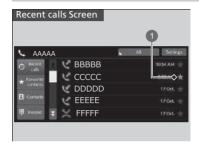

Star Icon

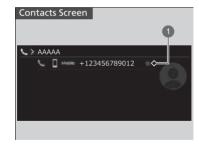

Star Icon

#### ■ To add a Favourite contacts

- 1. Select Phone.
- 2. Select Recent calls, Contacts, or Keypad.

### On the Recent calls or Contacts screen

**3.** Select the star icon.

### On the Keypad screen

- 3. Select Add to Favourite Contacts.
  - ➤ A notification appears on the screen if the Favourite contacts is successfully stored.
  - To remove the Favourite contacts, select the star icon again.



#### Add to Favourite Contacts



#### ■ To edit a Favourite contacts

- 1. Select Phone
- 2. Select Favourite contacts.
- 3. Select Edit on the Favourite contacts entry you want to edit.
- **4.** Select a setting you want.
- 5. Select Done.

#### ■ To delete a Favourite contacts

- 1. Select Phone.
- 2. Select Favourite contacts
- 3. Select Edit on the Favourite contacts entry you want to delete.
- 4. Select Remove.
- **5.** A confirmation message appears on the screen. Select Yes.

## Making a Call



You can make calls by inputting any phone number, or by using the imported **Recent calls**, **Favourite contacts**, and **Contacts** entries.

## ■ To make a call using the recent calls

Recent calls are stored by All, Dialled, Missed, and Received.

- 1. Select Phone.
- 2. Select Recent calls.
  - ➤ You can sort by **All**, **Dialled**, **Missed**, or **Received**. Select the icon on the upper right of the screen.
- 3. Select a number.
  - ▶ Dialling starts automatically.

## ■ To make a call using a Favourite contacts entry

- 1. Select Phone.
- 2. Select Favourite contacts.
  - ▶ You can change the order of Favourite contacts entries by selecting **Reorder**.
- 3. Select a number.
  - ▶ Dialling starts automatically.

#### Making a Call

Once a call is connected, you can hear the voice of the person you are calling through the audio speakers.

While there is an active connection with Apple CarPlay, phone calls cannot be made with Hands-Free Telephone (HFT) system and are only made from Apple CarPlay.

#### ∑To make a call using the recent calls

The recent calls appear only when a phone is connected to the system.

**All:** Displays the last outgoing, incoming, and missed calls.

**Dialled:** Displays the last outgoing calls. **Missed:** Displays the last missed calls. **Received:** Displays the last incoming calls.

## ■ To make a call using the imported phonebook

- 1. Select Phone.
- 2. Select Contacts.
- 3. Select a name.
  - ➤ You can sort by **First Name** or **Surname**. Select the icon on the upper right of the screen.
- 4. Select a number.
  - Dialling starts automatically.

## ■ To make a call using a phone number

- 1. Select Phone.
- 2. Select Keypad.
- 3. Select a number.
  - ▶ Use the keyboard on the touch screen for entering numbers.
- 4. Select Call.
  - ▶ Dialling starts automatically.

# ■ Receiving a Call



When there is an incoming call, an audible notification sounds (if activated) and the **Incoming Call...** screen appears.

You can answer the call using the left selector wheel.

To pick the call, roll up or down to select (answer) on the driver information interface and then press the left selector wheel.

▶ If you want to decline or end the call, select (ignore) on the driver information interface using the left selector wheel.

#### ■ Receiving a Call

Call Waiting

Select (answer) to put the current call on hold to answer the incoming call.


Select using the left selector wheel to return to the current call.

Select (ignore) to ignore the incoming call if you do not want to answer it.

Select sif you want to hang up the current call.

You can select the icons on the audio/information screen instead of and on the driver information interface.

# Options During a Call

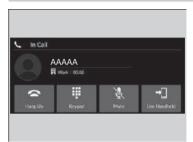

The following options are available during a call.

**Keypad:** Send numbers during a call. This is useful when you call a menu-driven

phone system.

Mute: Mute your voice.

**Use Handheld:** Transfer a call from the system to your phone.

The available options are shown on the lower half of the screen.

Select the option.

► The mute icon appears when **Mute** is selected when the other source screen other than the phone screen is displayed. Select **Mute** again to turn it off.

#### **≥**Options During a Call

You can select the icons on the audio/information screen.

# **Audio Error Messages**

# iPod/USB Flash Drive

If an error occurs while playing an iPod or USB flash drive, you may see the following error messages. If you cannot clear the error message, contact a dealer.

Error Message	Solution	
Connect Retry	Appears when the system does not acknowledge the iPod. Reconnect the iPod.	
Unplayable File	Appears when the files in the USB flash drive are copyright protected or an unsupported format. This error message appears for about a few seconds, then plays the next file.	
No Data	iPod Appears when the iPod is empty.  USB flash drive Appears when the USB flash drive is empty or there are no MP3, WMA, AAC, FLAC, or WAV files in the USB flash drive.  iPod and USB flash drive Check that compatible files are stored on the device.	
Unsupported	Appears when an unsupported device is connected. If it appears when a supported device is connected, reconnect the device.	
No response from device	Appears when the system does not communicate with a connected device. If it appears when a device is connected, contact your place of device purchase.	
USB hub not supported	Appears when only a HUB is connected. If it appears, connect a USB flash drive to the HUB.	
A charging error has occurred with the connected USB device. When safe please check the compatibility of the device and USB cable and try again.	Appears when an incompatible device is connected. Disconnect the device. Then turn the audio system off, and turn it on again. Do not reconnect the device that caused the error.	

# General Information on the Audio System

# Compatible iPod, iPhone, and USB Flash Drives

## ■ iPod and iPhone Model Compatibility

#### Model

Made for iPod touch (5th to 6th generation) released between 2012 and 2015 Made for iPhone 4s/iPhone 5/iPhone 5s/iPhone 5c/iPhone 6/iPhone 6 Plus/iPhone 6S/iPhone 6S Plus/iPhone 8FiPhone 7/iPhone 7 Plus/iPhone 8FiPhone 8 Plus/iPhone XS/iPhone XS/iPhone XS/iPhone XS/iPhone 11 Pro/iPhone 11 Pro Max

#### USB Flash Drives

- A USB flash drive of 256 MB or higher is recommended.
- Some digital audio players may not be compatible.
- Some USB flash drives (e.g., a device with security lockout) may not work.
- Some software files may not allow for audio play or text data display.
- Each audio system is compatible the following formats. Some versions of the formats may be unsupported.
   MP3, WMA, AAC, FLAC, PCM/WAVE, MP4, AVI, MKV, ASF/WMV

#### 

This system may not work with all software versions of these devices.

#### **≥** USB Flash Drives

Files on the USB flash drive are played in their stored order. This order may be different from the order displayed on your PC or device.

# ■ Recommended Devices

#### ■ MP4 File

Media	USB Flash Drive		
Profile (MP4 version)	BaselineProfile/Level 3, MailProfile/Level 3.1 SimpleProfile/Level 5 (MPEG4) (MPEG4-AVC)		
File extension (MP4 version)	.mp4/.m4v		
Compatible audio codec	AAC, MP3		
Compatible video codec	MPEG4-AVC (H.264) MPEG4 (ISO/IEC 14496 Pa		
Bit rate	10 Mbps, 14 Mbps (MPEG4-AVC) 8 Mbps (MPEG4)		
Maximum image	1,280 × 720 pixels (MPEG4-AVC)	720 × 576 pixels (MPEG4)	

## ■ AVI File

Media	USB Flash Drive		
Profile (AVI version)	BaselineProfile/Level 3, MailProfile/Level 3.1 (MPEG4-AVC)	SimpleProfile/Level 5 (MPEG4)	AdvancedProfile/Level 2, MainProfile/Level Medium, SimpleProfile/Level Medium (VC-1)
File extension (AVI version)		.avi	
Compatible audio codec		AAC, MP3, WMA	
Compatible video codec	MPEG4-AVC (H.264)	MPEG4 (ISO/IEC 14496 Part.2)	VC-1
Bit rate	10 Mbps, 14 Mbps (MPEG4-AVC)	8 Mbps (MPEG4)	20 Mbps, 10 Mbps, 384 kbps (VC-1)
Maximum image	1,280 × 720 pixels (MPEG4-AVC)	720 × 576 pixels (MPEG4)	1,280 × 720 pixels, 720 x 480 pixels, 352 x 288 pixels (VC-1)

## **■** MKV File

Media	USB Flash Drive		
Profile (MKV version)	BaselineProfile/Level 3, MailProfile/Level 3.1 (MPEG4-AVC)	SimpleProfile/Level 5 (MPEG4)	AdvancedProfile/Level 2, MainProfile/Level Medium, SimpleProfile/Level Medium (VC-1)
File extension (MKV version)		.mkv	
Compatible audio codec		AAC, MP3	
Compatible video codec	MPEG4-AVC (H.264)	MPEG4 (ISO/IEC 14496 Part.2)	VC-1
Bit rate	10 Mbps, 14 Mbps (MPEG4-AVC)	8 Mbps (MPEG4)	20 Mbps, 10 Mbps, 384 kbps (VC-1)
Maximum image	1,280 × 720 pixels (MPEG4-AVC)	720 × 576 pixels (MPEG4)	1,280 × 720 pixels, 720 x 480 pixels, 352 x 288 pixels (VC-1)

## ■ ASF/WMV File

Media	USB Flash Drive		
Profile (ASF/WMV version)	BaselineProfile/Level 3, AdvancedProfile/Level 2, MailProfile/Level 3.1 MainProfile/Level Medium, (MPEG4-AVC) SimpleProfile/Level Medium (VC		
File extension (ASF/WMV version)	asf/.wmv		
Compatible audio codec	WMA		
Compatible video codec	MPEG4-AVC (H.264) VC-1		
Bit rate	10 Mbps, 14 Mbps (MPEG4-AVC) 20 Mbps, 10 Mbps, 384 kbps (		
Maximum image	1,280 × 720 pixels (MPEG4-AVC) 1,280 × 720 pixels (MPEG4-AVC) 720 x 480 pixel 352 x 288 pixels (V		

# **About Open Source Licences**

To see the open source licence information, follow these steps.

- 1. Select General Settings.
- 2. Select System.
- 3. Select About.
- **4.** Select **Legal Information**.

## **Licence Information**

#### Bluetooth

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Panasonic Automotive Systems Co., Ltd. is under license. Other trademarks and trade names are those of their respective owners.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by MITSUBISHI ELECTRIC is under license. Other trademarks and trade names are those of their respective owners.

https://www.bluetooth.com/develop-with-bluetooth/marketing-branding/




## **Windows Media**

This product is protected by certain intellectual property rights of Microsoft. Use or distribution of such technology outside of this product is prohibited without a license from Microsoft

# Apple

"Made for iPod," and "Made for iPhone," mean that an electronic accessory has been designed to connect specifically to iPod, or iPhone, respectively, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Please note that the use of this accessory with iPod, or iPhone, may affect wireless performance.

Apple, the Apple Logo, iPhone, iPod touch are trademarks of Apple Inc., registered in the U.S. and other countries. Apple CarPlay, iPod, iPhone, iTunes, Siri and Lightning are trademarks of Apple Inc. App Store is a service mark of Apple Inc.

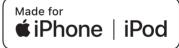

#### MPEG

Mpeq4 Visual

THIS PRODUCT IS LICENSED UNDER THE MPEG-4 VISUAL PATENT PORTFOLIO LICENSE FOR THE PERSONAL AND NON-COMMERCIAL USE OF A CONSUMER FOR (i) ENCODING VIDEO IN COMPLIANCE WITH THE MPEG-4 VISUALA STANDARD ("MPEG-4 VIDEO") AND/OR (ii) DECODING MPEG-4 VIDEO THAT WAS ENCODED BY A CONSUMER ENGAGED IN A PERSONAL AND NONCOMMERCIAL ACTIVITY AND/OR WAS OBTAINED FROM A VIDEO PROVIDER LICENSED BY MPEG LA TO PROVIDE MPEG-4 VIDEO. NO LICENSE IS GRANTED OR SHALL BE IMPLIED FOR ANY OTHER USE. ADDITIONAL INFORMATION INCLUDING THAT RELATING TO PROMOTIONAL, INTERNAL AND COMMERCIAL USES AND LICENSING MAY BE OBTAINED FROM MPEG LA, LLC. SEE HTTP://WWW.MPEGLA.COM.

VC-1

THIS PRODUCT IS LICENSED UNDER THE VC-1 PATENT PORTFOLIO LICENSE FOR THE PERSONAL AND NON-COMMERCIAL USE OF A CONSUMER TO (i) ENCODE VIDEO IN COMPLIANCE WITH THE VC-1 STANDARD ("VC-1 VIDEO") AND/OR (ii) DECODE VC-1 VIDEO THAT WAS ENCODED BY A CONSUMER ENGAGED IN A PERSONAL AND NON-COMMERCIAL ACTIVITY AND/OR WAS OBTAINED FROM A VIDEO PROVIDER LICENSED TO PROVIDE VC-1 VIDEO. NO LICENSE IS GRANTED OR SHALL BE IMPLIED FOR ANY OTHER USE.

ADDITIONAL INFORMATION MAY BE OBTAINED FROM MPEG LA, L.L.C. SEE HTTP://WWW.MPEGLA.COM.

#### AVC/H.264

THIS PRODUCT IS LICENSED UNDER THE AVC PATENT PORTFOLIO LICENSE FOR THE PERSONAL AND NONCOMMERCIAL USE OF A CONSUMER TO (i) ENCODE VIDEO IN COMPLIANCE WITH THE AVC STANDARD ("AVC VIDEO") AND/OR (ii) DECODE AVC VIDEO THAT WAS ENCODED BY A CONSUMER ENGAGED IN A PERSONAL AND NON-COMMERCIAL ACTIVITY AND/OR WAS OBTAINED FROM A VIDEO PROVIDER LICENSED TO PROVIDE AVC VIDEO. NO LICENSE IS GRANTED OR SHALL BE IMPLIED FOR ANY OTHER USE.

ADDITIONAL INFORMATION MAY BE OBTAINED FROM MPEG LA, L.L.C. SEE HTTP://WWW.MPEGLA.COM.

# **Legal Information on Apple CarPlay/Android Auto**

#### ■ OWNER'S MANUAL LICENSE/LIABILITY STATEMENTS

USE OF APPLE CARPLAY IS SUBJECT TO YOUR AGREEMENT TO THE CARPLAY TERMS OF USE, WHICH ARE INCLUDED AS PART OF THE APPLE IOS TERMS OF USE. IN SUMMARY, THE CARPLAY TERMS OF USE DISCLAIM APPLE AND ITS SERVICE PROVIDERS' LIABILITY IF THE SERVICES FAIL TO PERFORM CORRECTLY OR ARE DISCONTINUED, STRICTLY LIMIT APPLE AND ITS SERVICE PROVIDERS' OTHER LIABILITIES, DESCRIBE THE KINDS OF USER INFORMATION (INCLUDING, FOR EXAMPLE, VEHICLE LOCATION, VEHICLE SPEED, AND VEHICLE STATUS) BEING GATHERED AND STORED BY APPLE AND ITS SERVICE PROVIDERS, AND DISCLOSE CERTAIN POSSIBLE RISKS ASSOCIATED WITH THE USE OF CARPLAY, INCLUDING THE POTENTIAL FOR DRIVER DISTRACTION. SEE APPLE'S PRIVACY POLICY FOR DETAILS REGARDING APPLE'S USE AND HANDLING OF DATA UPLOADED BY CARPLAY.

USE OF ANDROID AUTO IS SUBJECT TO YOUR AGREEMENT TO THE ANDROID AUTO TERMS OF USE WHICH MUST BE AGREED TO WHEN THE ANDROID AUTO APPLICATION IS DOWNLOADED TO YOUR ANDROID PHONE. IN SUMMARY, THE ANDROID AUTO TERMS OF USE DISCLAIM GOOGLE AND ITS SERVICE PROVIDERS' LIABILITY IF THE SERVICES FAIL TO PERFORM CORRECTLY OR ARE DISCONTINUED, STRICTLY LIMIT GOOGLE AND ITS SERVICE PROVIDERS' OTHER LIABILITIES, DESCRIBE THE KINDS OF USER INFORMATION (INCLUDING, FOR EXAMPLE, VEHICLE LOCATION, VEHICLE SPEED, AND VEHICLE STATUS) BEING GATHERED AND STORED BY GOOGLE AND ITS SERVICE PROVIDERS, AND DISCLOSE CERTAIN POSSIBLE RISKS ASSOCIATED WITH THE USE OF ANDROID AUTO, INCLUDING THE POTENTIAL FOR DRIVER DISTRACTION. SEE GOOGLE'S PRIVACY POLICY FOR DETAILS REGARDING GOOGLE'S USE AND HANDLING OF DATA UPLOADED BY ANDROID AUTO.

## ■ DISCLAIMER OF WARRANTIES; LIMITATION ON LIABILITY

YOU EXPRESSLY ACKNOWLEDGE AND AGREE THAT USE OF APPLE CARPLAY OR ANDROID AUTO ("THE APPLICATIONS") IS AT YOUR SOLE RISK AND THAT THE ENTIRE RISK AS TO SATISFACTORY QUALITY, PERFORMANCE, ACCURACY AND EFFORT IS WITH YOU TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW. AND THAT THE APPLICATIONS AND INFORMATION ON THE APPLICATIONS IS PROVIDED "AS IS" AND "AS AVAILABLE," WITH ALL FAULTS AND WITHOUT WARRANTY OF ANY KIND, AND HONDA HEREBY DISCLAIMS ALL WARRANTIES AND CONDITIONS WITH RESPECT TO THE APPLICATIONS AND INFORMATION ON THE APPLICATIONS, EITHER EXPRESS, IMPLIED OR STATUTORY, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES AND/OR CONDITIONS OF MERCHANTABILITY, SATISFACTORY QUALITY, FITNESS FOR A PARTICULAR PURPOSE, ACCURACY, QUIET ENJOYMENT, AND NON-INFRINGEMENT OF THIRD PARTY RIGHTS. NO ORAL OR WRITTEN INFORMATION OR ADVICE GIVEN BY HONDA OR AN AUTHORISED. REPRESENTATIVE SHALL CREATE A WARRANTY. AS EXAMPLES, AND WITHOUT LIMITATION, HONDA DISCLAIMS ANY WARRANTY REGARDING THE ACCURACY OF DATA PROVIDED BY THE APPLICATIONS, SUCH AS THE ACCURACY OF DIRECTIONS, ESTIMATED TRAVEL TIME, SPEED LIMITS, ROAD CONDITIONS, NEWS, WEATHER, TRAFFIC, OR OTHER CONTENT PROVIDED BY APPLE, GOOGLE, THEIR AFFILIATES. OR THIRD PARTY PROVIDERS: HONDA DOES NOT GUARANTEE AGAINST LOSS OF APPLICATION DATA. WHICH MAY BE LOST AT ANY TIME; HONDA DOES NOT GUARANTEE THAT THE APPLICATIONS OR ANY SERVICES PROVIDED THROUGH THEM WILL BE PROVIDED AT ALL TIMES OR THAT ANY OR ALL SERVICES WILL BE AVAILABLE AT ANY PARTICULAR TIME OR LOCATION. FOR EXAMPLE. SERVICES MAY BE SUSPENDED OR INTERRUPTED WITHOUT NOTICE FOR REPAIR. MAINTENANCE, SECURITY FIXES, UPDATES, ETC., SERVICES MAY BE UNAVAILABLE IN YOUR AREA OR LOCATION, ETC. IN ADDITION, YOU UNDERSTAND THAT CHANGES IN THIRD PARTY TECHNOLOGY OR GOVERNMENT REGULATION MAY RENDER THE SERVICES AND/OR APPLICATIONS OBSOLETE AND/OR UNUSABLE.

TO THE EXTENT NOT PROHIBITED BY LAW, IN NO EVENT SHALL HONDA OR ITS AFFILIATES BE LIABLE FOR PERSONAL INJURY, OR ANY INCIDENTAL, SPECIAL, INDIRECT OR CONSEQUENTIAL DAMAGES WHATSOEVER, INCLUDING, WITHOUT LIMITATION, DAMAGES FOR LOSS OF PROFITS, CORRUPTION OR LOSS OF DATA, FAILURE TO TRANSMIT OR RECEIVE ANY DATA, BUSINESS INTERRUPTION OR ANY OTHER COMMERCIAL DAMAGES OR LOSSES, ARISING OUT OF OR RELATED TO THE APPLICATIONS OR YOUR USE OF OR INABILITY TO USE THE APPLICATIONS OR INFORMATION ON THE APPLICATIONS, HOWEVER CAUSED, REGARDLESS OF THE THEORY OF LIABILITY (CONTRACT, TORT OR OTHERWISE) AND EVEN IF HONDA WERE ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. SOME REGIONS AND JURISDICTIONS MAY DISALLOW THE EXCLUSION OR LIMITATION OF LIABILITY FOR DAMAGES, SO THESE LIMITATIONS AND EXCLUSIONS MAY NOT APPLY TO YOU. THE FOREGOING LIMITATIONS WILL APPLY EVEN IF THE ABOVE STATED REMEDY FAILS OF ITS ESSENTIAL PURPOSE.

# Honda LogR

# **About Honda LogR**

Monitors driving conditions, and lets you record them. By checking the recorded data on the audio/information screen or uploading it to a server\*1, you can compare it with other users' data.

Honda LogR has two modes:

• Auto Score Mode

Evaluates driving performance in everyday situations.

**■ Auto Score Mode** P. 343

• Data Log Mode

Allows you to record and analyze your track driving data.

**Data Log Mode** P. 349

Refer to the commentary in the customize menu for more details on each mode.

Settings P. 361



Honda LogR

#### 

When selling or transferring ownership of a vehicle, the customer is responsible for initialising the system. If user consent cannot be given, do not use the app.

Settings P. 361

When the telematics control unit (TCU) is not available, use Honda LogR through Wi-Fi.

Some features cannot be used while driving.


Some features cannot interact with the maps function.

After starting the engine, logs may not be recorded for a certain amount of time.

Depending on driving conditions or connection status, some features may not be available.

# **Initial Settings**

When you use Honda LogR for the first time, you must read and agree to the user consent before using this application.

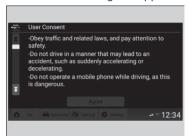

- **1.** Select **Honda LogR** on the home screen.
- **2.** After confirming the user consent, select **Agree**.
- 3. Check the tutorial screen, then select Start.
  - ► If you select **Previous**, the system will return to the user consent screen.

# **Performance Monitor**

You can check your vehicle conditions and view individual scores for different areas of performance.

There are five screens, and you can switch between them as necessary.

Image	Image Name	Description
None Andr Scienting.  Start Data Log  F fold for Press  12  Late Conference  4.48  And Scient Advisorables  Start Data Log  F fold for Press  Late Conference  4.48  -0.63  To Andre Scient Advisorables  Start Data Log  F fold for Press  Late Conference  4.48  -0.63	Default Display	Displays vehicle behavior in the centre of the screen, and vehicle information is displayed in real time on the left and right. The 3D vehicle display in the centre can be changed to the G-meter, which displays the magnitude and direction of forces acting on the vehicle.  You can set a limit value for some vehicle information. If the limit is passed, the corresponding number display will change colour. You can change the limit values, and adjust which items are displayed on-screen, in the customization menu.  Settings P. 361
Berni Auto Boone Log New Auto Branna Blant Data Log	Auto Score Live	Examines performance in areas such as acceleration and deceleration in everyday driving situations, and applies a score to each of them in real time.  Refer to the commentary in the customize menu for more details on each item displayed here.  Settings P. 361

lmage	Image Name	Description
Non-And Society.  Start Data Log  Casters  Start Data Log  Casters  All Start Data Log  Casters  All Start Data Log  Casters  The Casters  All Start Data Log  Casters  The Ca	Tyre Friction Circle Display	Displays the vehicle behavior in the centre of the screen and the forces applied to each tyre by the tyre friction circles.  The 3D vehicle display in the centre can be changed to the G-meter, which displays the direction and magnitude of forces acting on the vehicle.  Refer to the commentary in the customize menu for more details.  Settings P. 361
Hew Auto Eventry.    Shart David Log   Shart Dav	Instrument Panel Display	Displays vehicle information in real time. You can set a limit value for some vehicle information. If the limit is passed, the corresponding number display will change colour. You can change the limit values, and adjust which items are displayed on-screen, in the customize menu.  Settings P. 361
02:25 Section to 02:25 Section to 02:25 Section to 00:04.71 Section to 00:04.71 Section to 00:04.71 Section to 00:04.71 Section to 00:04.75 Section to 00:04.75 Section to 00:04.75 Section to 00:04.75 Section to 00:04.71 Sectio	Measurement Data Log	A mode designed for track driving, displays lap time and vehicle information in real time.

## **Auto Score Mode**

This mode is designed for everyday driving situations.

When you turn on Honda LogR, Auto Score mode is selected automatically. Refer to the commentary in the customize menu for more details.

Settings P. 361

# ■ Saving Auto Score History



Select **Save Auto Score Log** at the top of the performance monitor screen.

Saving will be cancelled if you switch to a screen other than the performance monitor screen before saving is completed.

#### 

When you want to Auto Score mode set to OFF, you can customize on the **Settings** screen.

Settings P. 361

You can get data for up to 99:59.99 continuously. After 99:59.99 elapsed, getting data will be started newly.

#### Saving Auto Score History

Auto Score history is stored even if the power mode is in VEHICLE OFF.

# Checking Auto Score History

By selecting **Auto Score** at the bottom of the performance monitor screen, you can check previously recorded Auto Score data. On the Auto Score history screen, a graph showing the evaluation transition for each situation, such as acceleration and deceleration, is displayed. Also, you can search for scores by date, and data can be sorted by date and score.



Select **Auto Score** at the bottom of the performance monitor screen.

You can search by date.

- **1.** Select **Calendar** at the top of the screen.
- 2. Select a date.

You can sort your history.

- 1. Select Date.
- **2.** Select a category to sort the data by.

#### Except Turkish models

You can change the data storage location to **Local/ My Server**.

- 1. Select Local.
- Select a data storage location from Local/ My Sever.

#### ∑Checking Auto Score History

The date and the 12/24 hour display format matches the main audio display settings.

Settings P. 361

Refer to the commentary in the customize menu for more details on how the scores are generated.

Settings P. 361

If the date changes while driving, the corresponding data will be displayed under the earlier date.

# ■ Checking Detailed Auto Score History





You can view more details by selecting a history item.

You can view separate driving records for each performance item that has been scored. Select the date and time you want to view.

- Separate scores and routes are displayed corresponding to driving performance in areas such as acceleration and deceleration.
- ➤ You can view more detailed information by selecting an area of performance.

You can sort your history.

- 1. Select Scene.
- **2.** Select a category to sort the data by.

#### ○ Checking Detailed Auto Score History

Refer to the commentary in the customize menu for more details on how the scores are generated.

Settings P. 361

By selecting the icon on the map, you can switch between map view and aerial view.

# ■ Checking the Score Log Details for Auto Score History



You can view more detailed information by selecting a scene for a given performance area.

By selecting the play icon, you can also view a time progression of the data.



You can enlarge the graph by selecting it. After it has been enlarged, you can adjust the scale. The vertical axis is adjusted by pinching in or out on the screen, and the horizontal axis is adjusted by selecting the icons.

#### ∑Checking the Score Log Details for Auto Score History

Refer to the commentary in the customize menu for more details on how the scores are generated.

Settings P. 361

By selecting the icon on the map, you can switch between map view and aerial view.

You can enlarge a tyre friction circle by selecting it.

By enlarging the tyre friction circle display, the vehicle displayed in the centre of the screen can be changed to the G-meter which displays the direction of the force applied on the vehicle.



# ■ Deleting Auto Score History



- **1.** Select **Auto Score** at the bottom of the performance monitor screen.
- 2. Select Log Management.



**3.** Select the data you want to delete, then select **Delete** at the top of the screen.

#### **Except Turkish models**

# **■** Uploading Auto Score History


You can upload Auto Score history to the server.



- **1.** Select **Auto Score** at the bottom of the performance monitor screen.
- 2. Select Log Management.



**3.** Select the data you want to upload, then select at the top of the screen.

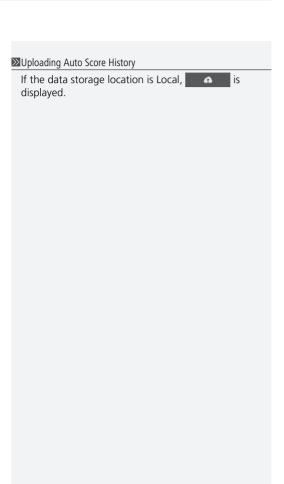

# **Data Log Mode**

This mode is designed for track driving. In addition to the features from Auto Score mode, you can also record lap time data etc.

#### Except Turkish models

By uploading data to the server, you can compare it with other user's data.

Refer to the commentary in the customize menu for more details.

Settings P. 361

# **Starting and Stopping Data Log Mode**



**1.** Select **Start Data Log** at the top of the performance monitor screen.



- **2.** Configure location settings, then select **Start Data Log**.
  - Set location P. 350
  - My location settings P. 351
  - ▶ By selecting Stop Data Log at the top of the performance monitor screen, you can stop the Data Log. After stopping, the driving data for this log will be displayed.

#### 

You can get Log data for up to 99:59.99 continuously. After 99:59.99 elapsed, getting data will be started newly.

#### Starting and Stopping Data Log Mode

When Data Log Mode is activated, the Lap Timer Settings can be turned Auto and manual. If the Lap Timer Settings is Auto, lap times cannot be recorded manually.

Settings P. 361

#### **■** Set location

You can set a location from a list of previously saved locations.






- **1.** Select **Settings** at the bottom of the performance monitor screen.
- 2. Select Data Log Settings.
- **3.** Select **Usage location**.
  - ► You can select **Preset**\*1 or **My Location**.
- **4.** Select a location to use.
  - ► If you want to select a location in a different region, select Country:All at the top right corner of the Location List screen, then change the location.
- **5.** Confirm a Lap line on the map, then select **OK**.
  - If you select **Cancel**, the system will return to the **Location List** screen
  - ► If you pass in the direction of the arrow on the Lap line, the Lap time will be measured

#### ■ My location settings

You can save a new set location.

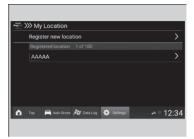



- **1.** Select **Settings** at the bottom of the performance monitor screen.
- 2. Select Data Log Settings.
- 3. Select My Location.
- **4.** Select **Register new location**.
  - ▶ If you select a registered location, the Location Edit screen is displayed, and then location names can be changed. If you select Delete, you can delete saved locations.
- 5. Select Edit.
  - ► If you select Cancel, the system will return to the My Location screen without saving.

#### My location settings

The maximum for a location name is 19 characters.

A maximum of 100 locations can be saved.

By selecting the icon on the map, you can switch between map view and aerial view.

Automatic lap measurement uses a pre-set point start and end line. Please use the map to set your own points for the start and end lines.

Only while data storage location is set to Local, the next Lap time will start to be measured when you cross a set finish line.

You can delete unnecessary Lap times.

**Duploading/Deleting Data Log History**P. 356







- **6.** Search for the point which you want to register on the map, then select **Next**.
- **7.** Set the start and end lines for Automatic LAP Measurement.
  - ► If you want to set the end line to a different point from the start line, select Next, then set a point for the end line.
  - ▶ If you pass in the direction of the arrow on the Lap line, the Lap time will be measured.
- 8. Select Done.

#### 9. Select Save

► If you select Cancel, the system will return to the My Location screen without saving.

# ■ Checking Data Log History

You can check previously saved data logs by selecting **Data Log** at the bottom of the performance monitor screen. On the Data Log history screen, a graph showing the transition for a Lap time is displayed. Also, you can search for Log data by place and date, and you can sort it by date and best lap time.



Select **Data Log** at the bottom of the performance monitor screen.

You can search by location.

- 1. Select Select Location.
- **2.** Select the location you want to be displayed.

You can search by date.

- **1.** Select **Calendar** at the top of the screen.
- 2. Select a date.

You can sort the history.

- 1. Select Date.
- **2.** Select a category to sort the data by.
  - ► If a location has not been selected, you cannot sort by best lap time.

#### **Except Turkish models**

Changing data storage location.

- 1. Select Local.
- Select a data storage location from Local/ My Server/Other Server.

#### ∑Checking Data Log History

Refer to the commentary in the customize menu for more details on how the scores are generated.

Settings P. 361

LAP measurement setting (**Auto/Manual**), location name, and best lap time are displayed.

If the date changes while driving, the corresponding data will be displayed under the earlier date.

# ■ Checking Detailed Data Log History



In the LAP list, each lap has its time, the **Auto/ Manual** setting, and best lap times' heat map displayed. Additionally, you can leave comments and enter weather information for the selected day in your history. User information comments can be viewed in other

When you select the history item you want to

view, previous LAPs are displayed in a list.

You can switch between sorting the list by LAP time or LAP number.

Sorting the list.

user's history.

- 1. Select Lap Time.
- **2.** Select a category to sort the data by.

∑Checking Detailed Data Log History

Refer to the commentary in the customize menu for more details on how the scores are generated.

Settings P. 361

The heat map displays in different colours corresponding to both the degree of acceleration and brake pressure.

At points where both the accelerator and brake are pressed at the same time, only the brake information is displayed.

By selecting the icon on the map, you can switch between map view and aerial view.

The maximum for a condition memo is 45 characters.



# ■ Checking Detailed Lap Data in Data Log History



>>> Lan #02 Details

By selecting an individual lap, you can view detailed driving data for that lap. By selecting the play icon, you can also view a time progression of the data.

You can enlarge a tyre friction circle by selecting it.

You can enlarge the graph by selecting it. After it has been enlarged, you can adjust the scale of the horizontal and vertical axes. Also. you can change which items are displayed. Changing items on the graph display.

1. Select Select Items.



- **2.** Select the items you want to be displayed. ► You can select up to six categories.
- Additionally, by selecting **Score**, you can view the score of the Lap data and the rank corresponding to it.

#### ∑Checking Detailed Lap Data in Data Log History

Refer to the commentary in the customize menu for more details on how the scores are generated.

Settings P. 361

The heat map displays in different colours corresponding to both the degree of acceleration and brake pressure.

At points where both the accelerator and brake are pressed at the same time, only the brake information is displayed.

By selecting the icon on the map, you can switch between map view and aerial view.

# Uploading/Deleting Data Log History



#### Except Turkish models

- Uploading data log history to the server
- 1. Select Log Management.
- **2.** Select the data you want to upload to the server.



## 3. Select

▶ By selecting ♠ ♠ , the selected LAP will be uploaded to the cloud. After the upload is finished, you can choose whether to delete the selected data from Local.

## ■ Deleting data log history

- 1. Select Log Management.
- 2. Select the data you want to delete.
- 3. Select Delete.
  - ▶ If you select **Delete**, the selected data is deleted from either the server\*¹ or the vehicle's storage, depending on your data storage location.

#### ■ Uploading/Deleting Data Log History

# Except Turkish models If My Server is selected as the data storage location, is replaced and , allowing you to adjust privacy settings for the selected data.

If you select \_\_\_\_\_\_\_, the selected data will be made public to other users. If you select \_\_\_\_\_\_\_ the selected data will not be made public to other users.

#### □ Uploading data log history to the server

By uploading data to the server, you can share it with others. (limited to automatic lap measurements and pre-set locations.)

If you switch to another screen (by pressing the home button, etc.) in the middle of uploading, the upload will be cancelled. Afterwards, when you return to the in-vehicle app a pop-up notification will display informing you that the operation has been cancelled.

All driving data is uploaded to the server not only while measuring Lap data, but also while Data Log mode is activated.

# Deleting Lap Data from the Data Log History





- 1. Select Log Management.
- 2. Select the LAP you want to delete.
- 3. Select Delete.
  - ▶ By selecting **Delete**, the selected LAP can be deleted from the Log. Also, you can select whether to save as new Log data, or to overwrite the data with the LAP removed.

#### Deleting Lap Data from the Data Log History

The heat map displays in different colours corresponding to both the degree of acceleration and brake pressure.

At points where both the accelerator and brake are pressed at the same time, only the brake information is displayed.

#### **Except Turkish models**


If the data is saved to **My Server** or **Other Server**, **Log Management** will not be displayed.

#### ■ VS Mode

This feature allows you to compare your driving history against separate lap data or another user's driving data.



- **1.** Go to the detailed Lap Data in the data log history screen.
- **2.** Select **Vs Mode** at the top of the screen.

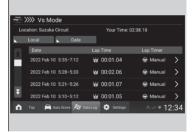

**3.** Select the history item you want to compare.

#### Except Turkish models

By selecting Local, you can select where to save the data to from Local/My Server/Other Server.

#### All models

▶ By selecting **Date**, you can rearrange the data.

#### **≫**VS Mode

#### Except Turkish models

Only data recorded with a pre-set location using automatic lap measurements can be used for comparison against other users' data.

#### Except Turkish models

If **Other Server** is selected as the data storage destination:

- Displayed items are changed to Date/Lap Time/ User ID/Favourite.
- You can search by users saved to your favourites.
- You can search by User ID. User IDs will only appear on a search if they are an exact match.



**4.** Select the data you want to compare against.

#### ■ VS Mode Comparison Screen



When using the graph display, you can change which items are displayed.

By swiping or touching the screen, you can

By selecting the play icon, you can also view a

You can select whether to compare by time

choose various situations for comparison.

time progression of the data.

elapsed or by mileage.



Changing items on the graph display.

- 1. Select Select Items.
- **2.** Select the items you want to be displayed.
  - ➤ You can select up to four categories.

#### **≥**VS Mode Comparison Screen

Refer to the commentary in the customize menu for more details on how the scores are generated.

Settings P. 361

By selecting the icon on the map, you can switch between map view and aerial view.

You can view a user's profile by selecting their nickname. (Not applicable to areas where the server is inaccessible.)

## **Customize**

By selecting **Settings** at the bottom of the performance monitor, you can change the settings for various features.



## Settings

Setting Item			Overview	Options
Data Log Settings	Lap Timer Settings		You can set how the data logs' lap measurements are performed.	Auto*¹/Manual
	Usage location		You can select saved locations. Refer to the page below for more details.  ▶ Set location P. 350	_
	My Location	Register new location	You can enter and save a location name. You can save by the LAPs start and end line on the	
		Registered location	map. Refer to the page below for more details.  ▶ My location settings P. 351	_
Auto Score Settings			You can set the Auto Score on or off.	ON*1/OFF
User information			Displays your User ID, nickname, and comment.	_
Smartphone App Login Information		mation	Displays User ID and PIN for use with the smartphone app.	-

<sup>\*1:</sup>Default setting

Setting Item			Overview	Options
Vehicle Information View Settings	Center Display indication settings		You can select six items to be displayed in the performance monitor and instrument panel. These items can be rearranged by selecting ▲ or ▼, or by using the Drag & Drop function.	Water Temp.*1/Oil Temp.*1/Oil Pressure*1/Ext. Air Temp.*1/ Intake Air Temp.*1/Boost Pressure*1/Steering Angle/Accel. Ped. Pos./Brake Pressure/Clutch Ped. Pos./Yaw Rate/Atmos. Pressure
	Meter indication item settings			Water Temp.*1/Oil Temp.*1/Oil Pressure*1/Ext. Air Temp.*1/ Intake Air Temp.*1/Boost Pressure*1/Steering Angle/Accel. Ped. Pos./Brake Pressure/Clutch Ped. Pos./Yaw Rate/Atmos. Pressure
	Limit settings	Water Temp.	You can set the limit values for vehicle information displayed in the performance monitor and instrument panel.	OFF*1 80 to 120 (1°C increments) If units are set to Fahrenheit 170 to 250 (1°F increments).
		Oil Temp.		OFF*1 90 to 130 (1°C increments) If units are set to Fahrenheit 190 to 270 (1°F increments).
	G-meter max scale settings		You can change the operating sensitivity of the Gmeter and 3D vehicle display.	0.5G*1/1.5G

<sup>\*1:</sup>Default setting


Setting Item			Overview	Options
3D Vehicle Colour Settings			You can set and display vehicle's colour information. You can select the vehicle colour, and the changes will reflect on the 3D vehicle display.	Vehicle colour
Log Management	Import		You can import files generated by the in-vehicle apps export function. When multiple files are in the image folder, a timestamp is included in new file names.	_
	Export		You can export data stored on the in-vehicle app (driving logs and setting information) to a USB memory stick.	_
	Delete log		You can delete data stored on the in-vehicle app (drive logs and setting information).	_
	Automatic log deletion settings	Data Log	You can set whether to automatically delete logs in Data Log mode and Auto Score mode.	ON/OFF*1
		Auto Score		ON/OFF*1

<sup>\*1:</sup>Default setting

	Setting Item	Overview	Options
Commentary	Friction circle	You can see how scores are generated for tyre friction circles.	_
	Data Log	You can check the Data Log mode <b>Overview</b> and see how scores are generated for <b>G Average/Balance/Friction circle/Saturation/Variation</b> .	_
	Auto Score	You can check the Auto Score mode <b>Overview</b> and see how scores are generated for <b>Acceleration</b> , <b>Deceleration</b> , <b>Turning</b> , <b>Straight</b> , and <b>Composite</b> .	_
Tutorial		You can re-display the explanations from your first time using Honda LogR.	_
User Consent		Displays the user consent for the in-vehicle app.	_
License information		Displays OSS licence used by the in-vehicle app.	_
Mapbox License		Displays the Mapbox licence used by the in-vehicle app.	_

## **Emergency Call (eCall)**

## **Automatic emergency call**

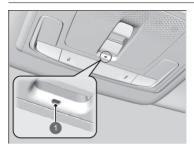

If your vehicle is involved in a collision, the vehicle will attempt to connect to a Public Safety Answering Point (PSAP) operator. Once a connection is established, various information about the vehicle will be sent to a PSAP operator with whom you will be able to speak. This information includes:

#### eCall Indicator

- Vehicle identification number (VIN)
- Type of vehicle (passenger vehicle or light-weight commercial vehicle)
- Type of energy stored for vehicle propulsion (gasoline/diesel/CNG/LPG/electricity/hydrogen)
- Last three locations of the vehicle
- Direction of travel
- Triggering mode (automatic or manual)
- Timestamp

When an emergency call is initiated, the vehicle speakers are disabled so that you can hear the operator.

When the power mode is set to ON, the eCall indicator lights up in green for 1 second, then in red for 1 second.

### Emergency Call (eCall)

Your vehicle is equipped with the 112-based eCall service system.

The 112-based eCall service is a public service of general interest and is accessible free of charge.

The 112-based eCall in-vehicle system is activated when the power mode is set to ON. In the event of a collision, the system will determine the degree of the impact based on information collected from the onboard sensors and, depending on the severity of the collision, will initiate the emergency call.

The 112-based eCall in-vehicle system can also be triggered manually, if needed.

Manual emergency call P. 367

Any processing of personal data through the 112-based eCall in-vehicle system shall comply with the personal data protection rules provided for in Directives 95/46/EC (replaced by 2016/679/EC) and 2002/58/EC, and in particular, shall be based on the necessity to protect the vital interests of the individuals in accordance with Article 7(d) of Directive 95/46/EC (replaced by 2016/679/EC).

Processing of such data is strictly limited to the purpose of for which the single European emergency number 112 is designated.

If the eCall system is working properly, the indicator will light up in green.

- Green: eCall system is ready.
- Blinking in green: eCall system is connected and making an eCall to a PSAP operator.
- Repeating a pattern of short flashes of the red light: The eCall system has failed to connect to an operator. The eCall indicator will continue this pattern for 5 seconds\*1/30 seconds\*2, then it will light up in green.

If the 112-based eCall system is disabled in the event of a critical system failure, the following warning will be given to the occupants of the vehicle:

- Red or blacked out: A problem with the eCall system has occurred. If the indicator stays red or blacked out even after you have restarted the vehicle, have the system check by a dealer.
- Blinking in red: The level of the backup battery is too low. While the power is in ON, the battery undergoes recharging. Once the battery has been recharged to a certain level, the eCall indicator lights up in green.

#### Emergency Call (eCall)

Recipients of data processed by the 112-based eCall in-vehicle system are the relevant public safety answering points designated by the respective public authorities of the country in which they are located and are the first to receive and for which the single European emergency number 112 is designated.

Your vehicle may NOT be able to connect to a PSAP operator if:


- both the 12V battery and backup battery are too low.
- your vehicle is in an area without adequate cellular coverage.
- There is a problem with the eCall system itself or its peripheral equipment such as the microphone or speakers.

The backup battery is designed to operate for at least 3 years, after which it may need to be replaced.

The backup battery is not available for direct purchase. For replacement, visit a dealer.

- \*1: Except Turkish models
- \*2: Turkish models

## Manual emergency call

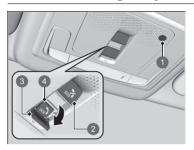

If you need to make an emergency call, you can establish a connection manually: Press the **SOS** button and hold it for more than 0.5 seconds.

To cancel a call, press the **SOS** cancel button for more than 0.5 seconds, before 5 seconds has elapsed since the **SOS** button was pressed.

- Microphone
- 2 SOS Cancel Button
- **3 SOS** Button
- 4 Cover

The **SOS** button is protected by a cover. Open the cover to gain access.

When an emergency call is initiated, the vehicle speakers are disabled so that you can hear the operator.

#### Manual emergency call

Do NOT press the button while you are driving. If you need to contact an operator, park the vehicle in a safe place before you make a call.

If the eCall system at first fails to connect to a PSAP operator, it will try again until a connection is established. However, if 2 minutes have elapsed since the first try was attempted, the system will no longer attempt to establish a connection.

The **SOS** cancel button does not cancel a call once the system is connected to an operator.

#### Emergency Call (eCall)

#### Data privacy

The 112-based eCall in-vehicle system is designed to ensure that:

- Data contained in the system memory is not available outside the system before an eCall is triggered.
- It is not traceable or subject to any constant tracking during its normal operation status.
- Data in the internal memory of the system is automatically and continuously removed.

For the system to function normally, the vehicle location data is constantly overwritten in the internal memory of the system so that the last three locations of the vehicle are kept up-to-date.

The log of activity data in the 112-based eCall invehicle system is kept for no longer than necessary for attaining the purpose of handling the emergency eCall and in any case not beyond 13 hours from the moment an emergency eCall was initiated.

#### Emergency Call (eCall)

#### Owner's rights

The data subject (the vehicle's owner) has a right of access to data and as appropriate to request the rectification, erasure or blocking of data, concerning him or her, the processing of which does not comply with the provisions of Directive 95/46/EC (replaced by 2016/679/EC).

Any third parties to whom the data have been disclosed have to be notified of such rectification, erasure or blocking carried out in compliance with this Directive, unless it proves impossible or involves a disproportionate effort.

The data subject has a right to complain to the competent data protection authority if he or she considers that his or her rights have been infringed as a result of the processing of his or her personal data.

Honda eCall Service Information:


If you have any questions about eCall, contact the office relevant to the country in which you reside. See the service book or your local Honda website for a list of offices.

Your vehicle is equipped with a feature that automatically calculates when to refuel. This feature will notify you when refueling is recommended as well as enable you to search for petrol stations that are located in the vicinity of your vehicle.



- **1.** When it is time to refuel the vehicle, a notification is displayed and a notification icon is displayed in the header.
- 2. Touch the box that contains the icon.

Notification Icon

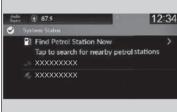

3. Select Find Petrol Station Now.

- 4. Choose a petrol station from the search screen of the navigation system.

  ► For instructions on how to use the
  - For instructions on how to use the navigation system, refer to the navigation system manual.

■ Refuel Recommend \*

You can turn the **Refuel Recommend** function on and off.

**Customized Features** P. 295

When you turn off this feature, the refuel recommend notification will not display.

This feature can only be used when the fuel level in the tank is below 30 percent.

If you select **Find Petrol Station Now** or put more than 5 litres of petrol into the fuel tank, the notification for refueling will disappear. If you prefer not to be notified, select **OFF** in the settings for **Refuel Recommend**.

When you drive on a rough road or ascend or descend a hill for an extended period of time, the notification may disappear or may not be displayed at all.





This chapter discusses driving and refueling.

Before Driving	372
Towing a Trailer	376
When Driving	
Starting the Engine	377
Precautions While Driving	380
Shifting	382
Auto Idle Stop	386
Drive Mode Switch	393
Adjustable Speed Limiter	400
Intelligent Speed Limiter	406
Vehicle Stability Assist (VSA) System	413
Agile Handling Assist	416

Limited Slip Differential (LSD)	. 417
Deflation Warning System	. 418
Blind Spot Information System*	. 422
Adjusting Headlight Distribution	. 427
Honda Sensing	. 428
Collision Mitigation Braking System	
(CMBS)	. 432
Adaptive Cruise Control (ACC)	. 444
Lane Keeping Assist System (LKAS) .	. 462
Road Departure Mitigation System	. 474
Traffic Sign Recognition System	. 482
Front Wide View Camera	. 489

raking	491
Brake System	491
Anti-lock Brake System (ABS)	498
Brake Assist System	499
arking Your Vehicle	501
Iulti-View Rear Camera	511
efueling	513
uel Economy and CO <sub>2</sub> Emissions	516
urbo Engine Vehicle	517

## **Before Driving**

## **Driving Preparation**

Check the following items before you start driving.

### Exterior Checks

- Make sure there are no obstructions on the windows, door mirrors, exterior lights, or other parts of the vehicle.
  - ▶ Remove any frost, snow, or ice.
  - ► Remove any snow on the roof, as this can slip down and obstruct your field of vision while driving. If frozen solid, remove ice once it has softened.
  - ▶ When removing ice from around the wheels, be sure not to damage the wheel or wheel components.
- Make sure the bonnet is securely closed.
  - ▶ If the bonnet opens while driving, your front view will be blocked.
- Make sure the tyres are in good condition.
  - ▶ Check air pressures, and check for damage and excessive wear.

#### **≧** Checking and Maintaining Tyres P. 563

- Make sure there are no people or objects behind or around the vehicle.
  - ▶ There are blind spots from the inside.
- Check the front bumper ducts for mud, leaves, and road debris that could build up and prevent proper cooling performance.

#### 

#### NOTICE

When doors are frozen shut, use warm water around the door edges to melt any ice. Do not try to force them open, as this can damage the rubber trim around the doors. When done, wipe dry to avoid further freezing.

Do not pour warm water into the key cylinder. You will be unable to insert the key if the water freezes in the hole.

Heat from the engine and exhaust can ignite flammable materials left under the bonnet, causing a fire. If you've parked your vehicle for an extended period, inspect and remove any debris that may have collected, such as dried grass and leaves that have fallen or have been carried in for use as a nest by a small animal. Also, check under the bonnet for leftover flammable materials after you or someone else has performed maintenance on your vehicle.

### Interior Checks

- Store or secure all items on board properly.
  - ➤ Carrying too much luggage, or improperly storing it, can affect your vehicle's handling, stability, stopping distance, and tyres, and make it unsafe.
    - Load Limit P. 375
- Do not pile items higher than the seat height.
  - ► They can block your view and may be thrown forward in the event of sudden braking.
- Do not place anything in the front seat footwells. Make sure to secure the floor mat.
  - An object or unsecured floor mat can interfere with your brake and accelerator pedal operation while driving.
- If you have any animals on board, do not let them move around in the vehicle.
  - ▶ They may interfere with driving and a crash could occur.
- Securely close all doors and the hatch.
- Adjust your seating position properly.
  - **Seats** P. 203
- Adjust the mirrors and steering wheel properly.
  - Adjust them while sitting in the proper driving position.
    - Mirrors P. 200
    - Adjusting the Steering Wheel P. 199

#### 

The headlight aim is set by the factory, and does not need to be adjusted. However, if you regularly carry heavy items in the luggage area, have the aiming readjusted at a dealer or by a qualified technician.

Your vehicle is equipped with the automatic headlight adjusting system that automatically adjusts the vertical angle of the low beam headlights.

- Be sure items placed on the floor behind the front seats cannot roll under the seats.
  - ▶ They can interfere with the driver's ability to operate the pedals, or the operation of the seats.
- Everyone in the vehicle must fasten their seat belt.
  - Fastening a Seat Belt P. 45
- Make sure that the indicators in the instrument panel come on when you start the vehicle, and go off soon after.
  - ▶ Always have a dealer check the vehicle if a problem is indicated.
    - **▶ Indicators** P. 98

## **Load Limit**

When you load luggage, the total weight of the vehicle, all passengers, and luggage must not exceed the maximum permissible weight.

**Specifications** P. 642

The load for the front and rear axles also must not exceed the maximum permissible axle weight.

**Specifications** P. 642

#### Load Limit

## **AWARNING**

Overloading or improper loading can affect handling and stability and cause a crash in which you can be hurt or killed.

Follow all load limits and other loading guidelines in this manual.

# Towing a Trailer

Your vehicle is not designed to tow a trailer. Attempting to do so can void your warranties.


## When Driving

## **Starting the Engine**



- **1.** Make sure the parking brake is applied.
  - ➤ The parking brake and brake system indicator (red) comes on for 30 seconds when you pull up the electric parking brake switch.

1 Electric Parking Brake Switch

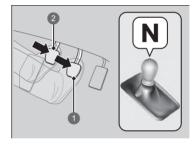

- Brake Pedal
- 2 Clutch Pedal

- **2.** Check that the shift lever is in N. Then, depress the brake pedal with your right foot, and the clutch pedal with your left foot.
  - ➤ The clutch pedal must be fully depressed to start the engine.

#### Starting the Engine

Keep your foot firmly on the brake pedal when starting the engine.

The engine is harder to start in cold weather and in thinner air found at altitudes above 2,400 metres (8,000 feet).

When starting the engine in cold weather, turn off all electrical accessories such as the lights, climate control system, and rear demister in order to reduce battery drain.

If the exhaust system sounds abnormal or you can smell exhaust gas inside the vehicle, have your vehicle checked by a dealer. There may be a problem with the engine or exhaust system.

Bring the keyless remote close to the **ENGINE START/STOP** button if the battery in the keyless remote is weak.

■ If the Keyless Remote Battery is Weak P. 616

The engine may not start if the keyless remote is subjected to strong radio waves.



**3.** Press the **ENGINE START/STOP** button without depressing the accelerator pedal.

### Starting the Engine

Do not hold the **ENGINE START/STOP** button to start the engine.

If the engine does not start, wait at least 30 seconds before starting the engine again.

The immobilizer system protects your vehicle from theft. If an improperly coded device is used, the engine's fuel system is disabled.

**Immobilizer System** P. 174

## Starting to Drive

### ■ Hill start assist system

Hill start assist keeps the brake engaged briefly to help to prevent the vehicle from rolling on inclines as you move your foot from the brake pedal to the accelerator.

Depress the clutch pedal, and shift to one of the forward gears when facing uphill, or  $\boxed{\mathbf{R}}$  when facing downhill, then release the brake pedal.

## ■ Stopping the Engine

You can turn the engine off when the vehicle is completely stopped.

- If the transmission is in  $\boxed{\mathbf{N}}$ , press the **ENGINE START/STOP** button.
- If the transmission is in any gear other than N, depress the clutch pedal, then press the **ENGINE START/STOP** button.

#### Starting to Drive

#### **Engine Restart Function**

If the engine stalls, fully depress the clutch pedal within three seconds. The engine may automatically restart under certain conditions. Otherwise, follow the standard procedure.

#### **Starting the Engine** P. 377

#### 

Hill start assist may not prevent the vehicle from rolling downhill on a very steep or slippery slope, and will not operate on small inclines.

Hill start assist is not a replacement for the parking brake.

Hill start assist will operate even when VSA is switched off.

## **Precautions While Driving**

### ■ In a Fog

Visibility becomes low when it is foggy. When you drive, turn on the low beam headlights even during the daytime. Slow down, using the road line in the centre, guard rails, and the taillights of the vehicle ahead of you as your driving guide.

## In a Strong Wind

If a strong side wind drifts your vehicle while driving, hold the steering wheel tight. Slowly decelerate your vehicle and keep your vehicle in the middle of the road. Be careful with wind gusts especially when your vehicle is exiting a tunnel, driving on a bridge or river bank, and driving through an open area like a quarry, and when a large lorry is passing by.

#### ▶ Precautions While Driving

**CAUTION:** Do not drive on the road where water is deep. Driving through deep water will cause damage to the engine and electrical equipment and the vehicle will break down.

#### NOTICE

If you repeatedly turn the steering wheel at an extremely low speed, or hold the steering wheel in the full left or right position for a while, the electric power steering (EPS) system heats up. The system goes into a protective mode, and limits its performance. The steering wheel becomes harder and harder to operate. Once the system cools down, the EPS system is restored.

Repeated operation under these conditions can eventually damage the system.

If the power mode is set to ACCESSORY while driving, the engine will shut down and all steering and brake power assist functions will stop, making it difficult to control the vehicle.

Do not select  $\boxed{\mathbf{N}}$  while driving as you will lose engine braking (and acceleration) performance.

### ■ In Rain

The road is slippery when raining. Avoid hard braking, rapid acceleration, and abrupt steering and be more cautious when driving. It is likely to experience hydroplaning phenomenon if you are driving on a rutted road with puddles. Do not drive in deep water and on flooded roads. This can damage the engine or driveline, or cause electrical component failure.

### Other Precautions

If there is a strong impact with something under the vehicle, stop in a safe location. Check the underside of the vehicle for damage or any fluid leaks.

#### 

During the first 1,000 km (600 miles) of operation, avoid sudden acceleration or full throttle operation so as not to damage the engine or powertrain.

Avoid hard braking for the first 300 km (200 miles) after purchasing your new vehicle or replacing the brake pads or rotors, to allow for proper break-in.

#### NOTICE

The following can damage the under spoiler, under covers, front bumper, rear diffuser, and side sill:

- Parking the vehicle by a parking block
- Parallel parking along the road shoulder
- Driving towards the bottom of a hill
- Driving up or down to a different surface level (such as a road shoulder)
- Driving on a rutted or bumpy road
- Driving on a road with potholes.
- Driving over speed bump.

#### ≫In Rain

Be careful when hydroplaning phenomenon occurs. When you drive on a road covered with water at excessive speed, a layer of water builds between the tyres and the road surface. If this occurs, the vehicle cannot respond to control inputs such as steering, and braking.


Slowly decelerate when you shift down. If the road is slippery, sudden engine braking can cause the tyres to skid.

## **Shifting**

## Shift Lever Operation

Fully depress the clutch pedal to operate the shift lever and change gears, then slowly release the pedal.

Depress the clutch pedal, and pause for a few seconds before shifting into  $\mathbb{R}$ , or shift into one of the forward gears for a moment. This stops the gears so they do not "grind."

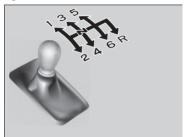

When you are not shifting, do not rest your foot on the clutch pedal. This can cause your clutch to wear out faster.

#### Shift Lever Operation

#### NOTICE

Do not shift to  $\mathbb{R}$  before the vehicle comes to a complete stop.

Shifting to  $\boxed{\mathbf{R}}$  before stopping can damage the transmission.

#### NOTICE

Before downshifting, make sure the engine will not go into the tachometer red zone. Should this occur, it can severely damage your engine.

There is a metallic part on the shift lever. If you leave the vehicle parked outside for a long time on a hot day, be careful before moving the shift lever. Because of heat, the shift lever may be extremely hot. If the outside temperature is low, the shift lever may feel cold.

If you exceed the maximum speed for the gear you are in, the engine speed will enter into the tachometer red zone. When this happens, you may experience a slight jolt.

## ■ Rev Match System

Adjusts the engine's RPM to match the optimal speed of the gear that is about to be engaged.

Drive Mode Switch P. 393

#### **■** Limitations

The rev match system will not activate under the following conditions:

- You are shifting into a lower gear, but the system has determined that the engine will over rev.
- You are shifting into 1st gear from a higher gear.
- Engine RPM is low and you are shifting into a lower gear in sequential order.
- The system has determined that the engine will be at idling speed after you have shifted into a higher gear.
- The clutch pedal is not fully depressed.

The rev match system may deactivate if the clutch pedal is fully depressed for a extended period of time.


#### ■ Rev Match System

You can turn off the rev match system using the audio/information screen.

#### **≧** Customized Features P. 295

If you depress the accelerator pedal while changing gears, the system may give priority to inputs from the accelerator pedal depending on the amount of depression of the accelerator pedal.

If the message below appears, there may be a problem with the system. The rev match system may not operate, but you can perform regular gear shifting. Have the system checked by a dealer.

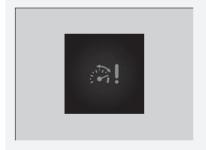

## ■ Shift Up/Down Indicators



3

When using the +R gauge

Come on to notify you that a gear change is recommended in order to maintain fuel efficient driving or to prevent the engine from stalling.

The shift up indicator: Comes on when upshifting is recommended.

The shift down indicator: Comes on when downshifting is recommended.

Shift Up/Down Indicators

## **AWARNING**

The shift indicator is a guide to help you achieve better fuel economy.

Never refer to the Shift Indicators when road and traffic conditions are unsuitable or when it may distract you.

This indicator will not prompt you to downshift to increase engine braking. It is up to you to downshift to increase engine braking when driving downhill.

Always shift down at the appropriate vehicle speed.


The shift down indicator does not come on when downshifting from 2 to 1.

Road and traffic conditions may require you to shift at times other than those indicated

### Reverse Lockout

The manual transmission lockout mechanism that stops you from accidentally shifting into  $\boxed{\mathbf{R}}$  from a forward gear while the vehicle is moving above a certain speed.

If you cannot shift to **R** when the vehicle is stopped, do the following:

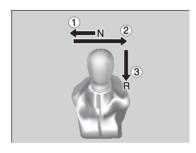


- **1.** Depress the clutch pedal, move the shift lever all the way to the left, and shift to  $\boxed{\mathbf{R}}$ .
- **2.** If you still cannot shift into  $\boxed{\mathbf{R}}$ , apply the parking brake, and set the power mode to ACCESSORY or VEHICLE OFF.
- **3.** Depress the clutch pedal and shift into **R**.
- **4.** Keep depressing the clutch pedal and start the engine.

#### ■ Reverse Lockout

Have your vehicle checked by a dealer if you have to go through this procedure repeatedly.

## **Auto Idle Stop**

To help to maximise fuel economy, the engine automatically stops when the vehicle comes to a stop, depending on environmental and vehicle operating conditions. The indicator (green) comes on at this time.

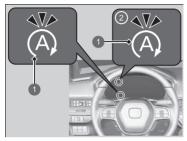

- Auto Idle Stop Indicator (Green)
- 2 When using the +R gauge

The environmental and vehicle conditions that impact Auto Idle Stop system operation are varied.

■ Auto Idle Stop Activates When: P. 389
The engine then restarts once the vehicle is about to move again when you depress the clutch pedal, and the indicator (green) goes off


The Engine Automatically Restarts When: P. 391

If the driver's door is opened while the indicator (green) comes on, a buzzer sounds to notify you that the Auto Idle Stop function is in operation.

A message associated with Auto Idle Stop appears on the driver information interface.

#### 

The 12-volt battery installed in this vehicle is specifically designed for a model with Auto Idle Stop. Using a 12-volt battery other than this specified type may shorten the 12-volt battery life, and prevent Auto Idle Stop from activating. If you need to replace the 12-volt battery, make sure to select the specified type. Ask a dealer for more details.

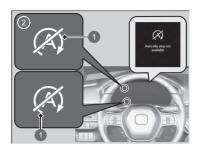

- Auto Idle Stop Suspend Indicator
- ② When using the +R gauge

The Auto Idle Stop suspend indicator comes on and a message appears on the gauge when the Auto Idle Stop system cannot be activated.

- **▶ Indicators** P. 98
- **Auto Idle Stop System ON/OFF** P. 388

## ■ Auto Idle Stop System ON/OFF



- Auto Idle Stop OFF Indicator
- Auto Idle Stop OFF Button
- When using the +R gauge

To turn the Auto Idle Stop system off, press this button. The Auto Idle Stop system stops.

➤ Auto Idle Stop system will stop, the indicator will come on and a message appears on the gauge.

The Auto Idle Stop system is turned on every time you start the engine, even if you turned it off the last time you drove the vehicle.

#### 

If you turn off the Auto Idle Stop system while it is activated, the engine will restart.

**Auto Idle Stop Activates When:** P. 389

If you hold the Auto Idle Stop **OFF** button, you can disable idle stop messages.

Indicators P. 98

### Auto Idle Stop Activates When:

After the vehicle moves forward, stopping with the brake, the clutch pedal fully depressed, the shift lever in  $\boxed{\mathbf{N}}$ , and then the clutch pedal is released.

### ■ Auto Idle Stop does not activate when:

- The Auto Idle Stop **OFF** button is pressed.
- The driver's seat belt is not fastened.
- The engine is not adequately warmed up or coolant temperature is high.
- The vehicle comes to a stop again before the vehicle speed reaches 3 km/h (2 mph) after the engine starts.
- The engine is started with the bonnet open.
  - ➤ Turn off the engine. Close the bonnet before you restart the engine to activate Auto Idle Stop.
- The battery charge is low.
- The internal temperature of the battery is less than 5°C.
- The shift lever is in any position except **N**.
- The heating system\*/climate control system\* is in use, and the outside temperature is below -20°C or over 40°C.
- The fan speed is high.
- The heating system\*/climate control system\* is in use, and the temperature is set to Hi or Lo
- From is ON (indicator on).
- The drive mode is in the +R mode.

#### 

Do not open the bonnet while the Auto Idle Stop function is activated. If the bonnet is opened, the engine will not restart automatically.

In this case, restart the engine with the **ENGINE START/STOP** button.

**Starting the Engine** P. 377

Pressing the **ENGINE START/STOP** button causes the engine to no longer restarts automatically. Follow the standard procedure to start the engine.

**Starting the Engine** P. 377

### ■ Auto Idle Stop may not activate when:

- The steering wheel is operated.
- The fan speed is high.
- The heating system\*/climate control system\* is in use, and there is a significant difference between the set temperature and the actual interior temperature.
- The heating system\*/climate control system\* is in use, and humidity in the interior is high.

## ■ The Engine Automatically Restarts When:

The clutch pedal is depressed.

# ■ The engine automatically restarts even if the clutch pedal is not depressed with the transmission in $\boxed{\mathbb{N}}$ when:

- The Auto Idle Stop **OFF** button is pressed.
- The pressure on the brake pedal is reduced and the vehicle starts moving while stopped on an incline.
- The steering wheel is operated.
- The pressure on the brake pedal is repeatedly applied and released slightly during a stop.
- The battery charge becomes low.
- The +R mode is selected by using the +R button.

#### ∑The Engine Automatically Restarts When:

If you are using an electronic device during Auto Idle Stop, the device may temporarily be turned off when the engine restarts.

The engine does not restart automatically when there is a problem in the system. Follow the normal procedure to start the engine.

**Starting the Engine** P. 377

The engine does not restart automatically when:

- The driver's seat belt is unlatched.
   Fasten the driver's seat belt to keep the Auto Idle
   Stop activated.
- The transmission is put into a position other than N. Put the transmission into N to restart the engine.

#### NOTICE

Auto Idle Stop system also comes with stall recovery. If you fully depress the clutch pedal after stalling the engine, the engine automatically restarts.

Starting to Drive P. 379

When the system stops operating, follow the normal procedure to start the engine.

**Starting the Engine** P. 377

## ■ When indicator light (Green) blinks in Auto Idle Stop

Fully depress the clutch pedal.

► The engine automatically restarts.

₩When indicator light (Green) blinks in Auto Idle Stop

The indicator starts blinking rapidly under the following conditions:

- FRONT button is pressed.
- When the heating system\*/climate control system\* is in use and moisture builds up inside the vehicle.
- When the heating system\*/climate control system\* is in use and the difference between the set temperature and the actual temperature inside the vehicle becomes significant.

## **Drive Mode Switch**


You can choose between four modes, **+R** mode, **SPORT** mode, **COMFORT** mode and **INDIVIDUAL** mode by using the **DRIVE MODE** switch or the **+R** button. The current mode is displayed on the gauge, and each mode will appear differently.

#### Drive Mode Switch

The mode may not be able to be changed when:

- The vehicle is turning.
- The VSA system is activating.
- There is a problem with the adaptive damper system, engine, the VSA, and the EPS.

## ■ Selecting the Drive Mode

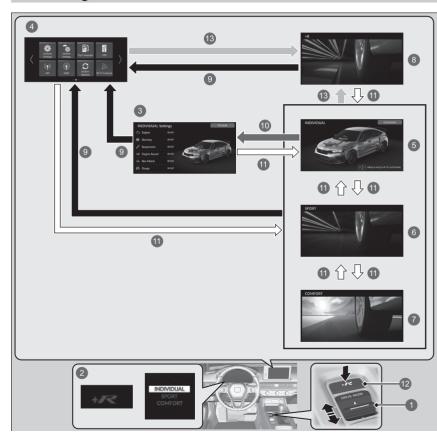

- **ORIVE MODE** Switch
- Changing modes by **DRIVE MODE** switch or +R button alters the screen on the gauge.
- **3 INDIVIDUAL Settings** Screen
- Audio/Information Screen
- **6 INDIVIDUAL** Mode
- **6** SPORT Mode
- COMFORT Mode
- 8 +R Mode
- Press the or button

The display returns to audio/information screen a few seconds after pressing the

- **+R** button or the **DRIVE MODE** switch up or down.
- Press the DRIVE MODE switch up and hold or select Customise


   □ Customizing the INDIVIDUAL Settings P. 399
- Press the **DRIVE MODE** switch up or down
- +R button
- Press the +R button

# **■ COMFORT Mode**



Enhances driver comfort.

# **■ SPORT Mode**

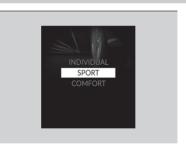

Enhances responsiveness to the driver's input.


### INDIVIDUAL Mode



Customize each category to suit the driver's preference.

Customizing the INDIVIDUAL Settings
P. 399

#### +R Mode

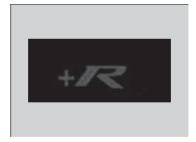

Maximises responsiveness to the driver's input.

Several VSA features can be turned off entirely.

**When in +R Drive mode** P. 415

#### ≥+R Mode

While in **+R** mode, the Auto Idle Stop System will stay disabled regardless of the Auto Idle Stop **OFF** button.

Auto Idle Stop P. 386

# ■ Next start-up mode

The mode for the next start-up is saved according to the following chart.

Last Drive Mode	Next Drive Mode
COMFORT	COMFORT
INDIVIDUAL	INDIVIDUAL
SPORT	SPORT
+R	If the <b>+R</b> mode is last used before you turn the power mode to OFF, the mode before selecting the <b>+R</b> mode is selected next time you turn the power mode to ON.

# Customizing the INDIVIDUAL Settings






- 1. Select INDIVIDUAL mode.
- Press the DRIVE MODE switch up and hold or select Customise to open the INDIVIDUAL Settings.
  - ➤ You can also select from Customized Features on the audio/information screen.
    - **Selecting the Drive Mode** P. 394
    - **Customized Features** P. 295
- **3.** Select the setting category.
- **4.** Select the desired setting.

# **Adjustable Speed Limiter**

This system enables you to set a maximum speed that cannot be exceeded even if you are depressing the accelerator pedal.

The vehicle speed limit can be set from about 30 km/h (18 mph) to about 320 km/h (200 mph).

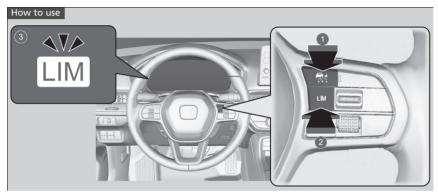

- 1 Press the M button on the steering wheel.
- 2 If a different indicator comes on, press the **LIM** button to switch to the adjustable speed limiter.
- **3** The Adjustable Speed Limiter Indicator (White) is on in the gauge. Adjustable speed limiter is ready to use.

■ Adjustable Speed Limiter

# **AWARNING**

Adjustable Speed Limiter has limitations. It is always your responsibility to adjust the vehicle speed to obey the actual speed limit, and safely operate the vehicle.

# **AWARNING**

Do not depress the accelerator pedal more than necessary.

Maintain an appropriate accelerator pedal position depending on the vehicle speed.

The adjustable speed limiter may not hold the set speed limit when driving downhill. If this occurs, slow down by depressing the brake pedal.


When not using the adjustable speed limiter: Turn off the adjustable speed limiter by pressing the statement button.

You cannot use the Adjustable Speed Limiter and below systems at the same time.

- -Adaptive cruise control (ACC)
- -Intelligent speed limiter

When the engine speed slows down, try to downshift.

### ■ To Set the Speed Limit

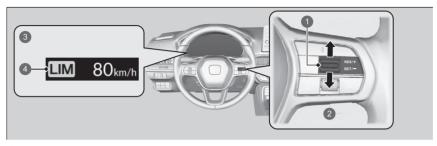

- 1 RES/+/SET/- Switch
- Up or down
- 3 On when the adjustable speed limiter is set.
- 4 Adjustable Speed Limiter Indicator (Green)
- Take your foot off the pedal and press the **RES/+/SET/-** switch up or down when you reach the desired speed.
  - The moment you release the switch, the speed limit is fixed, and the adjustable speed limiter is set. The speed limit is displayed.
- You can set the previously set speed limit by pressing the **RES/+/SET/-** switch up.

#### ∑To Set the Speed Limit

If you set the speed limit while travelling at less than 30 km/h (18 mph), the speed limit is set to 30 km/h (18 mph).

The beeper sounds and the displayed speed limit blinks if the vehicle speed exceeds the limit by about 3 km/h (2 mph) or more on a steep descent.

The adjustable speed limiter is set to the current speed if it is higher than the previously set speed limit when you press the **RES/+/SET/-** Switch up.

You can switch the displayed set speed measurements between km/h and mph on the audio/information screen.

**■ Customized Features** P. 295

# ■ To Adjust the Speed Limit

Increase or decrease the speed limit by using the **RES/+/SET/-** switch on the steering wheel.



- 1 To increase speed
- 2 To decrease speed
- Each time you press the **RES/+/SET/-** switch up or down, the speed limit increases or decreases by 1 km/h or 1 mph accordingly.
- If you keep the RES/+/SET/- switch pressed up or down, the speed limit increases
  or decreases in increments of 10 km/h or 10 mph every 0.5 second until system
  limit is reached.
- The vehicle may accelerate or decelerate until the set speed is reached.

## **■** Exceeding the Speed Limit Temporarily

The speed limit can be exceeded by depressing the accelerator pedal completely.

- ► The displayed limit speed blinks.
- ▶ The beeper sounds once the speed limit has been exceeded.

#### ∑Exceeding the Speed Limit Temporarily

The beeper sounds when the vehicle speed goes higher than the set speed limit with the accelerator pedal depressed completely.

The adjustable speed limiter resumes working once the vehicle speed goes lower than the set speed limit.

#### ■ To Cancel



- 1 LIM Button
- **CANCEL** Button
- 3 R Button

To cancel the adjustable speed limiter, do any of the following:

- Press the **CANCEL** button.
- Press the 🕏 button.
- Press the **LIM** button.

#### ∑To Cancel

The adjustable speed limiter changes into adaptive cruise control (ACC) or intelligent speed limiter if the **LIM** button is pressed.

Resuming the prior set speed:

Press the **CANCEL** button to display the prior set speed (grey) and press the **RES/+/SET/-** switch up to resume the prior set speed.

If you are driving at a speed faster than the prior set speed (grey), the adjustable speed limiter is set to the current speed by pressing the **RES/+/SET/-** switch up. If you press the **RES/+/SET/-** switch up when no prior set speed (in grey) is displayed, the speed will be set to your vehicle's current speed.



- Adjustable Speed Limiter Indicator (White)
- Prior Set Speed (Grey)

#### >> To Cancel

If there is a problem with the system when you are using the adjustable speed limiter, the beeper sounds and **OFF** comes on. The adjustable speed limiter will be turned off.




 Adjustable Speed Limiter Indicator (White)

# **Intelligent Speed Limiter**

Automatically sets the speed limit that the traffic sign recognition system detects. And the speed limit cannot be exceeded even if you are depressing the accelerator pedal. If you fully depress the accelerator the speed limit can be exceeded.

**▶** Traffic Sign Recognition System P. 482

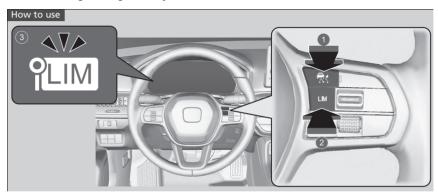

- 1 Press the button on the steering wheel.
- 2 If a different indicator comes on, press the **LIM** button to change it to the intelligent speed limiter.
- **3** The Intelligent Speed Limiter Indicator (White) is on in the gauge. Intelligent speed limiter is ready to use.

≥ Intelligent Speed Limiter

# **AWARNING**

Intelligent Speed Limiter has limitations. The Intelligent Speed Limiter may set itself to a speed above or below the actual speed limit, or may not work, particularly where the traffic sign recognition system does not operate correctly or where a road has no speed limit signs. It is always your responsibility to adjust the speed to obey the actual speed limit and to safely operate the vehicle.

Depending on the amount of depression of the accelerator pedal, the vehicle will accelerate until it reaches the speed identified by the traffic sign recognition system.

#### 

The system is designed to detect signs that follow the Vienna Convention standards. Not all signs may be detected, but any signs posted on roadsides should not be ignored. The system does not work on the designated traffic signs of all the countries you travel, nor in all situations.

#### **➡** Traffic Sign Recognition System P. 482

If the intelligent speed limiter is set to the wrong speed limit, try one of the following: To cancel

- Press the CANCEL button.
- Press the state button.
- Press the **LIM** button.

To exceed the speed limit temporarily

• Depressing the accelerator pedal fully.


The intelligent speed limiter may not hold the set speed limit when driving downhill. If this occurs, slow down by depressing the brake pedal.

When not using the intelligent speed limiter, turn off the intelligent speed limiter by pressing the shuffon

You cannot use the intelligent speed limiter and adaptive cruise control (ACC) or adjustable speed limiter at the same time.

When the engine speed slows down, try to downshift.

## ■ To Set the Speed Limit

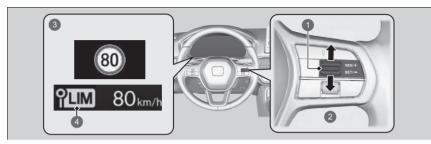

- RES/+/SET/- Switch
- 2 Up or down
- 3 On when the intelligent speed limiter is set to the speed limit that the traffic sign recognition system detects.
- 4 Intelligent Speed Limiter Indicator (Green)
- The moment you release the switch, the intelligent speed limiter is set to the speed limit that the traffic sign recognition system detects. The speed limit is displayed.

#### ≥ Intelligent Speed Limiter

Do not use the intelligent speed limiter in areas of different units from the display unit of the intelligent speed limiter.

Change the displayed measurement of the set vehicle speed to the same units as the driving areas.

**Customized Features** P. 295

#### **™**To Set the Speed Limit

If you set the intelligent speed limiter when the speed limit that the traffic sign recognition system detects is less than 30 km/h (18 mph), the speed limitation function and warning function may switch to pause.


If your vehicle speed is higher than the speed limit that the traffic sign recognition system detects, your vehicle decelerates slowly to the speed limit or less. If necessary, slow down by depressing the brake pedal. And the beeper sounds and the displayed speed limit blinks if the vehicle speed exceeds the limit by 3 km/h (2 mph) or more.

#### ■ When the traffic sign recognition system detects the new speed limit sign

The intelligent speed limiter is set to the new speed limit that the traffic sign recognition system detects.




- The speed limitation function and warning function may switch to pause if there is no speed limit sign in the screen of the traffic sign recognition system when:
- The end of speed limit or other designated limit is detected.
- Your vehicle enters/exits motorway or highway.
- You make a turn with a turn signal to change direction at an intersection.

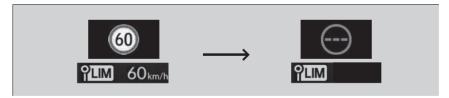

#### ∑To Set the Speed Limit

The intelligent speed limiter may also switch to pause when the traffic sign recognition system detects only additional speed limit signs.

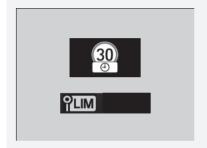


# ■ When the traffic sign recognition system detects the speed limit sign while the intelligent speed limiter is paused

The speed limitation function and warning function will be resumed automatically.




# ■ When the traffic sign recognition system does not detect the speed limit sign for a time while the intelligent speed limiter is activated

While driving, in addition to when the traffic sign recognition system detects no speed limit sign, the traffic sign recognition system may display no speed limit. But, intelligent speed limiter functions continue.

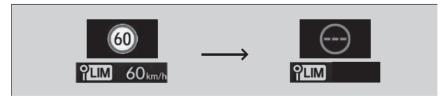

# ■ To Adjust the Speed Limit

Increase or decrease the speed limit by using the **RES/+/SET/-** switch on the steering wheel.

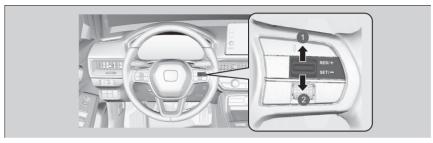

- 1 To increase speed
- 2 To decrease speed
- Each time you press the RES/+/SET/- switch up or down, the speed limit is increased or decreased by about 1 km/h or 1 mph accordingly.
- You can increase the speed limit until +10 km/h or +5 mph on the basis of the speed limit that the traffic sign recognition system detects.
- You can decrease the speed limit until -10 km/h or -5 mph on the basis of the speed limit that the traffic sign recognition system detects.
- You can accelerate until the set speed is reached. If your vehicle speed is higher than the speed limit that the traffic sign recognition system detects, your vehicle decelerates slowly to the speed limit.

#### ∑To Adjust the Speed Limit

A negative or positive offset with respect to the speed limit will be reset automatically when the traffic sign recognition system detects the new speed limit sign.

You cannot decrease the speed limit less than 30 km/ h (18 mph).

# Exceeding the Speed Limit Temporarily

The speed limit can be exceeded by depressing the accelerator pedal fully.

► The displayed speed limit blinks.

The beeper sounds once the speed limit has been exceeded.

### ■ To Cancel



To cancel the intelligent speed limiter, do any of the following:

- Press the **CANCEL** button.
- Press the 🕏 button.
- Press the **LIM** button.

1 LIM Button

- 2 CANCEL Button
- Button


#### ∑Exceeding the Speed Limit Temporarily

The beeper sounds when the vehicle speed goes higher than the set speed limit with the acceleration pedal depressed completely.

The intelligent speed limiter resumes working once the vehicle speed goes lower than the set speed limit.

#### ▼To Cancel

The intelligent speed limiter changes into adaptive cruise control (ACC) or adjustable speed limiter if the **LIM** button is pressed.

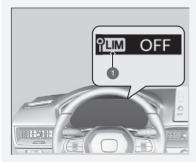

 Intelligent Speed Limiter Indicator (White)

If there is a problem with the system or traffic sign recognition system when you are using the intelligent speed limiter, the beeper sounds and **OFF** comes on. The intelligent speed limiter will be turned off.

**➡** Traffic Sign Recognition System P. 482

# **Vehicle Stability Assist (VSA) System**

VSA helps to stabilise the vehicle during cornering if the vehicle turns more or less than what was intended. It also assists in maintaining traction on slippery surfaces. It does so by regulating engine output and selectively applying the brakes.

### ■ VSA Operation



When VSA activates, you may notice that the engine does not respond to the accelerator. You may also notice some noise from the hydraulic brake system. You will also see the indicator blink.

- VSA System Indicator
- 2 When using the +R gauge

#### 

The VSA may not function properly if tyre type and size are mixed. Make sure to use the same size and type of tyre, and the air pressures as specified.

When the VSA system indicator comes on and stays on while driving, there may be a problem with the system. While this may not interfere with normal driving, have your vehicle checked by a dealer immediately.

VSA cannot enhance stability in all driving situations and does not control the entire braking system. You still need to drive and corner at speeds appropriate for the conditions and always leave a sufficient margin of safety.

The main function of the VSA system is generally known as Electronic Stability Control (ESC). The system also includes a traction control function.

The adaptive cruise control (ACC), safety support, vehicle stability assist (VSA) system, and low tyre pressure/deflation warning system indicators may come on in amber along with a message in the gauge when you set the power mode to ON after reconnecting the battery.

Drive a short distance at more than 20 km/h (12 mph). Each indicator should go off. If any do not, have your vehicle checked by a dealer.

#### ■ VSA On and Off



- VSA OFF Indicator
- 2 When using the +R gauge

This button is on the driver side control panel. To partially disable VSA functionality/ features, press and hold it until you hear a beep.

Your vehicle will have normal braking and cornering ability, but traction control function will be less effective.

To restore VSA functionality/features, press the  $இ (VSA \ \textbf{OFF})$  button until you hear a beep.

VSA is turned on every time you start the engine, even if you turned it off the last time you drove the vehicle.

#### 

In certain unusual conditions when your vehicle gets stuck in shallow mud or fresh snow, it may be easier to free it with the VSA temporarily switched off.

When the B button is pressed, the traction control function becomes less effective. This allows for the wheels to spin more freely at low speed. You should only attempt to free your vehicle with the VSA off if you are not able to free it when the VSA is on.

Immediately after freeing your vehicle, be sure to switch VSA on again. We do not recommend driving your vehicle with the VSA system switched off.

You may hear a motor sound coming from the engine compartment while system checks are being performed immediately after starting the engine or while driving. This is normal.

#### ■ When in +R Drive mode



To completely disable VSA, press and hold the VSA **OFF** button until you hear a single beep, then later two more beeps.

▶ ② Vehicle stability assist system fully OFF message appears on the driver information interface.

To resume VSA full function, press the VSA **OFF** button until a single beep is heard.

If VSA OFF mode is selected, and drive mode is changed to a mode other than **+R**, VSA full function will resume, and the VSA **OFF** indicator will goes off.

#### When in +R Drive mode

In OFF mode, your vehicle will have normal braking and cornering ability, but it will not have VSA traction and stability enhancement.

When the VSA system is off, the traction control system is also off.

We do not recommend driving your vehicle with the VSA and traction control system switched off.

When you completely disable VSA, you cannot use Adaptive Cruise Control (ACC) or the Lane Keeping Assist System (LKAS).

Road Departure Mitigation System, and Collision Mitigation Braking System (CMBS) do not function while VSA is completely disabled.

Some of the VSA features cannot be completely turned off while driving.

# **Agile Handling Assist**

Lightly brakes the front wheels, as needed, when you turn the steering wheel, and helps support the vehicle's stability and performance during cornering.

#### ■ Agile Handling Assist

The agile handling assist cannot enhance stability in all driving situations. You still need to drive and corner at speeds appropriate for the conditions and always leave a sufficient margin of safety.

When the VSA system indicator comes on and stays on while driving, the agile handling assist does not activate.

You may hear a sound coming from the engine compartment while the agile handling assist is activated. This is normal.

# **Limited Slip Differential (LSD)**

# **■ Limited Slip Differential (LSD)**

LSD (limited slip differential) is a type of differential that delivers extra torque to the wheel or the wheels with the most traction to minimise wheel slip and maintain control of the vehicle.


∑Limited Slip Differential (LSD)

#### NOTICE

Make sure both front tyres of your vehicle are of the same brand and specified size, and have equal wear. Otherwise, the LSD may not function properly.

# **Deflation Warning System**

Instead of directly measuring the pressure in each tyre, the deflation warning system on this vehicle monitors and compares the rolling radius and rotational characteristics of each wheel and tyre while you are driving to determine if one or more tyres are significantly under-inflated.

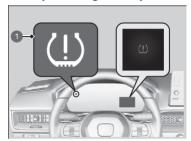

 Low Tyre Pressure/Deflation Warning System Indicator This will cause the low tyre pressure/deflation warning system indicator to come on and a message to appear on the gauge.

#### Deflation Warning System

The system does not monitor the tyres when driving at low speed.

Conditions such as low ambient temperature and altitude change directly affect tyre pressure and can trigger the low tyre pressure/deflation warning system indicator to come on.

Tyre pressure checked and inflated in:

- Warm weather can become under-inflated in colder weather.
- Cold weather can become overinflated in warmer weather.

The low tyre pressure/deflation warning system indicator will not come on as a result of overinflation.

The deflation warning system may not function properly if tyre type and size are mixed.

Make sure to use the same size and type of tyre.

**► Checking and Maintaining Tyres** P. 563

The low tyre pressure/deflation warning system indicator may come on with a delay or may not come on at all when:

- You rapidly accelerate, decelerate, or turn the steering wheel.
- You drive on snowy or slippery roads.
- Tyre chains\* are used.

#### **≥** Deflation Warning System

The low tyre pressure/deflation warning system indicator may come on under the following conditions:

- A compact spare tyre\* is used.
- There is a heavier and uneven load on the tyres than the condition at initialisation.
- Tyre chains\* are used.

The adaptive cruise control (ACC), safety support, vehicle stability assist (VSA) system, and low tyre pressure/deflation warning system indicators may come on in amber along with a message in the gauge when you set the power mode to ON after reconnecting the battery.

Drive a short distance at more than 20 km/h (12 mph). Each indicator should go off. If any do not, have your vehicle checked by a dealer.

### Deflation Warning System Calibration

You must start deflation warning system calibration every time you:

- Adjust the pressure in one or more tyres.
- Rotate the tyres.
- Replace one or more tyres.

Before calibrating the deflation warning system:

• Set the cold tyre pressure in all four tyres.

**E** Checking Tyres P. 563

#### Make sure:

- The vehicle is at a complete stop.
- The shift lever is in **N**.
- The power mode is in ON.

#### 

The deflation warning system cannot be calibrated if a compact spare tyre\* is installed.

The calibration process requires approximately 30 minutes of cumulative driving at speeds between 40-100 km/h (25-62 mph).

During this period, if the power mode is set to on and the vehicle is not moved within 45 seconds, you may notice the low tyre pressure indicator comes on briefly. This is normal and indicates that the calibration process is not yet complete.

If the tyre chains\* are installed, remove them before calibrating the deflation warning system.

If the low tyre pressure/deflation warning system indicator comes on even when the properly inflated specified regular tyres are installed, have your vehicle checked by a dealer.

We recommend that the tyres be replaced with the same brand, model, and size as the originals. Ask a dealer for details




When you calibrate the Deflation Warning System, do the following.

- Customized Features P. 295
- 1. Set the power mode to ON.
- 2. Press the home button.
- 3. Select Vehicle Settings.



4. Select **Deflation warning system**.

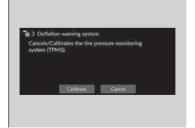

- 5. Select Calibrate or Cancel.
- If the **Calibration Failed to Start.** message appears, repeat step 5.
- The calibration process finishes automatically.

# **Blind Spot Information System\***

When the system detects vehicles approaching from behind in adjacent lanes, the appropriate indicator comes on, providing assistance when you change lanes.


**≥**Blind Spot Information System \*

#### **Important Safety Reminder**

Like all assistance systems, the Blind Spot Information System has limitations. Always look in your mirrors, to either side of your vehicle, and behind you for other vehicles before changing lanes. Overreliance on the Blind Spot Information System may result in a collision.

### How the System Works

The system activates when your vehicle is moving forward at about 20 km/h (12 mph) or above.

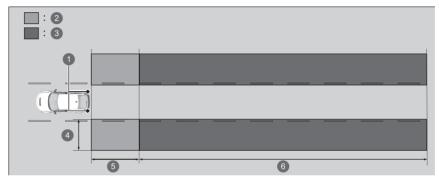

- Radar Sensors: underneath the rear bumper corners
- Alert Zone 1
- 3 Alert Zone 2 Alert zone range
- 4 Approx. 0.5 and 3 metres (1.6 and 10 ft.) from vehicle side.
- **5** Approx. 3 metres (10 ft.) from rear bumper.
- 6 Approx. 3 and 25 metres (10 and 82 ft.) behind from rear bumper. (The faster the approaching vehicle, the further away it will be detected.)

The initially set alert zone is alert zone 1. Over time, after the vehicle has been driven on straight roads with traffic and roadside objects, the system will adapt and expand the alert zone (alert zone 1 and 2).


#### ■Blind Spot Information System\*

Have your vehicle checked by a dealer in the following situations:

- The rear bumper or area around the radar sensors is strongly impacted.
- The indicator does not come on even if a vehicle in the alert zone should have been detected.
- The rear bumper or any system components need to be repaired.

If the rear bumper or any system components are repaired, the system will revert to alert zone 1 only until it is able to adapt and expand to alert zone 1 and 2.

### ■ When the system detects a vehicle

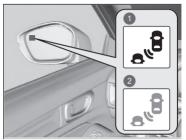

- 1 Comes On
- Blinks

Blind spot information system alert indicator: Located on the outside rearview mirror on both sides.

#### Comes on when:

- A vehicle approaches you from behind to overtake you at a speed difference of no more than about 50 km/h (31 mph).
- You pass a vehicle at a speed difference of no more than about 20 km/h (12 mph).

### Blinks and a beeper sounds when:

You use the turn signal lever to signal a turn in the direction of the detected vehicle while the blind spot information system alert indicator is on.

► The beeper sounds three times.

#### ≫Blind Spot Information System \*

For proper blind spot information system operation:

- Always keep the rear bumper and area around the radar sensors clean.
- Do not cover the rear bumper corner area with labels or stickers of any kind.


The system is for your convenience only. Even if an object is within the alert zone, the following situations may occur:

- The blind spot information system alert indicator does not come on and the message Blind spot information not available appears on the driver information interface.
- The blind spot information system alert indicator may come on even with the message displayed.

The adaptive cruise control (ACC), safety support, vehicle stability assist (VSA) system, and low tyre pressure/deflation warning system indicators may come on in amber along with a message in the gauge when you set the power mode to ON after reconnecting the battery.

Drive a short distance at more than 20 km/h (12 mph). Each indicator should go off. If any do not, have your vehicle checked by a dealer.

## ■ Blind Spot Information System On and Off

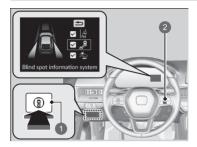

- Safety Support Switch
- Right Selector Wheel

When you turn the blind spot information system on and off, do the following.

- **1.** Press the safety support switch.
- **2.** Roll the right selector wheel to the symbol and push it.
  - ➤ A message appears on the driver information interface when the system turns on or off.
  - ▶ A tick mark appears in the box and the colour of the symbol changes to green when the system is on. The tick mark disappears and the colour of the symbol changes to grey when the system is off.

The blind spot information system will stay on in the previously selected on (ticked) or off (unticked) setting each time you start the engine.

#### ≫Blind Spot Information System \*

You can also select the safety support content from the driver information interface.

Driver Information Interface Right Side Area P. 138

You can change the setting for the blind spot information system.

**⊇** Customized Features P. 295

### Blind Spot Information System Conditions and Limitations

The blind spot information system alert indicator may not come on under the following conditions:


- There is a large speed difference between your vehicle and the vehicle in the adjacent lane.
- A vehicle is parked in a side lane.
- An object not detected by the radar sensors approaches or passes your vehicle.
- The vehicle driving in the adjacent lane is a motorcycle or other small vehicle.

The Blind Spot Information System may not operate correctly under the following conditions:

- Making a turn at an intersection.
- Objects (guard rails, poles, trees, etc.) are detected.
- An object that does not reflect radio waves well or a motorcycle, is in the alert zone.
- Driving on a curved road.
- A vehicle is moving from a far lane to the adjacent lane.
- The system picks up signal interference such as other radar sensors from another vehicle or strong radio wave transmitted from a facility nearby.
- The rear bumper or the area around the radar sensors is covered by dirt, mud, snow, ice, etc.
- The rear bumper or the area around the radar sensors has been damaged or deformed.
- In bad weather (heavy rain, snow, and fog).
- Making a short turn or driving on a bumpy road that slightly tilts the vehicle.
- An object such as a bicycle rack is attached to the rear of the vehicle.

# **Adjusting Headlight Distribution**

Driving the right-hand type vehicle in right-hand traffic, or the left-hand type vehicle in left-hand traffic causes headlight glare to oncoming vehicles. You need to alter the headlight beam distribution using masking tape.

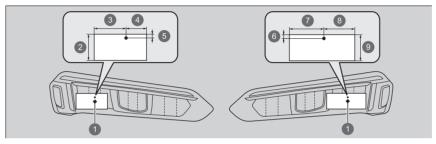

- Centre point
- **2** 40 mm (1.57 inches)
- **3** 48 mm (1.89 inches)
- 4 32 mm (1.26 inches)
- **6** 10 mm (0.39 inches)

- **6** 10 mm (0.39 inches)
- 52 mm (2.05 inches)
- **8** 48 mm (1.89 inches)
- **9** 40 mm (1.57 inches)
- **1.** Prepare for two rectangular pieces of masking tape, measuring 40 mm (1.57 inches) wide and 100 mm (3.15 inches)\*2 or 80 mm (3.94 inches)\*1 long.
  - ▶ Use masking tape that can shut out light, such as seal type waterproof vinyl.
- 2. Affix the tape to the lens as shown.

#### 

Be careful not to adhere the tape to an incorrect location. If the headlight beam is distributed incorrectly, it may not comply with your country's legal requirements. Ask your dealer for details.

<sup>\*1:</sup> For the driver's side headlight

<sup>\*2:</sup> For the passenger's side headlight

# **Honda Sensing**

Honda Sensing is a driver support system which employs the use of a front wide view camera mounted to the interior side of the windscreen, behind the rearview mirror.

Honda Sensing has the following functions.


#### ■ The functions which do not require switch operations to activate

- Collision Mitigation Braking System (CMBS) ▶ P. 432
- Road Departure Mitigation System ▶ P. 474
- Traffic Sign Recognition System ▶ P. 482

#### ■ The functions which require switch operations to activate

- Adaptive Cruise Control (ACC) 
   P. 444
- Lane Keeping Assist System (LKAS) ▶ P. 462

# Operation Switches for the Adaptive Cruise Control (ACC)/ Lane Keeping Assist System (LKAS)

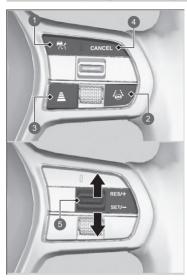


● Button
Press to activate standby mode for ACC.
Or press to cancel the system.

2 LKAS Button Press to activate standby mode for LKAS. Or press to cancel the system.

- 3 Interval Button
  Press to change the ACC following-interval.
- **4 CANCEL** Button Press to cancel ACC.
- **SRES/+/SET/-** Switch Press the **RES/+/SET/-** switch up to set or resume the ACC or increase the vehicle speed.

Press the **RES/+/SET/-** switch down to set the ACC or decrease the vehicle speed.

### Gauge Content

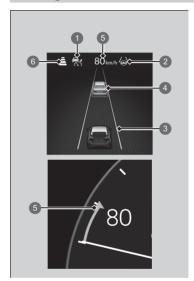


You can see the current state of ACC and LKAS.

- Indicates that ACC is ready to be activated.
  - Green: The system is on.
  - White: The system is standby.
  - Amber: There is a problem with the system.
- 2 Indicates that LKAS is ready to be activated.
  - Green: The system is on.
  - White: The system is standby.
  - Amber: There is a problem with the system.
- 3 Indicates that LKAS is activated and whether or not traffic lane lines are detected.
  - Green lines: The system is on.
  - White lines: Traffic lane lines are detected.
  - Amber line: Lane departure is detected.
- 4 Indicates whether or not a vehicle is detected ahead

#### When the +R gauge is not being used

- Control target vehicle: White and outlined in green
- Outside of control target vehicle: Grey
- **5** Indicates that ACC shows the set vehicle speed.
- **6** Indicates that ACC shows the set vehicle interval.
- When using the +R gauge.

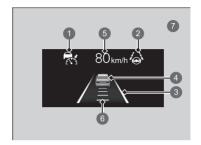

# **Collision Mitigation Braking System (CMBS)**

The system can assist you when it determines there is a possibility of your vehicle colliding with a vehicle (including motorcycles) ahead from behind, an oncoming vehicle in front, a pedestrian, or someone riding a bicycle (moving bicycle). The CMBS is designed to alert you when the potential for a collision is determined, as well as assist in reducing speed, avoiding collisions, and reducing collision severity.

○ Collision Mitigation Braking System (CMBS)

#### **Important Safety Reminder**

The CMBS is designed to reduce the severity of an unavoidable collision. It does not prevent collisions nor stop the vehicle automatically. It is still your responsibility to operate the brake pedal and steering wheel appropriately according to the driving conditions.

The CMBS may not activate or may not detect a vehicle in front of your vehicle under certain conditions:

**CMBS Conditions and Limitations** P. 437

You can read about handling information for the camera equipped with this system.

Front Wide View Camera P. 489


When the CMBS is activated, it will continue to operate even if the accelerator pedal is partially depressed. However, it will be cancelled if the accelerator pedal is fully depressed.

When the CMBS activates, the engine may stop automatically. Start the engine by normal operation if the engine stops.

**Starting the Engine** P. 377

CMBS does not function while VSA is completely disabled.

### ■ How the system works

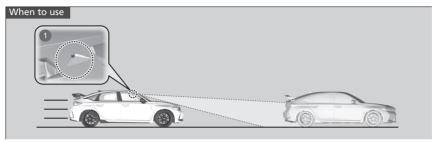

1 The front wide view camera is located behind the rearview mirror.

The system starts monitoring the roadway ahead when your vehicle speed is about 5 km/h (3 mph) or above and will search for a vehicle, pedestrian, or moving bicycle in front of you.

#### The CMBS activates when:

- The speed difference between your vehicle and a vehicle, pedestrian, or moving bicycle detected in front of you becomes about 5 km/h (3 mph) and over with a chance of a collision.
- Your vehicle drives at about 30 km/h (18 mph) or less and there is a chance of in frontal collision with a detected oncoming vehicle when you turn left\*1/right\*2 at an intersection.
- Your vehicle speed is about 100 km/h (62 mph) or less and the system determines there is a chance of a collision with:
- An oncoming or stationary vehicle detected in front of you.
- A pedestrian or moving bicycle detected in front of you.
- \*1: Left-hand Drive Type
- \*2: Right-hand Drive Type

#### ➤ How the system works

The camera in the CMBS is also designed to detect pedestrians.

However, this pedestrian detection feature may not activate or may not detect a pedestrian in front of your vehicle under certain conditions.


Refer to the ones indicating the pedestrian detection limitations from the list.

**CMBS Conditions and Limitations** P. 437

The CMBS will be cancelled when your vehicle stops or the system determines there no longer is the potential for a collision.

The CMBS may also be cancelled when a driver operates the steering wheel and the brake or accelerator pedal to avoid a collision.

### ■ When the system activates

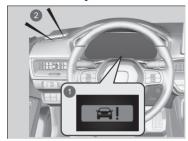

The system provides visual and audible alerts of a possible collision, and stops if the collision is avoided.

➤ Take appropriate action to prevent a collision (apply the brakes, change lanes, etc.)

- Visual Alerts
- 2 Audible Alert

You can change the distance (**Far/Normal/Near**) between vehicles at which the system's earliest collision alert will come on.

**Customized Features** P. 295

# ■ Collision Alert Stages

The system has three alert stages for a possible collision. However, depending on circumstances, the CMBS may not go through all of the stages before initiating the last stage.


Distance between vehicles		CMBS		
		The sensors detect a vehicle	Audible & Visual WARNINGS	Braking
Stage one	3 4 5 0 2	There is a risk of a collision with the vehicle ahead of you.	When in <b>Far</b> , visual and audible alerts come on at a longer distance from a vehicle ahead than in <b>Normal</b> setting, and in <b>Near</b> , at a shorter distance than in <b>Normal</b> .	_
Stage two		The risk of a collision has increased, time to respond is reduced.	Visual and audible alerts.	Lightly applied
Stage three	0 2	The CMBS determines that a collision is unavoidable.	visuai aitu audible dielts.	Forcefully applied

- 1 Your Vehicle
- 2 Vehicle Ahead
- 6 Near

A Normal

Far

### CMBS On and Off

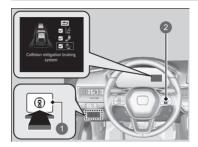

- Safety Support Switch
- Right Selector Wheel

When you turn the CMBS on and off, do the following.

- **1.** Press the safety support switch.
- 2. Roll the left selector wheel to the symbol and push it.
  - ➤ A message appears on the driver information interface when the system turns on or off.
  - ▶ A tick mark appears in the box and the colour of the symbol changes to green when the system is on. The tick mark disappears and the colour of the system is off.

The CMBS is turned on every time you turn the power system on, even if you turned it off the last time you drove the vehicle.

#### 

You cannot turn the CMBS off while driving.

The CMBS may automatically shut off, and the safety support indicator (amber) and collision mitigation braking system (CMBS) indicator (amber) will come and stay on under certain conditions.

**CMBS Conditions and Limitations** P. 437

The CMBS is not activated for about 15 seconds after the power system is turned on.

You can also select the safety support content from the driver information interface.

**Driver Information Interface Right Side Area** P. 138

The adaptive cruise control (ACC), safety support, vehicle stability assist (VSA) system, and low tyre pressure/deflation warning system indicators may come on in amber along with a message in the gauge when you set the power mode to ON after reconnecting the battery.

Drive a short distance at more than 20 km/h (12 mph). Each indicator should go off. If any do not, have your vehicle checked by a dealer.

### CMBS Conditions and Limitations

In the following situations, the camera may be unable to correctly detect vehicles, pedestrians, moving bicycles, or road conditions, potentially causing the CMBS to operate improperly.

Front Wide View Camera P. 489

#### Environmental conditions

- Driving in bad weather (rain, fog, snow, etc.).
- Sudden changes between light and dark, such as the entrance or exit of a tunnel or the shadows of trees, buildings, etc.
- Driving into low sunlight (e.g., at dawn or dusk).
- Strong light is reflected onto vehicles, pedestrians, moving bicycles, or road surfaces
- Water is sprayed by or snow blown from a vehicle ahead.
- Driving at night or in a dark place such as a tunnel (due to low-light conditions, vehicles, pedestrians, or moving bicycles may not be illuminated).

### ■ Roadway conditions

- Driving on curvy, winding, undulating, or sloping roads.
- There is a film of water or puddles on the road surface.
- Driving on rutted roads (snowy or unpaved roads, etc.).
- Your vehicle is strongly shaken on uneven road surfaces.

#### 

Have your vehicle checked by a dealer if you find any unusual behaviour of the system (e.g. the warning message appears too frequently).

### **■** Vehicle conditions

- The vehicle is tilted due to heavy luggage in the luggage area or rear seats.
- Tyre chains\* are installed.
- Driving at night or in a dark place (e.g., a tunnel) with the headlights off.
- The front of the camera is covered by dirt, fog, rain, mud, wet snow, seals, accessories, stickers, or film on the windscreen.
- There is residue on the windscreen from the windscreen wipers.
- When lighting is weak due to dirt covering the headlight lenses, or there is poor visibility in a dark place due to the headlights being improperly adjusted.
- An abnormal tyre or wheel condition (incorrect sizes, varied sizes or construction, improperly inflated, compact spare tyre\*, etc.).
- The suspension has been modified.

# ■ Examples of limitations on the correct detection of the camera due to the condition of the vehicle ahead of you, oncoming vehicles, pedestrians, or moving bicycles

- The distance between your vehicle and the vehicle ahead of you, oncoming vehicle, pedestrian, or moving bicycle ahead of you is too short.
- The vehicle ahead of you, oncoming vehicle, pedestrian, or moving bicycle suddenly cuts in front of or jumps out in front of you.
- The bicycle is stopped.
- The oncoming vehicle or vehicle ahead of you is sideways or facing diagonally.
- When the vehicle ahead of you, oncoming vehicle, pedestrian, or moving bicycle blends in with the background, preventing the system from recognising them.
- When several pedestrians are moving ahead of you in a group.
- When several bicycles are moving ahead of you in a group.
- When a pedestrian or moving bicycle crosses the road too quickly.
- A pedestrian or moving bicycle approaches from the opposite direction.
- The headlights of the vehicle ahead of you or oncoming vehicle are lit on one side or not lit on either side in a dark place.
- When part of a pedestrian (heads, limbs, etc.) is hidden by luggage.
- When a pedestrian is bent over or squatting, when their hands are raised, or they are running.
- When the pedestrian is shorter than about 1 metre (3.3 feet) or taller than about 2 metres (6.6 feet) in height.
- When the pedestrian is pushing a stroller or bicycle.

#### ○ Collision Mitigation Braking System (CMBS)

Make sure that all the tyres are of the same specified size, type and brand, and that they are evenly worn. If you use tyres of different sizes, types, brands, or degree of wear, the system may not work properly.

Do not modify the suspension. Altering the height of the vehicle may prevent the system from working properly.

### **■** Examples of other limitations on detection or system operation

- When the vehicle ahead of you is a small motorcycle, motorcycle with a sidecar, wheelchair, or other specially shaped vehicle.
- When a vehicle is lower in the rear than the front such as lorries that are not carrying a load, or a narrow vehicle.
- When the vehicle ahead of you, oncoming vehicle, pedestrian or moving bicycle is not in front of the vehicle.
- The speed difference between your vehicle and the vehicle ahead of you, oncoming vehicle, pedestrian or moving bicycle is significantly large.
- When the vehicle or moving bicycle in front of you slows suddenly.
- When the driver operates the brake pedal and steering wheel to avoid a collision.
- When you approach the vehicle ahead of you, oncoming vehicle, pedestrians or moving bicycles while accelerating rapidly or operating the steering wheel (except when turning left\*1/right\*2 at an intersection etc.)\*3.
- When the moving bicycle is a child-sized bicycle, folding bicycle, three-wheeler or other bicycle with small tyres, or a long bicycle like a tandem bicycle.
- When the camera cannot correctly identify the shape of the vehicle ahead of you, oncoming vehicle, pedestrian, or moving bicycle.
- When the minimum ground clearance of a vehicle ahead of you is extremely high.

- \*1: Left-hand Drive Type
- \*2: Right-hand Drive Type
- \*3: When there is a possibility of a frontal collision with the oncoming vehicle while turning left\*1/right\*2, the CMBS is activated. However, it may not be activated if you suddenly turn the steering wheel.

#### ■ Automatic shutoff

The CMBS may automatically shut itself off and the safety support indicator (amber) comes and stays on when:


- You drive off-road or on a mountain road, or curved and winding road for an extended period.
- Driving in bad weather (rain, fog, snow, etc.).
- Driving with the parking brake applied.
- The camera temperature gets too high.
- The front of the camera is covered by dirt, fog, rain, mud, wet snow, seals, accessories, stickers, or film on the windscreen.
- An abnormal tyre condition is detected (incorrect tyre size, flat tyre, etc.). Once the conditions that caused the CMBS to shut off improve or are addressed (e.g., cleaning), the system comes back on.

### ■ With Little Chance of a Collision


Even if there is little chance of a collision, the CMBS may activate under the following conditions.

Also, the system may activate if it detects a possibility of collision with pedestrians, moving bicycles, or vehicles.


- Your vehicle approaches or passes another vehicle that is making a left or right turn.
- Your vehicle approaches another vehicle ahead of you and you change lanes to pass.

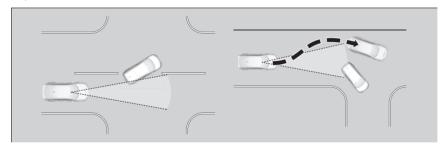

- When your vehicle approaches vehicles, pedestrians, or moving bicycles.
- When vehicles, pedestrians, or moving bicycles are passing in front of you.
- When you drive under a low structure or through a narrow gate at high speed.
- When there are traffic signs or structures such as guard rails are beside the road along a curve.

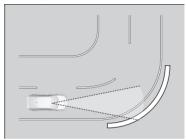

• When driving through curves, your vehicle comes to a point where the oncoming vehicle is right in front of you.

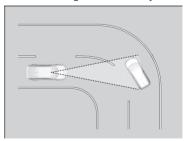


• When approaching stationary vehicles or walls, such as when parking.

# **Adaptive Cruise Control (ACC)**

Helps to maintain a constant vehicle speed and a set following-interval behind a vehicle detected ahead of yours, without you having to keep your foot on the brake or the accelerator.

When ACC slows your vehicle by applying the brakes, your vehicle's brake lights will illuminate.

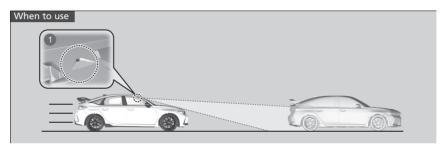

- 1 The front wide view camera is located behind the rearview mirror.
- Vehicle speed for ACC: Desired speed in a range above roughly 30 km/h (18 mph).
- Shift position for ACC: In 2 or higher position.

# **AWARNING**

Improper use of ACC can lead to a crash. Use ACC only when driving on motorways and in good road and weather conditions.

# **AWARNING**

ACC has limited braking capability. When your vehicle speed drops below 25 km/h (16 mph), ACC will automatically cancel and no longer will apply your vehicle's brakes.

Always be prepared to apply the brake pedal when conditions require.


#### Important Reminder

As with any system, there are limits to ACC. Use the brake pedal whenever necessary, and always keep a safe interval between your vehicle and other vehicles.

You can read about handling information for the camera equipped with this system.

Front Wide View Camera P. 489

### ■ How to activate the system

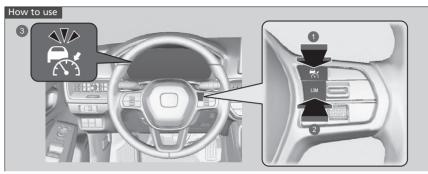

- Button
  Press the button on the steering wheel.
- **2 LIM** Button
  If a different indicator comes on, press the **LIM** button to change it to ACC.
- (White) is on in the gauge. ACC is ready to use.

#### 

ACC may not work properly under certain conditions.


**ACC Conditions and Limitations** P. 452

When not using ACC: Turn off adaptive cruise by pressing the statement button.

Do not use ACC under the following conditions:

- On roads with frequent lane change or continuous stop and go traffic, ACC cannot keep an appropriate distance between your vehicle and the vehicle ahead of you.
- On roads with sharp turns.
- On roads with toll collection facilities or other objects between lanes of traffic, or in parking areas, or facilities with drive through access.
- On roads with bad weather (rain, fog, snow, etc.), ACC may not detect the distance between your vehicle and the vehicle ahead of you properly.
- On roads with slippery or icy surfaces. The wheels may spin out and your vehicle may lose the control on the condition.
- On roads with steep uphill or steep downhill slopes.
- On roads with undulating slopes.

## ■ To Set the Vehicle Speed

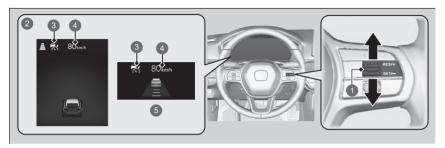

- **1 RES/+/SET/-** Switch Up or down
- 2 On when ACC begins
- (Green)
- 4 Set Vehicle Speed (White)
- **5** When using the **+R** gauge

Take your foot off the pedal and press the **RES/+/SET/-** switch up or down when you reach the desired speed. The moment you release the button, the set speed is fixed, and ACC begins.

#### 

The adaptive cruise control (ACC), safety support, vehicle stability assist (VSA) system, and low tyre pressure/deflation warning system indicators may come on in amber along with a message in the gauge when you set the power mode to ON after reconnecting the battery.


Drive a short distance at more than 20 km/h (12 mph). Each indicator should go off. If any do not, have your vehicle checked by a dealer.

When you completely disable VSA, you cannot use ACC.

You can switch the displayed set speed measurements on the audio/information screen between km/h and mph.

Customized Features P. 295

When ACC starts operating, the vehicle icon, interval bars and set speed appear on the gauge.

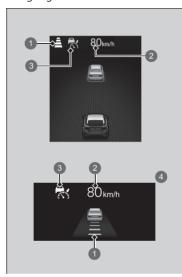

When you use ACC, Straight Driving Assist (a feature of the Electric Power Steering system) is activated.

By enabling the steering system to automatically compensate for natural steering pull, Straight Driving Assist makes it easier for you to keep your vehicle in a straight line.


- 1 Set Vehicle Interval
- Set Vehicle Speed
- 4 When using the +R gauge

# ■ When in Operation

#### ■ There is a vehicle ahead

ACC monitors if a vehicle ahead of you enters the ACC range. If a vehicle is detected doing so, the ACC system maintains or decelerates your vehicle's set speed in order to keep the vehicle's set following-interval from the vehicle ahead.


**▶** To Set or Change Following-interval P. 457

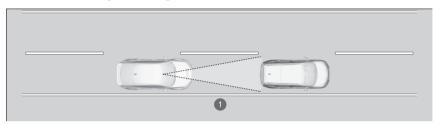

1 ACC Range: 120 m (394 ft.)

### When in Operation


If the vehicle ahead of you slows down abruptly, or if another vehicle cuts in front of you, a beeper sounds and a message appears on the driver information interface.

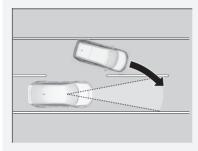

Depress the brake pedal, and keep an appropriate interval from the vehicle ahead.



Audible Alert

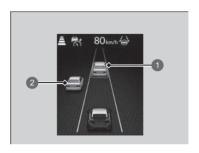

When a vehicle whose speed is slower than your set speed comes in or cuts in front of you and is detected by the camera, your vehicle starts to slow down

- Control target vehicle
- 2 Outside of control target vehicle



■ When using the +R gauge

A vehicle icon appears on the gauge.

When the **+R** gauge is not being used:

Control target vehicle: White and outlined in green

Outside of control target vehicle: Grey

#### ■ There is no vehicle ahead



Your vehicle maintains the set speed without having to keep your foot on the brake or accelerator pedal.

If there previously was a vehicle detected ahead that kept your vehicle from travelling at the set speed, ACC accelerates your vehicle to the set speed, and then maintains it.

On steep downhill during ACC, it brakes to inhibit excessive acceleration for maintaining the set speed.

However, the vehicle speed may become faster than the set speed.



• When using the +R gauge

A vehicle icon with line contour appears on the gauge.

#### When in Operation ■

Even if the interval between your vehicle and the vehicle detected ahead is short, ACC may start accelerating your vehicle under the following circumstances:

- The vehicle ahead of you is going at almost the same speed as, or faster than, your vehicle.
- A vehicle that cuts in front of you is going faster than your vehicle, gradually increasing the interval between the vehicles.

You can also set the system to beep when a vehicle detected in front of you comes in and goes out of the ACC detecting range. A vehicle detect beep on and off can be selected.

**Customized Features** P. 295

#### Limitations

You may need to use the brake to maintain a safe interval when using ACC. Additionally, ACC may not work properly under certain conditions.

ACC Conditions and Limitations P. 452

### ■ When you depress the accelerator pedal


You can temporarily increase the vehicle speed. In this case, there is no audible or visual alert even if a vehicle is in the ACC range.

ACC stays on unless you cancel it. Once you release the accelerator pedal, the system resumes the set speed.

There are times when the vehicle speed will decrease when the accelerator pedal is lightly applied.

### When in Operation ■

 ACC may temporarily control the interval between your vehicle and the vehicle in adjacent lane or surroundings of your vehicle depending on the road conditions (e.g. curves) or vehicle conditions (e.g. operating the steering wheel or the vehicle location in the lane).

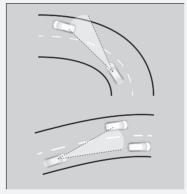

 When the vehicle ahead of you moves away, such as when entering an interchange or rest area, ACC may continue to maintain the set following-interval for a short time.

### ACC Conditions and Limitations

The system may automatically shut off under certain conditions. Some examples of these conditions are listed below. Other conditions may reduce some of the ACC functions.


Front Wide View Camera P. 489

#### ■ Environmental conditions

- Driving in bad weather (rain, fog, snow, etc.).
- Sudden changes between light and dark, such as the entrance or exit of a tunnel or the shadows of trees, buildings, etc.
- Strong light is reflected onto vehicles or road surfaces.
- Water is sprayed by or snow blown from a vehicle ahead.
- Driving at night or in a dark place such as a tunnel (due to low-light conditions, the whole vehicle may not be illuminated).
- Driving into low sunlight (e.g., at dawn or dusk).

### **■** Roadway conditions

• Driving on curvy, winding, undulating, or sloping roads.

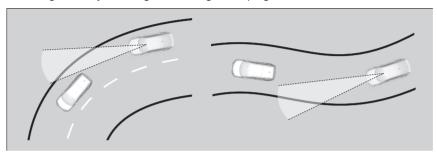

- Driving on rutted roads (snowy or unpaved roads, etc.).
- Puddles or a film of water is on the road surface.
- Your vehicle is strongly shaken on uneven road surfaces.

### **■** Vehicle conditions


- The vehicle is tilted due to heavy luggage in the luggage area or rear seats.
- Tvre chains\* are installed.
- The front of the camera is covered by dirt, fog, rain, mud, wet snow, seals, accessories, stickers, or film of the windscreen.
- Driving at night or in a dark place (e.g., a tunnel) with the headlights off.
- There is residue on the windscreen from the windscreen wipers.
- When lighting is weak due to dirt covering the headlight lenses, or there is poor visibility in a dark place due to the headlights being improperly adjusted.
- An abnormal tyre or wheel condition (incorrect sizes, varied sizes or construction, improperly inflated, compact spare tyre\*, etc.).
- The suspension has been modified.

# ■ Examples of conditions under which the camera may not correctly detect the vehicle ahead of you

- A vehicle suddenly crosses in front of you.
- The interval between your vehicle and the vehicle ahead of you is too short.
- When the vehicle ahead of you blends in with the background, preventing the system from recognising it.
- The headlights of the vehicle ahead of you are lit on one side or not lit on either side in a dark place.

#### ■ Examples of conditions under which the system may not work properly

- A vehicle ahead of you stops and the speed difference between your vehicle and the vehicle ahead of you is significantly large.
- When the vehicle ahead of you slows suddenly.
- When a vehicle ahead of you is specially-shaped.
- When a vehicle is lower in the rear than the front such as lorries that are not carrying a load, or a narrow vehicle.

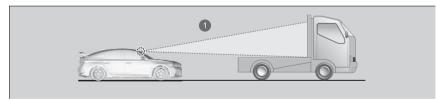

- 1 Camera detects upper section of an empty carrier lorry.
- When your vehicle or the vehicle ahead of you is driving on the edge of the lane.
- When the vehicle ahead of you is a narrow vehicle such as a motorcycle.

• When the minimum ground clearance of a vehicle ahead of you is extremely high.



• When the camera cannot correctly identify the shape of the vehicle ahead of you.

# ■ To Adjust the Vehicle Speed

Increase or decrease the vehicle speed using the **RES/+/SET/-** switch on the steering wheel.



- 1 To increase speed
- 2 To decrease speed
- Each time you press the **RES/+/SET/-** switch up or down, the vehicle speed is increased or decreased by about 1 km/h or 1 mph accordingly.
- If you keep the **RES/+/SET/-** switch pressed up or down, the vehicle speed increases or decreases by about 10 km/h or 10 mph accordingly.

#### ∑To Adjust the Vehicle Speed

If a vehicle detected ahead is going at a speed slower than your increased set speed, ACC may not accelerate your vehicle. This is to maintain the set interval between your vehicle and the vehicle ahead.

When you depress the accelerator pedal and then press down and release the **RES/+/SET/-** switch, the current speed of the vehicle is set.

# ■ To Set or Change Following-interval



1 Interval Button

Press the interval button to change the ACC following-interval.

Each time you press the button, the following-interval (the interval behind a vehicle detected ahead of you) setting cycles through extra long, long, middle, and short following-intervals.

Determine the most appropriate followinginterval setting based on your specific driving conditions. Be sure to adhere to any following-interval requirements set by local regulation.

The higher your vehicle's following-speed is, the longer the short, middle, long or extra long following-interval becomes. See the following examples for your reference.


Following interval		When the Set Speed is:		
Г	ollowing-interval	80 km/h (50 mph)	104 km/h (65 mph)	
Short	≜ •	26.6 metres 87.3 feet 1.2 sec	33.7 metres 110.6 feet 1.2 sec	
Middle	A P	34.6 metres 113.4 feet 1.6 sec	44.9 metres 147.2 feet 1.6 sec	
Long		44.0 metres 144.2 feet 2.0 sec	57.1 metres 187.3 feet 2.0 sec	
Extra Long		53.6 metres 175.9 feet 2.4 sec	70.0 metres 229.6 feet 2.4 sec	

When using the +R gauge

### ∑To Set or Change Following-interval

The driver must in all circumstances preserve a sufficient braking interval from the vehicle which precedes it and be aware that minimum intervals or times of spacing can be provided by the provisions of the Motorway Code locally applicable and that it is the driver's responsibility to respect those laws.

### **■** To Cancel

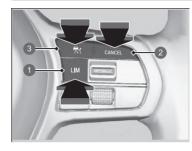

- 1 LIM Button
- **CANCEL** Button
- 3 R Button

To cancel ACC, do any of the following:

- Press the **CANCEL** button.
  - ► The 🔣 indicator (green) on the gauge changes to the 🔂 indicator (white).
- Press the 🔂 button.
  - ▶ 🛣 indicator (green) goes off.
- Press the **LIM** button.
- Depress the brake pedal while the vehicle is moving forward.
  - ► The indicator (green) on the gauge changes to the indicator (white).
- Depress the clutch pedal for five seconds or more
  - ► The indicator (green) on the gauge changes to the indicator (white).


#### ∑To Cancel

Resuming the prior set speed: After you have cancelled ACC, you can activate the ACC with the prior set speed displayed on the gauge (in grey) by pressing the **RES/+/SET/-** switch up.

When you turn the ACC off by pressing the **CANCEL** button or depressing the brake pedal, the prior set speed is displayed on the gauge in grey.

When pressing the **RES/+/SET/-** switch up, the ACC is acti<u>vate</u>d with displayed speed.

If the similar indicator (white) is displayed and you press the RES/+/SET/- switch up, but no prior set speed (in grey) is displayed, the speed will be set to your vehicle's current speed.

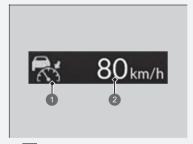

- 1 (White)
- Prior Set Speed (Grey)

### **■** Automatic cancellation

The beeper sounds and a message appears on the gauge when ACC is automatically cancelled. Any of these conditions may cause the ACC to automatically cancel:

- Bad weather (rain, fog, snow, etc.)
- The vehicle ahead of you cannot be detected.
- An abnormal tyre condition is detected, or the tyres are skidding.
- Driving on a mountainous road for extended periods, or driving off road.
- Abrupt steering wheel movement.
- When the ABS, VSA, or CMBS is activated.
- When the VSA system indicator comes on.
- When you manually apply the parking brake.
- When vehicle speed is less than 25 km/h (16 mph).
- Water is sprayed by or snow blown from a vehicle ahead.
- Driving into low sunlight (e.g., at dawn or dusk).
- When the detected vehicle within the ACC range is too close to your vehicle.
- When accelerating rapidly.
- The front of the camera is covered by dirt, fog, rain, mud, wet snow, seals, accessories, stickers, or film on the windscreen.
- The engine is turned off.
- The vehicle is loaded heavy luggage in the luggage area or rear seats.
- When passing through a dark place, such as tunnel.
- When the parking brake and brake system indicator (amber) comes on.
- The vehicle has repeatedly applied the brakes to maintain the set speed (for example, you are descending a long slope).
- When the system doesn't detect any driving actions from the driver for a certain amount of time while the LKAS is also activated.

#### ∑To Cancel

The set speed cannot be set or resumed when ACC has been turned off using the substant. Press the substant to activate the system, then set the desired speed.

If the vehicle speed is less than 30 km/h (18 mph) you cannot resume.

- Ignoring shift down indication shown in the gauge will cancel the ACC after about 10 seconds.
- The engine speed goes into the tachometer red zone.
- The engine speed goes to below 1,000 rpm.
- You shift into neutral temporarily when shifting into a higher or lower gear.
- ullet When the transmission is put into  ${f N}$  without depressing the clutch pedal.

# Lane Keeping Assist System (LKAS)


Provides steering input to help to keep the vehicle in the middle of a detected lane and provides tactile, audible and visual alerts if the vehicle is detected drifting out of its lane.

### ■ Steering input assist

The system applies torque to the steering to keep the vehicle between the left and right lane lines. The applied torque becomes stronger as the vehicle gets closer to either of the lane lines.

#### ■ Tactile, audible and visual alerts

Rapid vibrations on the steering wheel, audible and a warning display alert you that the vehicle is drifting out of a detected lane.

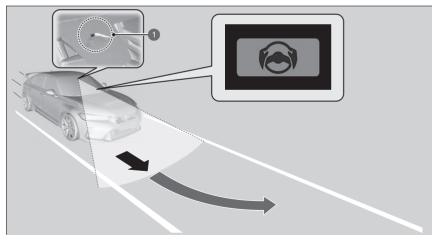

1 Front wide view camera: Monitors the lane lines

∑Lane Keeping Assist System (LKAS)

#### **Important Safety Reminders**

The LKAS is for your convenience only. It is not an autonomous driving system and always requires driver attention and control. The system does not work if you take your hands off the steering wheel or fail to steer the vehicle.

The LKAS is convenient when it is used on motorways or a dual carriage way.

Do not place objects on the instrument panel. Objects may reflect on the windscreen and prevent correct detection of the traffic lanes.

The LKAS only alerts you when lane drift is detected without a turn signal in use. The LKAS may not detect all lane markings or lane departures; accuracy will vary based on weather, speed, and lane marker condition

It is always your responsibility to safely operate the vehicle and avoid collisions.

You can read about handling information for the camera equipped with this system.

Front Wide View Camera P. 489

The LKAS may not work properly or may work improperly under the certain conditions:


LKAS Conditions and Limitations P. 470

When you operate the turn signals to change lanes, the system is suspended, and resumes after the signals are off.

If you make a lane change without operating the turn signals, the LKAS alerts activate, and torque is applied to the steering.

## ■ Lane Keep Support Function

Provides assistance to keep the vehicle in the centre of the lane. When the vehicle nears a white or yellow line, steering force of the electric power steering will become stronger.

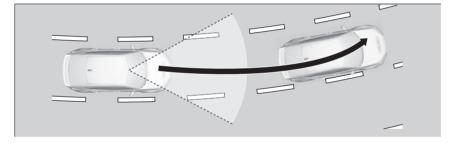


#### ∑Lane Keeping Assist System (LKAS)

When it fails to detect lanes, the system will temporarily be cancelled. When a lane is detected, the system will recover automatically.

The LKAS may not function as designed while driving in frequent stop and go traffic, or on roads with sharp curves.

# ■ Lane Departure Warning Function

When the vehicle enters the warning area, the LKAS alerts you with slight steering wheel vibration, and audible and visual warnings.

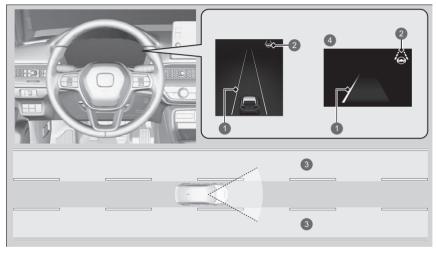


- 1 Amber line
- 2 LKAS indicator (Green)
- Warning Area
- 4 When using the +R gauge

# ■ When the System can be Used

The system can be used when the following conditions are met.

- The lane in which you are driving has detectable lane markers on both sides, and your vehicle is in the centre of the lane.
- The vehicle is travelling between about 72 and 180 km/h (45 and 112 mph).
- You are driving on a straight or slightly curved road.
- The turn signals are off.
- The brake pedal is not depressed.

### ■ How to activate the system

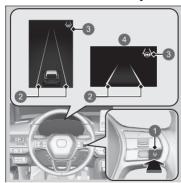

- LKAS Button
- White lines
- 3 Lane Keeping Assist System (LKAS) Indicator (White)
- 4 When using the +R gauge

- 1. Press the LKAS button
  - LKAS indicator (white) appears on the gauge.

The system is standby.

► If traffic lane lines are detected, white lines appear on the gauge.

#### When the System can be Used


If the vehicle drifts towards either left or right lane line due to the system applying torque, turn off the LKAS and have your vehicle checked by a dealer.

Be sure to keep the following below to activate the system properly;

- Always keep the windscreen around the camera clean.
- When cleaning the windscreen, be careful not to apply windscreen cleanser to the camera lens.
- Do not touch the camera lens.
- Do not attach a sticker to the area around the camera.

If LKAS button is pressed when the system can be used, LKAS is on without standby.

When you completely disable VSA, you cannot use LKAS.

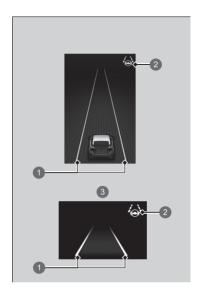

- Green lines
- 2 Lane Keeping Assist System (LKAS) Indicator (Green)
- 3 When using the +R gauge

- **2.** Keep your vehicle near the centre of the lane while driving.
  - ➤ The LKAS indicator changes from white to green, and white lines change to green once the system starts operating after detecting the left and right lane markings.


### ■ To Cancel



Press the LKAS button.

The LKAS is turned off every time you stop the engine, even if you turned it on the last time you drove the vehicle.

1 LKAS Button

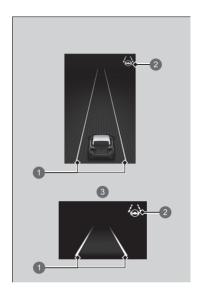

- White lines
- 2 Lane Keeping Assist System (LKAS) Indicator (White)
- 3 When using the +R gauge

# ■ The system operation is suspended if you:

- Decrease the vehicle speed to about 64 km/h (40 mph) or less.
  - ► Increasing the vehicle speed to about 72 km/h (45 mph) or more resumes the LKAS.
- Depress the brake pedal.
  - ► The LKAS resumes and starts detecting the lane lines again once you release the brake pedal.
- Your vehicle is driving to the right or the left of the lane.

■ The system operation is suspended if you:

You can change the setting for the LKAS. LKAS suspended beep on and off can be selected.

**Customized Features** P. 295

When the LKAS is suspended, green lines on the gauge change to white lines or disappear, and the beeper sounds (if activated).

### ■ The LKAS may be automatically suspended when:

- The system fails to detect lane lines.
- The steering wheel is turned quickly.
- You fail to steer the vehicle.
- Driving through a sharp curve.
- Driving at a speed in excess of approximately 185 km/h (115 mph).

Once these conditions no longer exist, the LKAS automatically resumes.

### ■ The LKAS may be automatically cancelled when:

In the following cases, traffic lane lines may disappear on the gauge, the beeper may sound, and the LKAS may be automatically cancelled:

- The camera temperature gets extremely high.
- The camera behind the rearview mirror, or the area around the camera, including the windscreen, gets dirty.
- The ABS or VSA system engages.

### LKAS Conditions and Limitations

The system may not detect lane markings and therefore may not keep the vehicle in the middle of the lane under certain conditions, including the following:

#### **■** Environmental conditions

- There is little contrast between lane lines and the roadway surface.
- Driving in bad weather (rain, fog, snow, etc.).
- Driving on a snowy or wet roadway.
- Driving into low sunlight (e.g., at dawn or dusk).
- Shadows of adjacent objects (trees, buildings, guard rails, vehicles, etc.) are parallel to white (or yellow) lines.
- Sudden changes between light and dark, such as the entrance or exit of a tunnel or the shadows of trees, buildings, etc.
- Driving at night or in a dark place such as a tunnel (due to low-light conditions, lane lines or the road surface may not be illuminated).
- The distance between your vehicle and the vehicle ahead of you is too short, and lane lines and the road surface are not visible.
- Strong light is reflected onto the roadway.

### **■** Roadway conditions

- Driving on a road with temporary lane markings.
- Faint, multiple, or varied lane markings are visible on the roadway due to road repairs or old lane markings.




- Faded lines
- 2 Duplicate lines
- 3 Tyre tracks
- The roadway has merging, split, or crossing lines, such as at an intersection or crosswalk.
- The lane markings are extremely narrow, wide, or changing.



- Very wide or narrow traffic lane
- Part of the lane markings are hidden by an object, such as a vehicle.
- The road is hilly or the vehicle is approaching the crest of a hill.
- Your vehicle is strongly shaken on uneven road surfaces.
- When objects on the road (curb, guard rail, pylons, etc.) are recognised as white (or yellow) lines.
- Driving on rough or unpaved roads, or over bumpy surfaces.

- Driving on roads with double lane lines.
- Driving on snowy or slippery roads.
- The pavement is only partially visible due to snow or puddles on the road.
- There is a film of water or puddles on the road surface.
- White (or yellow) lines are not recognised correctly due to road conditions such as curves, twists, or hills.
- Driving on unpaved or rutted roads.
- Passing through a junction.

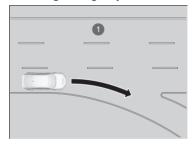

1 Lane void of lines at junction

#### ■ Vehicle conditions

- When lighting is weak due to dirt covering the headlight lenses, or there is poor visibility in a dark place due to the headlights being improperly adjusted.
- The front of the camera is covered by dirt, fog, rain, mud, wet snow, seals, accessories, stickers, or film on the windscreen.
- Driving at night or in a dark place (e.g., a tunnel) with the headlights off.
- There is residue on the windscreen from the windscreen wipers.
- An abnormal tyre or wheel condition (incorrect sizes, varied sizes or construction, improperly inflated, compact spare tyre\*, etc.).
- The vehicle is tilted due to a heavy luggage in the luggage area or rear seats.
- The suspension has been modified.
- Tyre chains\* are installed.

\* Not available on all models 473

# **Road Departure Mitigation System**

Alerts and helps to assist you when the system detects a possibility of your vehicle crossing over detected lane markings, or approaching the outer edge of the pavement (into grass or gravel border) or a detected oncoming vehicle.

### ■ How the System Works



- Amber line
- 2 When using the +R gauge

The front wide view camera behind the rearview mirror monitors left and right lane markings in white or yellow, the outer edge of the pavement (bordered by grass or gravel) or a detected oncoming vehicles.

If your vehicle approaches any detected lane markings, the outer edge of the pavement (bordered by grass or gravel) or a detected oncoming vehicles when the turn signals have not been engaged, the system activates.

▶ If the system cannot detect lane markings (in white or yellow), no assistance will be provided to avoid approaching oncoming vehicles. In addition to a visual alert, the system assists with steering and alerts you with rapid steering wheel vibrations to help you remain within the detected lane.

**■ Customized Features** P. 295

As a visual alert, Lane departure message appears on the driver information interface.

#### **Important Safety Reminder**

Like all assistance systems, the Road Departure Mitigation system has limitations.

Overreliance on the Road Departure Mitigation system may result in a collision. It is always your responsibility to keep the vehicle within your driving lane.

The Road Departure Mitigation system alerts you when the system detects that you are approaching the outer edge of the pavement (into grass or gravel border), an oncoming vehicle, or drifting into another lane without using a turn signal.

The Road Departure Mitigation system may not detect all lane markings or every instance of lane drift

The Road Departure Mitigation system may not detect that you are approaching the outer edge of the pavement (bordered by grass or gravel) or an oncoming vehicle.


The Road Departure Mitigation system may not be able to assist you depending on weather, speed or road conditions.

The Road Departure Mitigation system is not activated for about 15 seconds after the engine starts.

You can read about handling information for the camera equipped with this system.

Front Wide View Camera P. 489

The system cancels assisting operations when you turn the steering wheel to avoid crossing over detected lane markings or approaching the outer edge of the pavement (into grass or gravel border) or an oncoming vehicle.

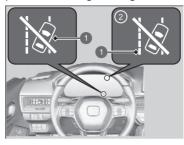

- Road Departure Mitigation System Steering Assist Auto OFF indicator
- 2 When using the +R gauge

If the system operates several times without detecting driver response, the system beeps to alert you. After that, Road Departure Mitigation System Steering Assist Auto OFF indicator comes on, the Road Departure Mitigation steering assist is temporarily stopped, and the system will only alert you with the warning sound.

After a few minutes, the Road Departure Mitigation System Steering Assist Auto OFF indicator goes off and the Road Departure Mitigation system is fully restored.

### ■ Road Departure Mitigation System

The Road Departure Mitigation system may not work properly or may work improperly under the certain conditions:

# Road Departure Mitigation system Conditions and Limitations P. 478

The Road Departure Mitigation system does not function while VSA is completely disabled.

There are times when you may not notice the Road Departure Mitigation system functions due to your operation of the vehicle, or road surface conditions.

You can change the settings for the Road Departure Mitigation system.

If LKAS is off, the message below may appear if the system has determined that there is a possibility of your vehicle crossing over detected lane markings, the outer edge of the pavement (into a grass or gravel border) or oncoming vehicle.

Customized Features P. 295



### How the System Activates

The system activates when all of the following conditions are met:

- The lane markings is white (yellow).
  - The vehicle is travelling between about 72 and 180 km/h (45 and 112 mph).
  - When oncoming vehicles are running

The vehicle is travelling between about 30 and 180 km/h (18 and 112 mph).

- The outer edge of the pavement is grass or gravel border.

  The vehicle is travelling between about 30 and 180 km/h (18 and 112 mph).
- The vehicle is on a straight or slightly curved road.
- The turn signals are off.
- The system makes a determination that the driver is not actively accelerating, braking, or steering.

#### 


The Road Departure Mitigation system may automatically shut off and the safety support indicator (amber) and road departure mitigation indicator (amber) comes and stays on.

#### **▶ Indicators** P. 98

The Road Departure Mitigation system function can be impacted when the vehicle is:

- Driven on the inside edge of a curve, or outside of a lane.
- Driven in a narrow lane.

### ■ Road Departure Mitigation system On and Off

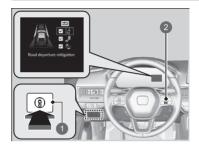

- Safety Support Switch
- Right Selector Wheel

When you turn the Road Departure Mitigation system on and off, do the following.

- **1.** Press the safety support switch.
- **2.** Roll the right selector wheel to the symbol and push it.
  - ➤ A message appears on the driver information interface when the system turns on or off.
  - A tick mark appears in the box and the colour of the symbol changes to green when the system is on. The tick mark disappears and the colour of the symbol changes to grey when the system is off.

The Road Departure Mitigation system is turned on every time you start the engine, even if you turned it off the last time you drove the vehicle.

#### ■Road Departure Mitigation system On and Off

You can also select the safety support content from the driver information interface.

# Driver Information Interface Right Side Area P. 138

The adaptive cruise control (ACC), safety support, vehicle stability assist (VSA) system, and low tyre pressure/deflation warning system indicators may come on in amber along with a message in the gauge when you set the power mode to ON after reconnecting the battery.

Drive a short distance at more than 20 km/h (12 mph). Each indicator should go off. If any do not, have your vehicle checked by a dealer.

### ■ Road Departure Mitigation system Conditions and Limitations

The system may not properly detect lane markings (in white or yellow), the outer edge of the pavement (into grass or gravel border) or an oncoming vehicle under certain conditions. Some examples of these conditions are listed below.

#### ■ Environmental conditions

- There is little contrast between lane lines and the roadway surface.
- Driving in bad weather (rain, fog, snow, etc.).
- Driving on a snowy or wet roadway.
- Driving into low sunlight (e.g., at dawn or dusk).
- Shadows of adjacent objects (trees, buildings, guard rails, vehicles, etc.) are parallel to white (or yellow) lines.
- Sudden changes between light and dark, such as the entrance or exit of a tunnel or the shadows of trees, buildings, etc.
- Strong light is reflected onto the roadway.
- Driving at night or in a dark place such as a tunnel (due to low-light conditions, lane lines, the road surface, or oncoming vehicles may not be illuminated).
- The distance between your vehicle and the vehicle ahead of you is too short, and lane lines and the road surface are not visible.
- The outer edge of the road is bordered by objects, materials, etc. other than grass or gravel.

### **■** Roadway conditions

- Driving on a road with temporary lane markings.
- Faint, multiple, or varied lane markings are visible on the roadway due to road repairs or old lane markings.
- The roadway has merging, split, or crossing lines, such as at an intersection or crosswalk
- The lane markings are extremely narrow, wide, or changing.
- Part of the lane markings are hidden by an object, such as a vehicle.
- The road is hilly or the vehicle is approaching the crest of a hill.
- Your vehicle is strongly shaken on uneven road surfaces.
- When objects on the road (curb, guard rail, pylons, etc.) are recognised as white (or yellow) lines.
- Driving on rough or unpaved roads, or over bumpy surfaces.
- Driving on roads with double lane lines.
- Driving on snowy or slippery roads.
- Passing through a junction.
- The pavement is only partially visible due to snow or puddles on the road.
- Driving on unpaved or rutted roads.
- White (or yellow) lines are not recognised correctly due to road conditions such as curves, twists, or hills.

#### ■ Vehicle conditions

- When lighting is weak due to dirt covering the headlight lenses, or there is poor visibility in a dark place due to the headlights being improperly adjusted.
- The front of the camera is covered by dirt, fog, rain, mud, wet snow, seals, accessories, stickers, or film on the windscreen.
- Driving at night or in a dark place (e.g., a tunnel) with the headlights off.
- When the driver operates the brake pedal and steering wheel.
- There is residue on the windscreen from the windscreen wipers.
- An abnormal tyre or wheel condition (incorrect sizes, varied sizes or construction, improperly inflated, compact spare tyre\*, etc.).
- The vehicle is tilted due to a heavy luggage in the luggage area or rear seats.
- Tyre chains\* are installed.
- The suspension has been modified.

# ■ Examples of limitations on detection due to the condition of oncoming vehicles

- The oncoming vehicle or vehicle ahead of you is sideways.
- The oncoming vehicle jumps out in front of you.
- When the oncoming vehicle blends in with the background, preventing the system from recognising it.
- The headlights of a oncoming vehicle are lit on one side or not lit on either side in a dark place.
- The distance between your vehicle and the oncoming vehicle is too short.
- Part of the oncoming vehicle is not visible due to the vehicle ahead of you.
- There are multiple oncoming lanes or turning lanes.
- The vehicle in the adjacent lane is parked or moving at an extremely slow speed.

### **■** Examples of other limitations on detection or system operation

- When the oncoming vehicle is specially-shaped.
- When the camera cannot correctly identify the shape of the oncoming vehicle.

#### ■ With Little Chance of a Collision

The Road Departure Mitigation system may activate in the below conditions.


• When driving through curves, your vehicle comes to a point where an oncoming vehicle is right in front of you.

# **Traffic Sign Recognition System**

Reminds you of road sign information, such as the current speed limit and that overtaking is prohibited, your vehicle has just passed through, showing it on the gauge.

### ■ How the System Works

When the front wide view camera located behind the rearview mirror captures traffic signs while driving, the system displays the ones that are recognised as designated for your vehicle. The sign icon will be displayed until the vehicle reaches a predetermined time and distance.

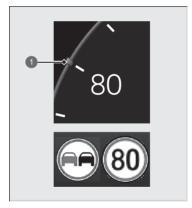

Speed Limit Sign

#### ∑Traffic Sign Recognition System

The system is designed to detect signs that follow the Vienna Convention standards. Not all signs may be displayed, but any signs posted on roadsides should not be ignored. The system does not work on the designated traffic signs of all the countries you travel, nor in all situations.

Do not rely too much on the system. Always drive at speeds appropriate for the road conditions.

Never apply a film or attach any objects to the windscreen that could obstruct the front wide view camera's field of vision and cause the system to operate abnormally.

Scratches, nicks, and other damage to the windscreen within the front wide view camera's field of vision can cause the system to operate abnormally. If this occurs, we recommend that you replace the windscreen with a genuine Honda replacement windscreen. Making even minor repairs within the front wide view camera's field of vision or installing an aftermarket replacement windscreen may also cause the system to operate abnormally. After replacing the windscreen, have a dealer recalibrate the front wide view camera. Proper calibration of the front wide view camera is necessary for the system to operate properly.

The Traffic Sign Recognition System is not activated for about 15 seconds after the power system is turned on.

You can turn the traffic sign recognition system on and off.

Customized Features P. 295

The sign icon also may switch to another one, or disappear when:

- The end of speed limit or other designated limit is detected.
- Your vehicle enters/exists motorway or highway.
- You make a turn with a turn signal at an intersection.

If the system does not detect any traffic signs while you are driving, the  $\bigcirc$  (white) may appear.



#### 

To help reduce the likelihood that high interior temperatures will cause the front wide view camera's sensing system to shut off, when parking, find a shady area or face the front of the vehicle away from the sun. If you use a reflective sun shade, do not allow it to cover the camera housing.

Covering the front wide view camera can concentrate heat on it.

You can read about handling information for the front wide view camera equipped with this system.

Front Wide View Camera P. 489

If your vehicle exceeds the detected speed limit, an icon representing the speed limit sign for the current area will blink in the display.

**⊇** Customized Features P. 295

The system's ability to accurately notify the driver of the speed limit is dependent on certain conditions such as the units displayed on the traffic sign as well as the speed and direction of travel of the vehicle. In some cases, the system may display false warnings or other inaccurate information.

**▶** Traffic Sign Recognition System Conditions and Limitations P. 485

### 

The unit for speed limits (mph or km/h) varies from country to country. Just after entering a country whose unit differs to the one of the country from which you came, Traffic Sign Recognition System may not work correctly.

Customized Features P. 295

### ■ Traffic Sign Recognition System Conditions and Limitations

The Traffic Sign Recognition system may incorrectly recognise, be slow to identify, or fail to recognise the traffic sign in the following cases.

#### **■** Environmental conditions

- Driving into low sunlight (e.g., at dawn or dusk).
- Strong light is reflected onto the roadway.
- Driving at night, in dark areas such as long tunnels.
- Driving in bad weather (rain, fog, snow, etc.).
- Sudden changes between light and dark, such as the entrance or exit of a tunnel or the shadows of trees, buildings, etc.
- Water is sprayed by or snow blown from a vehicle ahead.

### ■ Roadway conditions

• Your vehicle is strongly shaken on uneven road surfaces.

#### ■ Vehicle conditions

- When lighting is weak due to dirt covering the headlight lenses, or there is poor visibility in a dark place due to the headlights being improperly adjusted.
- The front of the camera is covered by dirt, fog, rain, mud, wet snow, seals, accessories, stickers, or film on the windscreen.
- There is residue on the windscreen from the windscreen wipers.
- An abnormal tyre or wheel condition (incorrect sizes, varied sizes or construction, improperly inflated, compact spare tyre\*, etc.).
- The vehicle is tilted due to heavy luggage in the luggage area or rear seats.
- The suspension has been modified.
- Tyre chains\* are installed.
- Driving at night or in a dark place (e.g., a tunnel) with the headlights off.

When the Traffic Sign Recognition System malfunctions,  $\bigcirc$  (amber) appears on the gauge. If this message does not disappear, have your vehicle checked by a dealer.



### ■ The position or the condition of the traffic sign

- The sign is in a place that makes it hard to find.
- The sign is located far away from your vehicle.
- The sign is located where it is hard for headlight beams to reach.
- The sign is on a corner or bend in the road.
- The sign is faded or bent.
- The sign is rotated or damaged signs.
- The sign is covered with mud, snow, or frost.
- Part of the sign is hidden by the trees, or is in the shadow of a vehicle or other object.
- Light (such as a streetlight) is reflected on the surface of the sign, or it is hidden in shadow.
- The sign is too bright or too dark (electric signs).
- Small signs (auxiliary signs, etc.).

#### ■ Other conditions


• When you are driving at a high speed.

The Traffic Sign Recognition System may not operate correctly, such as displaying signs that do not adhere to the actual regulations for the roadway or do not exist at all in the following cases:

- A speed limit sign may display at a higher or lower speed than the actual speed limit
- There is a supplementary sign with further information such as weather, time, vehicle type, etc.
- Figures on the sign are hard to read (electric sign, numbers on the signs are blurred, etc.).
- The sign is in the vicinity of the lane you are driving in, even though it is not for the lane, such as a speed limit sign situated at the junction between the side road and the main road.
- There are things that look similar in colour or shape to recognised objects (similar sign, electric sign, signboard, structure, etc.).

### ■ Signs Displayed on the Gauge

Two traffic signs can be simultaneously displayed next to each other when detected. The speed limit sign icon is displayed on the screen. The overtaking prohibition sign icon appears on the left. Any additional sign that indicates speed limit based on weather (snow, etc.) or specific period of time can appear on either side.

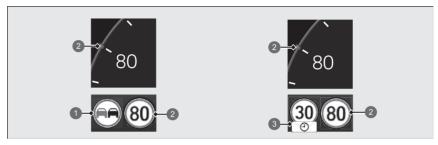


- Overtaking Prohibition Sign\*1
- 2 Speed Limit Sign
- 3 Additional Speed Limit Sign Based on Conditions\*2

Depending on situation, \*1 can be replaced with \*2, or \*2 can appear on the right side.

### **Front Wide View Camera**

The camera, used in systems such as Lane Keeping Assist System (LKAS), Road Departure Mitigation System, Adaptive Cruise Control (ACC), Traffic Sign Recognition System, and Collision Mitigation Braking System (CMBS), is designed to detect an object that triggers any of the systems to operate its functions.

## Camera Location and Handling Tips

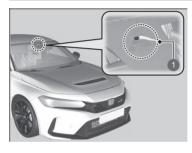

Front Wide View Camera

This camera is located behind the rearview mirror.

To help to reduce the likelihood that high interior temperatures will cause the camera's sensing system to shut off, when parking, find a shady area or face the front of the vehicle away from the sun. If you use a reflective sun shade, do not allow it to cover the camera housing. Covering the camera can concentrate heat on it.

#### ∑Front Wide View Camera

Never apply a film or attach any objects to the windscreen, the bonnet, or the front grille that could obstruct the camera's field of vision and cause the system to operate abnormally.

Scratches, nicks, and other damage to the windscreen within the camera's field of vision can cause the system to operate abnormally. If this occurs, we recommend that you replace the windscreen with a genuine Honda replacement windscreen. Making even minor repairs within the camera's field of vision or installing an after market replacement windscreen may also cause the system to operate abnormally.

After replacing the windscreen, have a dealer recalibrate the camera. Proper calibration of the camera is necessary for the system to operate properly.

Do not place an object on the top of the instrument panel. It may reflect onto the windscreen and prevent the system from detecting lane lines properly.

#### > Front Wide View Camera

If the Some driver assist systems cannot operate: Camera temperature too high message appears:

- Use the climate control system to cool down the interior and, if necessary, also use demister mode with the air flow directed towards the camera.
- Start driving the vehicle to lower the windscreen temperature, which cools down the area around the camera.

If the Some driver assist systems cannot operate: Clean front windscreen or poor viewing condition. message appears:

- Park your vehicle in a safe place, and make sure the windscreen is clean.
  - Clean the windscreen if it is dirty. If the message does not disappear after driven for a while, have your vehicle checked by a dealer.

# **Braking**

# **Brake System**

### ■ Parking Brake

Use the parking brake to keep the vehicle stationary when parked. When the parking brake is applied, you can manually or automatically release it.



1 Electric Parking Brake Switch



Electric Parking Brake Switch

### ■ To apply

The electric parking brake can be applied any time the vehicle has battery, no matter which position the power mode is in.

Pull the electric parking brake switch up gently and securely.

- ▶ The indicator in the switch comes on.
- ➤ The parking brake and brake system indicator (red) comes on.

#### **■** To release

The power mode must be in ON in order to release the electric parking brake.

- **1.** Depress the brake pedal.
- **2.** Press the electric parking brake switch.
  - ► The indicator in the switch goes off.
  - ➤ The parking brake and brake system indicator (red) goes off.

Manually releasing the parking brake using the switch helps your vehicle to start slowly and smoothly when facing downhill on steep hills.

#### ▶ Parking Brake

You may hear the electric parking brake system motor operating from the rear wheel area when you apply or release the parking brake. This is normal.

The brake pedal may slightly move due to the electric parking brake system operation when you apply or release the parking brake. This is normal.

You cannot apply or release the parking brake if the battery goes dead.

**If the Battery Is Dead** P. 618

If you pull up and hold the electric parking brake switch while driving, the brakes on all four wheels are applied by the VSA system until the vehicle comes to a stop. The electric parking brake then applies, and the switch should be released.


In the following situations, the parking brake automatically operates.

- When the vehicle stops with the automatic brake hold system activated for more than 10 minutes.
- When the driver's seat belt is unfastened while your vehicle is stopped and brake hold is applied.
- When the engine is turned off, except by Auto Idle Stop system, while brake hold system is applied.
- When there is a problem with the Brake Hold System while brake hold is applied.

### **■** To release automatically

Depress the accelerator pedal while releasing the clutch pedal releases the parking brake.

Use the accelerator pedal to release the parking brake when you are starting the vehicle facing uphill, or in a traffic jam.

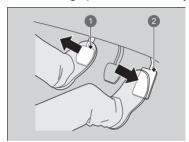

Gently depress the accelerator pedal and release the clutch pedal.

➤ The parking brake indicator goes off. The parking brake automatically releases as you depress the accelerator pedal when:

- You are wearing the driver's seat belt.
- The engine is running.
- The transmission is not in **N**.

Clutch Pedal

2 Accelerator Pedal

#### ▶ Parking Brake

If the parking brake cannot be released automatically, release it manually.

When the vehicle is travelling uphill, the accelerator pedal may need to be pressed farther to automatically release the electric parking brake.

#### ∑To release automatically

The parking brake cannot be released automatically while the following indicators are on:

• Malfunction indicator lamp

The parking brake may not be released automatically while the following indicators are on:

- Parking brake and brake system indicator (amber)
- VSA system indicator
- ABS indicator
- Supplemental restraint system indicator

The clutch pedal is fully depressed before gently depress the accelerator pedal and release the clutch pedal.

### **■ Foot Brake**

Your vehicle is equipped with disc brakes at all four wheels. A vacuum power assist helps reduce the effort needed on the brake pedal. The brake assist system increases the stopping force when you depress the brake pedal hard in an emergency situation. The anti-lock brake system (ABS) helps you to retain steering control when braking very hard.

Brake Assist System P. 499

**► Anti-lock Brake System (ABS)** P. 498

### **■** Brake squeal

To satisfy the performance under a wide range of driving conditions, a high performance braking system is equipped on your vehicle. You may hear the brake squeal under certain conditions, such as vehicle speed, deceleration, humidity, and so on. This is not a malfunction.

#### ≫Foot Brake

Check the brakes after driving through deep water, or if there is a buildup of road surface water. If necessary, dry the brakes by lightly depressing the pedal several times.

If you hear a continuous metallic friction sound when applying the brakes, the brake pads need to be replaced. Have your vehicle checked by a dealer.

Constantly using the brake pedal while going down a long hill builds up heat, which reduces the brake effectiveness. Apply engine braking by taking your foot off the accelerator pedal and downshifting to a lower gear. With manual transmission use a lower gear for greater engine braking.

Do not rest your foot on the brake pedal while driving, as it will lightly apply the brakes and cause them to lose effectiveness over time and reduce pad life. It will also confuse drivers behind you.

#### Automatic Brake Hold

Keeps the brake applied after releasing the brake pedal until you shift into one of the gears other than  $\boxed{\mathbf{N}}$  and:

- Release the clutch pedal on a level road or when facing downhill.
- Release the clutch pedal and depress the accelerator pedal when facing uphill. You can use this system while the vehicle is temporarily stopped, like at traffic lights and in heavy traffic.

### ■ Turning on the system



Automatic Brake Hold Button

2 Comes On

Fasten your seat belt properly, then start the engine. Press the automatic brake hold button

► The automatic brake hold system indicator comes on. The system is turned on. ■ Automatic Brake Hold

### **AWARNING**

Activating the automatic brake hold system on steep hills or slippery roads may still allow the vehicle to move if you remove your foot from the brake pedal.

If a vehicle unexpectedly moves, it may cause a crash resulting in serious injury or death.

Never activate the automatic brake hold system or rely on it to keep a vehicle from moving when stopped on a steep hill or slippery roads.


## **AWARNING**

When using the automatic brake hold, keep your foot on the brake pedal until the automatic brake hold indicator comes on.

If the vehicle unexpectedly moves, it may cause a crash resulting in serious injury or death.

Release your foot from the brake pedal after the automatic brake hold indicator comes on.

### ■ Activating the system

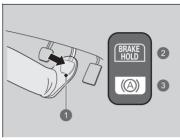

- Brake Pedal
- On
- Comes On

Depress the brake pedal to come to a complete stop.

- ► The automatic brake hold indicator comes on. Braking is kept for up to 10 minutes.
- ➤ Release the brake pedal after the automatic brake hold indicator comes on.

#### ■ Automatic Brake Hold

While the system is activated, you can turn off the engine or park the vehicle through the same procedure as you normally do.


**When Stopped** P. 501

Whether the system is on, or the system is activated, the automatic brake hold turns off once the engine is off.

The system turns off if the engine stalls while automatic brake hold is active or the system is on.

You may hear an operating noise if the vehicle moves while the automatic brake hold system is in operation.

### **■** Cancelling the system

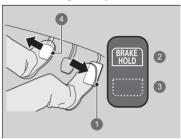

- Accelerator Pedal
- 2 On
- Goes Off
- Clutch Pedal

Shift into one of the gears other than  $\boxed{\mathbf{N}}$  and:

- ➤ Release the clutch pedal on a level road or when facing downhill.
- ▶ Release the clutch pedal and depress the accelerator pedal when facing uphill. The system is cancelled and the vehicle starts to move.
- ➤ The automatic brake hold indicator goes off.

The system continues to be on.


### ■ The system automatically cancels when:

• You engage the parking brake.

### ■ The system automatically cancels and the parking brake is applied when:

- Braking is kept for more than 10 minutes.
- The driver's seat belt is unfastened.
- The engine is turned off.
- There is a problem with automatic brake hold system.
- The engine stalls.

### ■ Turning off the automatic brake hold system

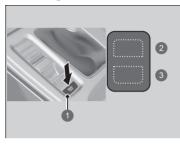

- Automatic Brake Hold Button
- 2 Goes Off
- Goes Off

Only the automatic brake hold system indicator comes on:

- Press the automatic brake hold button.
  - ➤ The automatic brake hold system indicator goes off.

When the automatic brake hold indicator comes on at the same time:

- Press the automatic brake hold button with the brake pedal depressed.
  - ➤ The automatic brake hold system indicator and the automatic brake hold indicator go off.

### ∑Turning off the automatic brake hold system

Make sure to turn off the automatic brake hold system before using an automated car wash.

# **Anti-lock Brake System (ABS)**

### ABS

Helps to prevent the wheels from locking up, and helps you to retain steering control by pumping the brakes rapidly, much faster than you can.

The electronic brake distribution (EBD) system, which is part of the ABS, also balances the front-to-rear braking distribution according to vehicle loading.

You should never pump the brake pedal. Let the ABS work for you by always keeping firm, steady pressure on the brake pedal. This is sometimes referred to as "stomp and steer."

### ■ ABS operation

The brake pedal may pulsate slightly when the ABS is working. Depress the brake pedal and keep holding the pedal firmly down. On dry pavement, you will need to press on the brake pedal very hard before the ABS activates. However, you may feel the ABS activate immediately if you are trying to stop on snow or ice.

ABS may activate when you depress the brake pedal when driving on:

- Wet or snow covered roads.
- Roads paved with stone.
- Roads with uneven surfaces, such as potholes, cracks, manholes, etc.

When the vehicle speed goes under 10 km/h (6 mph), the ABS stops.

#### NOTICE

The ABS may not function correctly if you use a tyre of the incorrect size or type.

If the **ABS** indicator comes on while driving, there may be a problem with the system.

While normal braking will not be affected, there is a possibility that the ABS will not be operating. Have your vehicle checked by a dealer immediately.

The ABS is not designed for the purpose of reducing the time or distance it takes for a vehicle to stop: It is designed to limit brake lockup which can lead to skidding and loss of steering control.

In the following cases, your vehicle may need more distance to stop than a vehicle without the ABS:

- You are driving on rough or uneven road surfaces, such as gravel or snow.
- The tyres are equipped with tyre chains\*.

The following may be observed with the ABS system:

- Motor sounds coming from the engine compartment when the brakes are applied, or when system checks are being performed after the engine has been started and while the vehicle accelerates.
- Brake pedal and/or the vehicle body vibration when ABS activates.

These vibrations and sounds are normal to ABS systems and are no cause for concern.

# **Brake Assist System**

Is designed to assist the driver by generating greater braking force when you depress the brake pedal hard during emergency braking.

### ■ Brake assist system operation


Press the brake pedal firmly for more powerful braking.

When brake assist operates, the pedal may wiggle slightly and an operating noise may be heard. This is normal. Keep holding the brake pedal firmly down.

# **Emergency Stop Signal**

Activates when you brake hard while driving at 60 km/h (37 mph) or above to alert drivers behind you about sudden braking by rapidly flashing hazard warning lights. This may help to alert drivers behind you to take appropriate means to avoid a possible collision with your vehicle.

### ■ When the system activates:

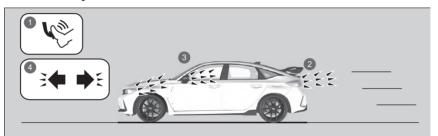

- Hard Braking
- 2 Brake Lights Come On
- 3 Hazard Warning Lights Flash
- 4 Hazard Warning Indicators Blink

The hazard warning lights stop flashing when:

- You release the brake pedal.
- The ABS is deactivated.
- Your vehicle's decelerating speed becomes moderate.
- You press the hazard warning button.

### 

The emergency stop signal is not a system that can prevent a possible rear-end collision caused by your hard braking. It flashes the hazard warning lights at the time you are braking hard. It is always recommended to avoid hard braking unless it is absolutely necessary.

The emergency stop signal does not activate with the hazard warning button pressed in.

If the ABS stops working for a certain period during braking, the emergency stop signal may not activate at all.

# Parking Your Vehicle

## When Stopped

- **1.** Depress the brake pedal firmly.
- **2.** With the brake pedal depressed, pull up the electric parking brake switch slowly, but fully.
- **3.** Move the shift lever to  $\mathbb{N}$ .
- **4.** Turn off the engine and move the shift lever to  $\mathbb{R}$  or  $\mathbb{1}$ .
  - ► The parking brake and brake system indicator (red) goes off in about 30 seconds.

Always set the parking brake, in particular if you are parked on an incline.

#### ▶ Parking Your Vehicle

Do not park your vehicle near flammable objects, such as dry grass, oil, or timber. Heat from the exhaust can cause a fire.


#### 

In extremely cold temperatures, the parking brake may freeze up if applied. If such temperatures are expected, do not apply the parking brake but, if parking on a slope, either turn the front wheels so they will contact the curb if the vehicle rolls down the slope or block the wheels to keep the vehicle from moving. If you do not take either precaution, the vehicle may roll unexpectedly, leading to a crash.

# **Parking Sensor System\***

The corner and centre sensors monitor obstacles around your vehicle, and the beeper, driver information interface and audio/information screen let you know the approximate distance between your vehicle and the obstacle.

### ■ The sensor location and range

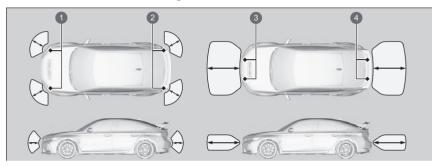

- Front Corner Sensors
- Rear Corner Sensors
- § Front Centre Sensors
- A Rear Centre Sensors

#### ▶ Parking Sensor System \*

Even when the system is on, always confirm if there is no obstacle near your vehicle before parking.

The system may not work properly when:

- The sensors are covered with snow, ice, mud, or dirt.
- The vehicle has been out in hot or cold weather.
- There is something nearby that emits ultrasonic waves or high frequency sounds.
- Driving in bad weather (rain, fog, snow, etc.).
- Any accessories have been put on or around the sensors.


The system may not detect these obstacles:

- Thin or low objects.
- Sonic-absorptive materials, such as snow, cotton, or sponge.
- Objects directly under the bumper.

The system may falsely detect obstacles in the following situations:

- The vehicle is on uneven surface, such as grass, bumps, or a hill.
- When close to other vehicles with sonar sensors or other objects that emit ultrasonic waves.
- There is splashing water near the sensors due to heavy rains, etc.

## ■ Parking sensor system on and off

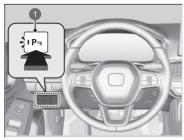

Parking Sensor System Button

With the power mode in ON, press the parking sensor system button to turn on or off the system. The indicator in the button comes on when the system is on.

The front corner, rear centre and rear corner sensors start to detect an obstacle when the transmission is in  $\boxed{\mathbf{R}}$ , and the vehicle speed is less than 8 km/h (5 mph).

The front corner and front centre sensors start to detect an obstacle when the transmission is in any position other than  $\boxed{\mathbf{R}}$ , and the vehicle speed is less than 8 km/h (5 mph).

You also need to release the parking brake.

#### ▶ Parking Sensor System \*


Do not put any accessories on or around the sensors.

If you put any accessories (such as a bicycle rack)
on or around the rear sensors, the system may
activate if it detects these accessories as an
obstacle. In this case, turn off the rear sensor.

Turning off All Rear Sensors P. 506

When you set the power mode to ON, the system will be in the previously selected condition.

## **■** Screen Operation

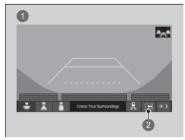

You can switch between split view off and split view on by touching the split screen tab.

- Split View Off
- Split Screen Tab



- Split View On
- Split Screen Tab

## ■ When the distance between your vehicle and obstacles becomes shorter

Interval	Distance between the	Bumper and Obstacle	lu di sata u	Driver information	Audio/Information
between beeps	Corner Sensors	Centre Sensors	Indicator	interface	Screen
Moderate	_	About 110-60 cm (43-23 inches)	Comes on*1/ Blinks*2 in Yellow*3		
Short	About 60-45 cm (23-17 inches)	About 60-45 cm (23-17 inches)	Comes on*1/ Blinks*2 in		
Very short	About 45-35 cm (17-13 inches)	About 45-35 cm (17-13 inches)	Amber		WARNING APPROACHING OBJECT
Continuous	About 35 cm (13 inches) or less	About 35 cm (13 inches) or less	Comes on*1/ Blinks*2 in Red		

- 1 Indicators light up where the sensor detects an obstacle.
- \*1:On the driver information interface
- \*2:On the audio/information screen
- \*3:At this stage, only the centre sensors detect obstacles.

# ■ Turning off All Rear Sensors

To deactivate the rear sensors, please take the following steps:

- **1.** Make sure that the parking sensor system is not activated.
  - ▶ The indicator in the button turns off.
- 2. Set the power mode to VEHICLE OFF.
- **3.** Press and hold the parking sensor system button, and set the power mode to ON.
- **4.** Keep pressing the button for 10 seconds. Release the button when the indicator in the button flashes.
  - ► The beeper sounds once.
- **5.** While the indicator is flashing, press the button again. The indicator in the button turns off.
  - ▶ The beeper sounds twice. The rear sensors are now turned off. They will remain turned off until manually turned back on again. To turn the rear sensors on again, follow the above procedure. The beeper sounds three times when the rear sensors come back on.

## ∑Turning off All Rear Sensors

When you set the shift position to  $\boxed{R}$ , the indicator in the parking sensor system button blinks as a reminder that the rear sensors have been turned off.

## **Cross Traffic Monitor\***

Monitors the rear corner areas using the radar sensors when reversing, and alerts you if a vehicle approaching from a rear corner is detected.

The system is convenient especially when you are getting out of a parking space backwards.

# **ACAUTION**

Cross traffic monitor cannot detect all approaching vehicles and may not detect an approaching vehicle at all.


Failure to visually confirm that it is safe to back up the vehicle before doing so may result in a collision.

Do not solely rely on the system when reversing; always also use your mirrors, and look behind and to the sides of your vehicle before reversing.

#### Models with parking sensor system

The parking sensor system's alerting buzzer overrides the Cross Traffic Monitor buzzer when the sensors are detecting obstacles at the closest range.

# ■ How the System Works

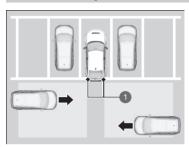

The system activates when:

- The power mode is in ON.
- The Cross Traffic Monitor is turned on.
  - Cross Traffic Monitor On and Off P. 510Customized Features P. 295
- The transmission is in **R**.
- Your vehicle is moving at 5 km/h (3 mph) or lower.

Radar sensors:
 underneath the rear bumper corners.

When a vehicle is detected approaching from a rear corner, Cross Traffic Monitor alerts you with a buzzer and a displayed warning.

The system will not detect a vehicle that approaches from directly behind your vehicle, nor will it provide alerts about a detected vehicle when it moves directly behind your vehicle.

The system does not provide alerts for a vehicle that is moving away from your vehicle, and it may alert for pedestrians, bicycles, or stationary objects.

#### 

Cross traffic monitor may not detect or may delay detecting an approaching vehicle, or may alert detection without an approaching vehicle under the following conditions:

- An obstacle, such as another vehicle and a wall, near your vehicle's rear bumper, is blocking the radar sensor's scope.
- Your vehicle is moving at the speed of about 5 km/h (3 mph) or higher.
- A vehicle is approaching at the speed other than between about 10 km/h (6 mph) and 25 km/h (16 mph).
- The system picks up external interference such as other radar sensors from another vehicle or strong radio wave transmitted from a facility nearby.
- Either corner of the rear bumper is covered with snow, ice, mud or dirt.
- When there is bad weather.
- Your vehicle is on an incline.
- Your vehicle is tilted due to a heavy load in the rear.
- Your vehicle is reversing towards a wall, a pole, a vehicle, and so on.

The rear bumper or the sensors have been improperly repaired or the rear bumper has been deformed. Have your vehicle checked by a dealer.

For proper operation, always keep the rear bumper corner area clean.

Do not cover the rear bumper corner area with labels or stickers of any kind.

# ■ When the System Detects a Vehicle



- Arrow Icon
- 2 Normal View
- Wide View
- 4 Top Down View


An arrow icon appears on the side a vehicle is approaching on the audio/information screen.

#### When the System Detects a Vehicle

If the display remains the same with the transmission in  $\boxed{\mathbf{R}}$ , there may be a problem with the rear camera system and the Cross Traffic Monitor system. Do not use the system and have your vehicle checked by a dealer.

Continued 509

## ■ Cross Traffic Monitor On and Off

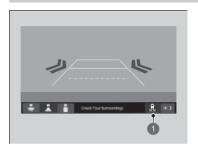

The system can be turned on and off on the audio/information screen by pressing the Cross Traffic Monitor icon.

Cross Traffic Monitor Icon.

#### ○ ○ ○ Cross Traffic Monitor On and Off ○

You can also switch the system on and off from the customized feature on the audio/information screen.


Customized Features P. 295

# Multi-View Rear Camera

# **About Your Multi-View Rear Camera**

The audio/information screen can display your vehicle's rear view. The display automatically changes to the rear view when the transmission is put into  $\mathbb{R}$ .

# ■ Multi-View Rear Camera Display Area

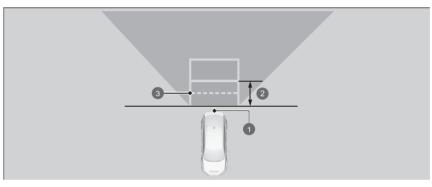

Camera

2 Approx. 1 metre (39 inches)

3 Approx. 50 cm (19 inches)

You can view three different camera modes on the audio/information screen. Touch the appropriate icon to switch the mode.

#### ■ About Your Multi-View Rear Camera

The rear camera view is restricted. You cannot see the corner ends of the bumper or what is underneath the bumper. Its unique lens also makes objects appear closer or farther than they actually are.

Visually confirm that it is safe to drive before backing up. Certain conditions (such as weather, lighting, and high temperatures) may also restrict the rear view. Do not rely on the rearview display which does not give you all information about conditions at the back of your vehicle.

The rear camera view is displayed prior to the audio/information screen.

If the camera lens is covered with dirt or moisture, use a soft, moist cloth to keep the lens clean and free of debris.

You can change the **Fixed Guideline** and **Dynamic Guideline** settings.

**⊇** Customized Features P. 295

#### **Fixed Guideline**

**ON:** Guidelines appear when you put the transmission into  $\boxed{\mathbf{R}}$ .

**OFF:** Guidelines do not appear.


**Dynamic Guideline** 

**ON:** Guidelines move according to the steering

wheel direction.

**OFF:** Guidelines do not move.

Continued 511

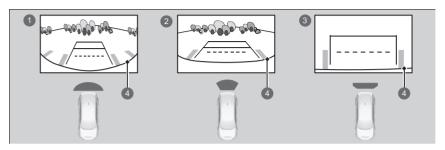

- Wide View Mode
- 2 Normal View Mode
  - Top Down View Mode
- 4 Bumper
- If you were last using Wide view mode or Normal view mode, the same view mode will be activated the next time you put the transmission into  $\boxed{\mathbf{R}}$ .
- If you were using Top down view mode before you turned off the engine, Wide view mode will be activated the next time you set the power mode to ON and put the transmission into R.
- If you were using Top down view mode and 10 seconds elapsed after you took the transmission out of  $\boxed{\mathbf{R}}$ , Wide view mode will be activated the next time you put the transmission into  $\boxed{\mathbf{R}}$ .
- If you were using Top down view mode and put the transmission back into R
  within 10 seconds after you took it out of R, Top down view mode will be
  activated.

#### 

If the vehicle's rear view is not displayed on the audio/ information screen while the shift position is in  $\boxed{\mathbb{R}}$ , there may be a problem with the system. Have your vehicle checked by a dealer immediately.

# Refueling

## **Fuel Information**

#### **■** Fuel recommendation

EN 228 standards petrol/gasohol fuel

Unleaded premium petrol/gasohol up to E10 (90% petrol and 10% ethanol), research octane number 95 or higher

Use of lower octane petrol can cause occasional metallic knocking noise in the engine and will result in decreased engine performance.

We recommend that you use a research octane of 98 or higher to maximise the performance of the engine.

Use of petrol with a research octane less than 91 can lead to engine damage.

■ Fuel tank capacity: 47 L (10.3 Imp gal)

#### ≫Fuel Information

#### NOTICE

Use of petrol that contains lead presents the following risks:


- Damage to the exhaust system including the catalytic converter
- Damage to the engine and fuel system
- Detrimental effects on the engine and other systems



## Oxygenated Fuels

Oxygenated fuels are blended with petrol and ethanol or ether compounds. Your vehicle is also designed to operate on oxygenated fuels containing up to 10% ethanol by volume and up to 22% ETBE by volume, based on the EN 228 standards. For more information, ask your dealer.

## **How to Refuel**

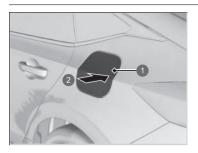

- Fuel fill door
- Press



Cap

- Stop your vehicle with the service station pump on the left side of the vehicle in the rear
- 2. Turn off the engine.
- 3. Unlock the driver's door.
  - ➤ The fuel fill door on the outer side of the vehicle will unlock.
- **4.** Press and release the area indicated by the arrow to release the fuel fill door. You will hear a click and the lid will open slightly.
- **5.** Manually pull the fuel fill door to a fully open position.
- **6.** Remove the fuel fill cap slowly. If you hear a release of air, wait until this stops, then turn the knob slowly to open the fuel fill cap.
- **7.** Place the fuel fill cap in the holder.
- 8. Insert the fuel filler nozzle fully.
  - ➤ When the tank is full, the filler nozzle will click off automatically. This leaves space in the fuel tank in case the fuel expands with a change in the temperature.

# **AWARNING**

Petrol is highly flammable and explosive. You can be burned or seriously injured when handling fuel.

- Stop the engine, and keep heat, sparks, and flames away.
- Handle fuel only outdoors.
- Wipe up spills immediately.

Use the lock tab or the master door lock switch to unlock the fuel fill door.

The vehicle doors and fuel fill door automatically relock if the remote unlock function is used. This can be deactivated by briefly opening then closing the driver's door.

The filler nozzle automatically stops to leave space in the fuel tank so that fuel does not overflow as a result of changes in air temperature.

Do not continue to add fuel after the filler nozzle has automatically stopped. Additional fuel can exceed the full tank capacity.



- 1 Cap
- 2 Holder

- **9.** After filling, replace the fuel fill cap, tightening it until you hear it click at least once.
  - ► Shut the fuel fill door by hand.

# Fuel Economy and CO<sub>2</sub> Emissions

# Improving Fuel Economy and Reducing CO<sub>2</sub> Emissions

Achieving fuel economy and reducing  $\mathrm{CO}_2$  emissions is dependent on several factors, including driving conditions, load weight, idling time, driving habits, and vehicle condition. Depending on these and other factors, you may not achieve the rated fuel economy of this vehicle.

# ■ Maintenance and Fuel Economy

You can optimize your fuel economy with proper maintenance of your vehicle. Follow the maintenance schedule and, if necessary, consult your warranty booklet. On vehicles without service reminder system, follow the Maintenance schedule.

#### **Maintenance Schedule**\* P. 534

- Use engine oil with the viscosity recommended.
  - Recommended Engine Oil P. 542
- Maintain the specified tyre pressure.
- Do not load the vehicle with excess luggage.
- Keep your vehicle clean. A buildup of snow or mud on your vehicle's underside adds weight and increases wind resistance.

### 

Direct calculation is the recommended method to determine actual fuel consumed while driving.



# Turbo Engine Vehicle

# **Handling Precautions**

The turbocharger is a high-precision device to obtain greater horsepower by delivering a large volume of compressed air into the engine using a turbine driven by the engine's exhaust gas pressure.

- When the engine is cold just after starting, avoid hard or sudden acceleration.
- Always replace the engine oil and engine oil filter according to the service reminder system\*/ oil monitor system\* schedule. The turbine rotates at very high speeds over 100,000 rpm and its temperature reaches over 700°C. It is lubricated and cooled by engine oil. If you fail to replace the engine oil and filter at the scheduled distance or interval, deteriorated engine oil may cause failure such as sticking and abnormal noise of the turbine bearing.

#### >> Turbo Engine Vehicle

The scheduled maintenance intervals for replacing the engine oil and filter is indicated on the driver information interface. Follow the information on replacement timing.

- Service Reminder System\* P. 524
- **Dil Monitor System**\* P. 529
- Recommended Engine Oil P. 542

The temperature gauge is at the upper level when you restart the engine after driving under high load conditions such as at high speed or in hilly terrain. This is normal. The gauge goes down after you idle or drive the vehicle for about one minute.

\* Not available on all models 517



This chapter discusses basic maintenance.

before remorning Maintenance	
Inspection and Maintenance	. 520
Safety When Performing Maintenance	52
Parts and Fluids Used in Maintenance Service	52
Service Reminder System*	. 524
Oil Monitor System*	. 529
Maintenance Schedule*	. 534
Maintenance Under the Bonnet	
Maintenance Items Under the Bonnet .	. 539
Opening the Bonnet	. 540
Recommended Engine Oil	. 542
Oil Check	. 544
Adding Engine Oil	5/1

Engine Coolant  Transmission Fluid  Brake/Clutch Fluid  Refilling Window Washer Fluid	548 549
Fuel Filter	55
Replacing Light Bulbs Checking and Maintaining Wiper	55
Blades	560
Checking and Maintaining Tyres	
	56.
Checking and Maintaining Tyres Checking Tyres Wear Indicators	
Checking Tyres	56

Tyre RotationSnow Traction Devices	
Battery	569
Remote Transmitter Care	
Replacing the Remote Battery	575
leating System*/Climate Control	
System* Maintenance	
Dust and Pollen Filter	578
Cleaning	
Interior Care	580
Exterior Care	582
Accessories and Modifications	585

# **Before Performing Maintenance**

# **Inspection and Maintenance**

For your safety, perform all listed inspections and maintenance to keep your vehicle in good condition. If you become aware of any abnormality (noise, smell, insufficient brake fluid, oil residue on the ground, etc.), have your vehicle inspected by a dealer. Refer to the service information available for your vehicle/maintenance schedule\* in this owner's manual for detailed maintenance and inspection information.

Maintenance Schedule\* P. 534

# ■ Types of Inspection and Maintenance

## **■** Routine inspections

Perform inspections before long distance trips, when washing the vehicle, or when refueling.

## **■** Periodic inspections

- Check the brake/clutch fluid level monthly.
  - Brake/Clutch Fluid P. 549
- Check the tyre pressure monthly. Examine the tread for wear and foreign objects.
  - **☑** Checking and Maintaining Tyres P. 563
- Check the operation of the exterior lights monthly.
  - Replacing Light Bulbs P. 552
- Check the condition of the wiper blades at least every six months.
  - **≧** Checking and Maintaining Wiper Blades P. 560

# **Safety When Performing Maintenance**

Some of the most important safety precautions are given here. However, we cannot warn you of every conceivable hazard that can arise in performing maintenance. Only you can decide whether you should perform a given task.

# ■ Maintenance Safety

- To reduce the possibility of fire or explosion, keep cigarettes, sparks, and flames away from the battery and all fuel related parts.
- Never leave rags, towels, or other flammable objects under the bonnet.
   Heat from the engine and exhaust can ignite them, causing a fire.
- To clean parts, use a commercially available degreaser or parts cleaner, not petrol.
- Wear eye protection and protective clothing when working with the battery or compressed air.
- Engine exhaust contains carbon monoxide, which is poisonous and can kill you.
   Only operate the engine if there is sufficient ventilation.

# ■ Vehicle Safety

- The vehicle must be in a stationary condition.
  - ► Make sure your vehicle is parked on level ground, the parking brake is set, and the engine is off.
- Be aware that hot parts can burn you.
  - ► Make sure to let the engine and exhaust system cool thoroughly before touching vehicle parts.
- Be aware that moving parts can injure you.
  - ▶ Do not start the engine unless instructed, and keep your hands and limbs away from moving parts.
  - ▶ Do not open the bonnet while the Auto Idle Stop function is activated.

Safety When Performing Maintenance

# **AWARNING**

Improperly maintaining this vehicle or failing to correct a problem before driving can cause a crash in which you can be seriously hurt or killed.

Always follow the inspection and maintenance recommendations and schedules in this owner's manual/service information available for your vehicle.

# **AWARNING**

Failure to properly follow maintenance instructions and precautions can cause you to be seriously hurt or killed.

Always follow the procedures and precautions in this owner's manual.

# Parts and Fluids Used in Maintenance Service

The use of Honda genuine parts and fluids is recommended when maintaining and servicing your vehicle. Honda genuine parts are manufactured according to the same high quality standards used in Honda vehicles.

▶ Parts and Fluids Used in Maintenance Service

#### NOTICE

Do not press the engine cover forcibly. This may damage the engine cover and component parts.

# **About Your Maintenance Service**

If the service reminder system is available in your vehicle, you are informed by the driver information interface when your vehicle's maintenance services are due. Refer to the service information available for your vehicle for an explanation of the service item codes that appear on the display.

Service Reminder System\* P. 524

If the service reminder system is not available, follow the maintenance schedules in the service book\* that came with your vehicle.

If your vehicle is without the service book\*, follow the maintenance schedule in this owner's manual.

**■ Maintenance Schedule**\* P. 534

#### 

#### Models with service reminder system

If you are planning to take your vehicle outside the service reminder system applied countries, consult a dealer for how to record your service reminder information and schedule your maintenance service under the conditions of that country.

\* Not available on all models

523

# Service Reminder System\*

Provides information of which service items are to be performed. Service items are represented by a code and icon. The system tells you when to take your vehicle to a dealer by days remaining.

When the next maintenance service timing is near, coming or passed, a warning icon will also appear on the driver information interface every time you set the power mode to ON.


#### Service Reminder System<sup>∗</sup>

You can choose to have a corresponding warning message displayed with the warning icon on the driver information interface.

# ■ Displaying the Service Reminder Information

- 1. Set the power mode to ON.
- **2.** Roll the right selector wheel until the service reminder information screen is displayed. The maintenance item(s) appears on the driver information interface along with maintenance items due soon.

The system message indicator (1) comes on along with the service reminder information.

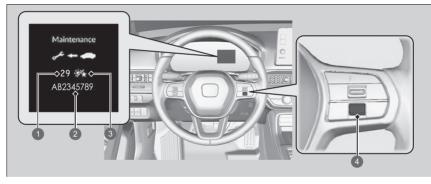

- Remaining Days
- Maintenance Item Code(s)
- 3 Day Icon
- A Right Selector Wheel

#### Displaying the Service Reminder Information ■

Based on engine operating conditions and engine oil conditions, the system calculates the remaining distance or days before the next service is to be performed.

# Warning Icons and Service Reminder Information on the Driver Information Interface

Warning Icon	Service Reminder Information	Explanation	Information
Service Due Soon	Maintenance	One or more of the service items are required in less than 30 days. The remaining days are estimated based on your driving conditions.	The remaining days will be counted down per day.
Service Due Now	Maintenance 15 *** AB2345789	One or more of the service items are required in less than 10 days. The remaining days are estimated based on your driving conditions.	Have the indicated service performed as soon as possible.
Service Over Due	Maintenance -10 */*/ AB2345789	The indicated maintenance service is still not done after the remaining time reaches 0.	Your vehicle has passed the service required point. Immediately have the service performed and make sure to reset the service reminder system.

## ■ Service Reminder Items

Service items displayed on the driver information interface are in code and icon. For an explanation of the service reminder codes and icons, refer to the service information available for your vehicle.

## ■ Availability of the Service Reminder System

Even if the service reminder information appears on the driver information interface while pressing the (home) button, this system is not available in some countries. Refer to the service information available for your vehicle, or ask a dealer if you can use the service reminder system.

#### ■ Availability of the Service Reminder System


If you are planning to take your vehicle outside the service reminder system applied countries, consult a dealer on how to record your service reminder information and schedule your maintenance service under the conditions of that country.

Continued 527

## Resetting the Display

Reset the service reminder information display if you have performed the maintenance service.

- 1. Set the power mode to ON.
- **2.** Roll the right selector wheel until the service reminder information screen is displayed.
- **3.** Press and hold the right selector wheel for about 10 seconds to enter the reset mode.
- Roll the right selector wheel to select a maintenance item to reset, or to select All
  due items (You can also select Cancel to end the process).
- **5.** Press the right selector wheel to reset the selected item.
- **6.** Repeat from step 3 for other items you wish to reset.

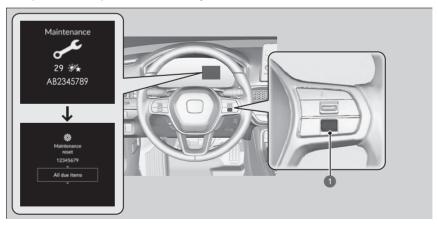

Right Selector Wheel

#### ■ Resetting the Display

#### NOTICE

Failure to reset the service reminder information after a maintenance service results in the system showing incorrect maintenance intervals, which can lead to serious mechanical problems.

You can also reset the service reminder system information display using the audio/information screen.

#### Customized Features P. 295

The dealer will reset the service reminder information display after completing the required maintenance service. If someone other than a dealer performs maintenance service, reset the service reminder information display yourself.

# Maintenance

# Oil Monitor System\*

The warning message notifies you when to change the engine oil, or when to bring your vehicle to a dealer for indicated maintenance services.

\* Not available on all models 529


# **Displaying the Oil Monitor System Information**

Certain maintenance items due soon, along with the estimated remaining oil life, appear on the driver information interface.

You can view them on the oil monitor system information screen at any time.

- 1. Set the power mode to ON.
- **2.** Roll the right selector wheel until the oil monitor system information screen is displayed. The engine oil life appears on the driver information interface.

The system message indicator  $(\mathbf{\hat{1}})$  stays on in the instrument panel after the maintenance period reached. Have the indicated maintenance done by a dealer immediately.

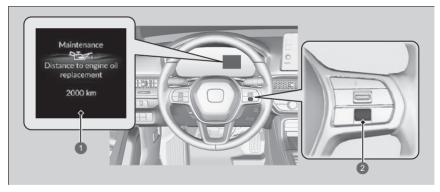

- 1 Remaining Distance the next engine oil maintenance period
- 2 Right Selector Wheel

#### Displaying the Oil Monitor System Information

Based on the engine operating and engine oil conditions, the remaining distance to the next maintenance period is calculated and displayed.

By driving conditions, actual travel distance might be shorter than the displayed distance.

Independent of the oil monitor system information, perform maintenance after 1 year has elapsed since the last oil change.

# ■ Oil Monitor System Information on the Driver Information Interface


Warning Message	Oil Life Display		Information
Normal	Maintenance Distance to engine oil replacement km	Maintenance  Distance to engine oil and filter replacement  km	When you reset the remaining distance after an oil change, a series of dots will appear in the oil life display. These dots will remain displayed until the system determines, based on the driving conditions, the remaining distance until the next oil change, or the next oil and filter change.
_	Maintenance  27-71  Distance to engine oil replacement  2000 km	Maintenance  TI  Distance to engine oil and filter replacement  2000 km	When you select the oil monitor system information screen, the remaining engine oil life, or the remaining engine oil and oil filter life is displayed.
Service Due Soon	Maintenance  Distance to engine oil replacement  1490 km	Maintenance  Distance to engine oil and filter replacement  1490 km	The engine oil, or the oil filter and engine oil are approaching the end of their life.

Warning Message	Oil Life	Display	Information
Service Due Now	Maintenance  Distance to engine oil replacement  490 km	Maintenance  Distance to engine oil and filter replacement  490 km	The engine oil, or the engine oil and oil filter have almost reached the end of their service life, and the maintenance service item(s) should be inspected and serviced as soon as possible.
Service Overdue	Maintenance  Distance to engine oil replacement  -10 km	Maintenance  Distance to engine oil and filter replacement  -10 km	The engine oil, or the oil filter and engine oil have passed their service life. The maintenance service item(s) must be inspected and serviced immediately.

## Resetting the Display

Reset the engine oil monitor system information if you have performed the maintenance service.

- 1. Set the power mode to ON.
- **2.** Roll the right selector wheel until the oil monitor system information screen is displayed.
- **3.** Press and hold the right selector wheel for about 10 seconds to enter the reset mode.
- **4.** Roll the right selector wheel to select **Reset** (You can also select **Cancel** to end the process).
- **5.** Press the right selector wheel to reset the selected item.
  - ▶ When the oil monitor system information display is reset, the engine oil life is reset to ----- km.

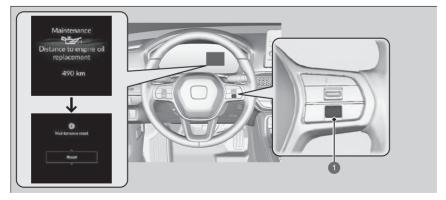

Right Selector Wheel

#### ■ Resetting the Display

#### NOTICE

Failure to reset the engine oil life after a maintenance service results in the system showing incorrect maintenance intervals, which can lead to serious mechanical problems.

You can also reset the oil monitor system information display using the audio/information screen.

Customized Features P. 295

The dealer will reset the engine oil life display after completing the required maintenance service. If someone other than a dealer performs maintenance service, reset the engine oil life display yourself.

# Maintenance Schedule\*

Maintenance information for your vehicle can be found with the service information for your vehicle (if available). If service information is not available, refer to the following maintenance schedules.

The maintenance schedule outlines the minimum required maintenance that you should perform to ensure the troublefree operation of your vehicle. Due to regional and climatic differences, some additional servicing may be required. Please consult your warranty booklet for a more detailed description.

Maintenance work should be performed by properly trained and equipped technicians. Your authorised dealer meets all of these requirements.

Service at the indicated distance or	km x 1,000	20	40	60	80	100	120	140	160	180	200
time - whichever comes first.	miles x 1,000	12.5	25.0	37.5	50.0	62.5	75.0	87.5	100.0	112.5	125.0
time - whichever comes mst.	months	12	24	36	48	60	72	84	96	108	120
Replace engine oil			When indicator comes on or 1 year								
Replace engine oil filter		When indicator comes on or 2 years									
Replace air cleaner element		Every 30,000 km (18,500 miles)									
Inspect valve clearance*1		Every 120,000 km (74,500miles)									
Replace spark plugs		Every 100,000 km (62,000miles)									
Inspect drive belt			•		•		•		•		•

<sup>\*1:</sup>Sensory Method Adjust the valves during service 120,000 km if they are noisy.

Service at the indicated distance or	km x 1,000	20	40	60	80	100	120	140	160	180	200
time - whichever comes first.	miles x 1,000	12.5	25.0	37.5	50.0	62.5	75.0	87.5	100.0	112.5	125.0
time - whichever comes mst.	months	12	24	36	48	60	72	84	96	108	120
Replace engine coolant				At 200	),000 kr	n (124,	000mile	es) or 10	) years,		
			ther	eafter e	every 10	0,000 k	m (62,0	000mile	es) or 5 y	years	
Replace transmission fluid	Normal						•				
	Severe			•			•			•	
Replace dust and pollen filter		•	•	•	•	•	•	•	•	•	•
Inspect front and rear brakes				Every	/ 10,000	) km (6	,000 mi	les) or 1	1 year		
Replace brake fluid		Every 3 years									
Replace fuel filter in tank	Normal	Every 140,000 km (86,500miles)									
replace fuel filter in tank	Severe	Every 90,000 km (55,500miles)*1									
Check expiry date for tyre repair kit bott	tle	Every 1 year									
Rotate tyres (Check tyre inflation and co	ndition at least once	Every 10,000 km (6,000 miles)									
per month)		•									
	Visually insp	ect the	follow	ing ite	ms:						
Driveshaft boots											
Tie rod ends, steering gearbox, and boots		Every 10,000 km (6,000 miles) or 1 year									
Suspension components											
Brake hoses and lines (including ABS/VSA)											
Exhaust system										١.	
Fuel lines and connections										•	•
All fluid levels and condition of fluid											

<sup>\*1:</sup>It is recommended that you replace the fuel filter if the fuel you are using is suspected to be contaminated with dust, etc. because the filter may be clogged sooner.

## **Severe Conditions**

Follow the Severe Conditions Maintenance Schedule if you drive your car MAINLY under one or more of the following conditions:

- Driving less than 8 km (5 miles) per trip or, in freezing temperatures, driving less than
  - 16 km (10 miles) per trip.
- Driving in extremely hot, over 35°C condition.
- Extensive idling or long periods of stop-and-go driving.
- Driving with a loaded car-top carrier, or driving in mountainous conditions.
- Driving on muddy, dusty, or de-iced roads.

NOTE: If you only OCCASIONALLY drive under "severe" conditions, you should follow the Normal Conditions Maintenance Schedule.


# **Maintenance Record (on vehicles without separate service record)**

Have your servicing dealer record all required maintenance below. Keep receipts for all work done on your vehicle.

	Km or Month	Date	Sign or Stamp
<b>20,000 km</b> 12,500 Mi. (or 12 Mo.)			
<b>40,000 km</b> 25,000 Mi. (or 24 Mo.)			
<b>60,000 km</b> 37,500 Mi. (or 36 Mo.)			
<b>80,000 km</b> 50,000 Mi. (or 48 Mo.)			
<b>100,000 km</b> 62,500 Mi. (or 60 Mo.)			
<b>120,000 km</b> 75,000 Mi. (or 72 Mo.)			
<b>140,000 km</b> 87,500 Mi. (or 84 Mo.)			
<b>160,000 km</b> 100,000 Mi. (or 96 Mo.)			
<b>180,000 km</b> 112,500 Mi. (or 108 Mo.)			
<b>200,000 km</b> 125,000 Mi. (or 120 Mo.)			


# Maintenance Under the Bonnet

## **Maintenance Items Under the Bonnet**

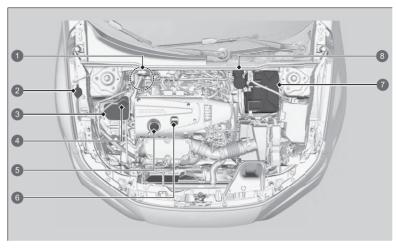

- Brake/Clutch Fluid (Black Cap) (Right-hand Drive Type)
- Washer Fluid (Blue Cap)
- 3 Engine Coolant Reserve Tank
- 4 Engine Coolant Reserve Tank Cap
- **5** Engine Oil Fill Cap
- 6 Engine Oil Dipstick (Black)
- Battery
- 8 Brake/Clutch Fluid (Black Cap) (Left-hand Drive Type)

## **Opening the Bonnet**

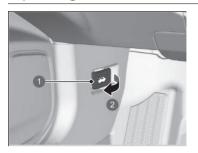

- **1.** Park the vehicle on a level surface, and set the parking brake.
- **2.** Pull the bonnet release handle under the driver's side lower outside corner of the dashboard.
  - ► The bonnet will pop up slightly.

- Bonnet Release Handle
- 2 Pull



1 Lever

**3.** Push the bonnet latch lever (located under the front edge of the bonnet to the centre) to the side and raise the bonnet. Once you have raised the bonnet slightly, you can release the lever.

○ Opening the Bonnet

## **AWARNING**

The bonnet support rod can become very hot due to heat from the engine.

To ensure against possible burns, do not handle the metal section of the rod: Use the foam grip instead.

#### NOTICE

Do not open the bonnet when the wiper arms are raised. The bonnet will strike the wipers, resulting in possible damage to the bonnet and/or the wipers.


### NOTICE

Do not press the engine cover forcibly. This may damage the engine cover and component parts.

When closing the bonnet, check that the bonnet is securely latched.

If the bonnet latch lever moves stiffly, or if you can open the bonnet without lifting the lever, the latch mechanism should be cleaned and lubricated.

Do not open the bonnet while the Auto Idle Stop function is activated.

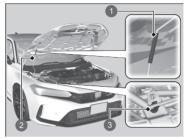

- 1 Grip
- Support Rod
- Clamp

**4.** Remove the support rod from the clamp using the grip. Mount the support rod in the bonnet.

When closing, remove the support rod, and stow it in the clamp, then gently lower the bonnet. Remove your hand at a height of approximately 30 cm and let the bonnet close.

### **∑**Opening the Bonnet



- Grab the foam.
- The support rod gets very hot.
- Refer to the owner's manual.

# **Recommended Engine Oil**

Use a genuine engine oil or another commercial engine oil of suitable type and viscosity (for the ambient temperature) as shown in the image that follows.

Oil is a major contributor to your engine's performance and longevity. If you drive the vehicle with insufficient or deteriorated oil, the engine may fail or be damaged.

### Except European models

Genuine Engine Oil	Commercial Engine Oil
<ul> <li>Honda Engine Oil Type 2.0*1</li> <li>Honda Genuine Motor Oil</li> </ul>	• ACEA C2/C3/C5
Honda Engine Oil Type 2.0*1  Genuine Motor Oil 0W-20  -30 -20 -10 0 10 20 30 40(°C)  Ambient Temperature	30 -20 -10 0 10 20 30 40(°C)  Ambient Temperature

<sup>\*1:</sup>Formulated to improve fuel economy.

### ≥ Recommended Engine Oil

You cannot use Engine Oil Additives.

## European models

Genuine Engine Oil	Commercial Engine Oil
Honda Genuine Motor Oil	• ACEA C2/C3/C5
-30 -20 -10 0 10 20 30 40(°C)  Ambient Temperature	-30 -20 -10 0 10 20 30 40(°C)  Ambient Temperature

<sup>\*1:</sup>Formulated to improve fuel economy.


### Oil Check

We recommend that you check the engine oil level every time you refuel. Park the vehicle on level ground.

Wait approximately three minutes after turning the engine off before you check the oil.



- 1. Remove the dipstick (black).
- **2.** Wipe the dipstick with a clean cloth or paper towel.
- **3.** Insert the dipstick back all the way into its hole.

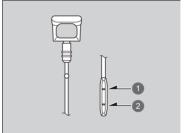

**4.** Remove the dipstick again, and check the level. It should be between the upper and lower marks. Add oil if necessary.

#### ○ Oil Check

If the oil level is near or below the lower mark, slowly add oil, being careful not to overfill.

The amount of oil consumed depends on how the vehicle is driven and the climatic and road conditions encountered. The rate of oil consumption can be up to 1 litre per 1,000 km/625 miles.

Consumption is likely to be higher when the engine is new.



2 Lower Mark

# **Adding Engine Oil**



1 Engine Oil Fill Cap

- **1.** Unscrew and remove the engine oil fill cap.
- 2. Add oil slowly.
- **3.** Reinstall the engine oil fill cap, and tighten it securely.
- **4.** Wait for three minutes and recheck the engine oil dipstick.

### 

### NOTICE

Do not fill the engine oil above the upper mark. Overfilling the engine oil may result in leaks and engine damage.

If any oil spills, wipe it away immediately. Spilled oil may damage the engine compartment components.

# **Engine Coolant**

### Specified coolant: Honda All Season Antifreeze/Coolant Type 2

This coolant is premixed with 50% antifreeze and 50% water. Do not add any straight antifreeze or water.

We recommend you check the engine coolant level every time you refuel. Check the reserve tank. Add the engine coolant accordingly.

## ■ Checking the Coolant



- 1. Make sure the engine and radiator are cool.
- **2.** Check the amount of coolant in the reserve tank.
  - ► If the coolant level is below the MIN mark, add the specified coolant until it reaches the MAX mark.
- **3.** Inspect the cooling system for leaks.

MAX

Reserve Tank

MIN

## **AWARNING**

Removing the reserve tank cap while the engine is hot can cause the coolant to spray out, seriously scalding you.

Always let the engine and reserve tank cool down before removing the reserve tank cap.


#### NOTICE

If temperatures consistently below -30°C are expected, the coolant mixture should be changed to a higher concentration. Consult your Honda dealer for details about a suitable coolant mixture.

If Honda antifreeze/coolant is not available, you may use another major brand of non-silicate coolant as a temporary replacement. Check that it is a high quality coolant recommended for aluminium engines. Continued use of any non-Honda coolant can result in corrosion, causing the cooling system to malfunction or fail. Have the cooling system flushed and refilled with Honda antifreeze/coolant as soon as possible.

Do not add rust inhibitors or other additives to your vehicle's cooling system. They may not be compatible with the coolant or with the engine components.

## ■ Adding the Coolant

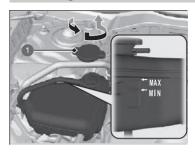

Reserve Tank Cap

### Make sure the engine and radiator are cool.

- **2.** Turn the reserve tank cap 1/8 turn anticlockwise and relieve any pressure in the cooling system.
- **3.** Push down and turn the reserve tank cap anticlockwise to remove it.
- **4.** Pour coolant into the reserve tank until it reaches the **MAX** mark.
- **5.** Put the reserve tank cap back on, and tighten it fully.

## **■** Engine Coolant Reserve Tank Cap



- Never open when hot.
- Hot coolant will scald you.
- Relief pressure valve begins to open at 127 kPa.

### ■ Adding the Coolant

### NOTICE

Pour the fluid slowly and carefully so you do not spill any. Clean up any spills immediately; they can damage components in the engine compartment.

## **Transmission Fluid**

### Manual Transmission Fluid

## Specified fluid: Honda MTF

Have a dealer check the fluid level and replace if necessary.

Follow your vehicle's maintenance service timing of when to change manual transmission fluid.

**► Maintenance Schedule**\* P. 534

Do not attempt to check or change the manual transmission fluid yourself.

#### Manual Transmission Fluid

#### NOTICE


If Honda MTF is not available, you may use the API certificated SAE 0W-20 or 5W-20 viscosity motor oil as a temporary measure.

Replace with MTF as soon as possible. Motor oil does not contain the proper additives for the transmission and continued use can cause decreased shifting performance and lead to transmission damage.

### **Brake/Clutch Fluid**

### Specified fluid: Brake Fluid with DOT 3 or DOT 4

## Checking the Brake Fluid

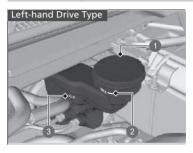

The fluid level should be between the **MIN** and **MAX** marks on the side of the reserve tank.

The brake fluid reserve tank is also used for your vehicle's clutch fluid. As long as you keep the brake fluid level as instructed above, there is no need for checking the clutch fluid level.

### 


### NOTICE

Brake fluid marked DOT 5 is not compatible with your vehicle's braking system and can cause extensive damage.

We recommend using a genuine product.


If the brake fluid level is at or below the **MIN** mark, have a dealer inspect the vehicle for leaks or worn brake pads as soon as possible.

- Reserve Tank
- MAX
- MIN

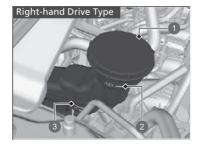

- Reserve Tank
- MAX
- MIN

# **Refilling Window Washer Fluid**

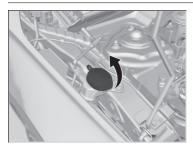

Check the amount of window washer fluid.

If the level is low, fill the washer reservoir.

Pour the washer fluid carefully. Do not overflow the reservoir.

### ■ Refilling Window Washer Fluid

### NOTICE

Do not use engine antifreeze or a vinegar/water solution in the windscreen washer reservoir. Antifreeze can damage your vehicle's paint. A vinegar/water solution can damage the windscreen washer pump.

Use only commercially available windscreen washer fluid.

Avoid prolonged use of hard water to prevent lime scale buildup.

## **Fuel Filter**

Replace the fuel filter according to the time and distance recommendations in the maintenance schedule.

Have a qualified technician change the fuel filter. Fuel in the system can spray out and create a hazard if all fuel line connections are not handled correctly.

### ≫ Fuel Filter

### Models with service reminder system

The fuel filter should be replaced according to the service reminder indication.

# **Replacing Light Bulbs**

# Headlights

Headlights are LED type. Have an authorised Honda dealer inspect and replace the light assembly.

# **Front Turn Signal Lights**

Front turn signal lights are LED type. Have an authorised Honda dealer inspect and replace the light assembly.

## **Position/Daytime Running Lights**

Position/daytime running lights are LED type. Have an authorised Honda dealer inspect and replace the light assembly.

# **Side Turn Signal/Emergency Indicator Lights**

Door mirror side turn lights are LED type. Have an authorised Honda dealer inspect and replace the light assembly.

### 


The headlight aim is set by the factory, and does not need to be adjusted. However, if you regularly carry heavy items in the luggage area, have the aiming readjusted at a dealer or by a qualified technician.

# **Brake Light, Taillight, and Rear Turn Signal Light Bulbs**

When replacing, use the following bulbs.


Brake Light: LED Taillight: LED

Rear Turn Signal Light: 21 W (Amber)

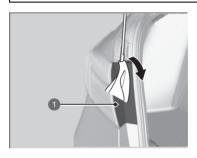

- **1.** Pry on the edge of the cover using a flat-tip screwdriver to remove the cover.
  - ➤ Wrap the flat-tip screwdriver with a cloth to prevent scratches.

Cover

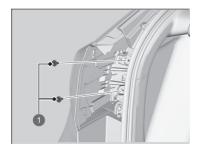

Bolts

2. Unscrew the bolts.

≥ Brake Light, Taillight, and Rear Turn Signal Light Bulbs

Brake light and taillights are LED type. Have an authorised Honda dealer inspect and replace the light assembly.

Continued 553



**3.** Grasp underneath the taillight and rotate it upward to release the lower snap pin.

1 Lower Snap Pin



1 Upper Snap Pin

- **4.** Rotate the taillight outward to release the upper snap pin.
- **5.** Pull the light assembly out of the rear pillar.



- Bulb
- 2 Socket

- **6.** Turn the socket anticlockwise and remove it.
- 7. Remove the old bulb and insert a new bulb.
- **8.** Align the pins with the body grommets, then push in until they fully seat.

# **Taillight and Back-Up Light Bulbs**

When replacing, use the following bulbs.

Taillight: LED

Back-Up Light: 16 W



- **1.** Remove the cover by prying on the edge using a flat-tip screwdriver.
  - ➤ Wrap the flat-tip screwdriver with a cloth to prevent scratches.





- **2.** Turn the socket anticlockwise and remove it.
- Remove the old bulb.
- 3. Insert a new bulb.

BulbSocket

### ▼Taillight and Back-Up Light Bulbs

Taillights are LED type. Have an authorised Honda dealer inspect and replace the light assembly.

## **Rear Licence Plate Light**

Rear licence plate light is LED type. Have an authorised Honda dealer inspect and replace the light assembly.

# **High-Mount Brake Light**

High-mount brake light is LED type. Have an authorised Honda dealer inspect and replace the light assembly.

# **Rear Fog Light**

Rear fog light is LED type. Have an authorised Honda dealer inspect and replace the light assembly.

# **Other Light Bulbs**

## ■ Vanity Mirror Light Bulbs\*


When replacing, use the following bulbs.

## Vanity Mirror Light: 2 W

- **1.** Pry on the edge of the cover using a flattip screwdriver to remove the cover.
  - ➤ Wrap the flat-tip screwdriver with a cloth to prevent scratches.



**2.** Remove the old bulb and insert a new bulb.

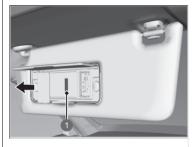


Bulb

## ■ Luggage Area Light Bulb


When replacing, use the following bulb.

### Luggage Area Light: 5 W

- **1.** Pry on the edge of the cover using a flattip screwdriver to remove the cover.
  - ➤ Wrap the flat-tip screwdriver with a cloth to prevent scratches.

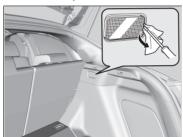

**2.** Remove the old bulb and insert a new bulb.

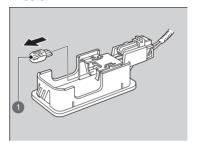

1 Bulb

# **Checking and Maintaining Wiper Blades**

# **Checking Wiper Blades**

If the wiper blade rubber has deteriorated, it will leave streaks, become noisy, and the hard surfaces of the blade may scratch the window glass.

## **Changing the Front Wiper Blade**





- **1.** Set the power mode to ON, then to VEHICLE OFF.
- **2.** Within 10 seconds of setting the power mode to VEHICLE OFF, hold the wiper switch in the **MIST** position for more than two seconds.
  - ▶ Both wiper arms are set to the maintenance position as shown in the image.
- **3.** Lift both wiper arms.

∑Changing the Front Wiper Blade


#### NOTICE

When lifting the wiper arms, always follow the instructions to move them into the maintenance position.

The wiper arms may be damaged if they are moved manually.

#### NOTICE


Avoid dropping the wiper arm onto the windscreen, it may damage the wiper arm and/or the windscreen.

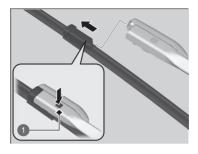

1 Tab

- **4.** Depress the lock tab, then slide the wiper blade off the wiper arm.
- **5.** Slide the new wiper blade onto the wiper arm until it clicks into place.
- **6.** Lower both wiper arms.
- **7.** Set the power mode to ON, then set the wiper switch to the **MIST** position once.
  - ► The wiper arms return to the standard position.

# **Changing the Rear Wiper Blade\***

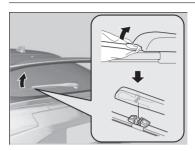

- 1. Hold up the wiper arm.
- Insert a flat tip screwdriver into the groove of the wiper arm to remove the wiper blade.
  - ➤ Wrap the flat-tip screwdriver with a cloth to prevent scratches.
- **3.** Insert a new wiper blade and put the wiper arm back.

# **Checking and Maintaining Tyres**

## **Checking Tyres**

To safely operate your vehicle, your tyres must be of the proper type and size, in good condition with adequate tread, and properly inflated.

### ■ Inflation guidelines

Properly inflated tyres provide the best combination of handling, tread life, and comfort. Refer to the driver's doorjamb label for the specified pressure.

Underinflated tyres wear unevenly, adversely affect handling and fuel economy, and are more likely to fail from overheating.

Overinflated tyres make your vehicle ride harshly, are more prone to road hazards, and wear unevenly.

Every day before you drive, look at each of the tyres. If one looks lower than the others, check the pressure with a tyre gauge.

At least once a month or before long trips, use a gauge to measure the pressure in all tyres, including the spare\*. Even tyres in good condition can lose 10-20 kPa (0.1–0.2 bar, 1–2 psi) per month.

## ■ Inspection guidelines

Every time you check inflation, also examine the tyres and valve stems. Look for:

- Bumps or bulges on the side or in the tread. Replace the tyre if you find any cuts, splits, or cracks in the side of the tyre. Replace it if you see fabric or cord.
- Remove any foreign objects and inspect for air leaks.
- Uneven tread wear. Have a dealer check the wheel alignment.
- Excessive tread wear.

#### **■ Wear Indicators** P. 564

- Cracks or other damage around valve stem.
- \* Not available on all models

#### ○ Checking Tyres

## **AWARNING**

Using tyres that are excessively worn or improperly inflated can cause a crash in which you can be seriously hurt or killed.

Follow all instructions in this owner's manual regarding tyre inflation and maintenance.

Measure the air pressure when tyres are cold. This means the vehicle has been parked for at least three hours, or driven less than 1.6 km (1 mile). If necessary, add or release air until the specified pressure is reached.


If checked when hot, tyre pressure can be as much as 30–40 kPa (0.3–0.4 bar, 4–6 psi) higher than if checked when cold.

Whenever tyre pressure is adjusted, you must calibrate the deflation warning system.

**Deflation Warning System** P. 418

Have a dealer check the tyres if you feel a consistent vibration while driving. New tyres and any that have been removed and reinstalled should be properly balanced.

## **Wear Indicators**

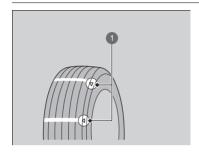

Example of a Wear Indicator mark

The groove where the wear indicator is located is about 1.6 mm (about 1/16 inch) shallower than elsewhere on the tyre. If the tread has worn so that the indicator is exposed, replace the tyre.

Worn out tyres have poor traction on wet roads.

### ○ Checking Tyres

#### Models with 265/30ZR19 tires

### **High speed driving**

We recommend that you do not drive faster than the posted speed limits and conditions allow. If you drive at sustained high speeds (over 130 mph or 210km/h), adjust the cold tire pressures as shown below to avoid excessive heat buildup and sudden tire failure.

Tire Size	265/30ZR19 93Y
Pressure	Front: 280 kPa (2.8 bar, 41 psi)
	Rear: 230 kPa (2.3 bar, 33 psi)

## **Tyre Service Life**

The life of your tyres is dependent on many factors, including driving habits, road conditions, vehicle loading, inflation pressure, maintenance history, speed, and environmental conditions (even when the tyres are not in use).

In addition to regular inspections and inflation pressure maintenance, it is recommended that you have annual inspections performed once the tyres reach five years old. All tyres, including the spare\*, should be removed from service after 10 years from the date of manufacture, regardless of their condition or state of wear.

## Tyre and Wheel Replacement

Replace your tyres with radials of the same size, load range, speed rating, and maximum cold tyre pressure rating (as shown on the tyre's sidewall). Using tyres of a different size or construction can cause certain vehicle systems such as the ABS and Vehicle Stability Assist (VSA) system to work incorrectly.

It is best to replace all four tyres at the same time. If that isn't possible, replace the front or rear tyres in pairs.

Make sure that the wheel's specifications match those of the original wheels.

∑Tyre and Wheel Replacement

## **AWARNING**

Installing improper tyres on your vehicle can affect handling and stability. This can cause a crash in which you can be seriously hurt or killed.


Always use the size and type of tyres recommended in the tyre information label on your vehicle.

\* Not available on all models

## **Tyre Rotation**

Rotating tyres according to the maintenance schedule helps to distribute wear more evenly and increase tyre life.


### **■** Tyres without rotation marks

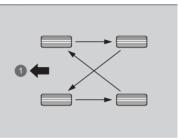

Rotate the tyres as shown here.

Front


### ■ Tyres with rotation marks

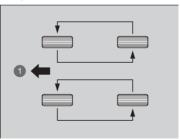

Rotate the tyres as shown here.

### ∑Tyre Rotation

Tyres with directional tread patterns should only be rotated front to back (not from one side to the other). Directional tyres should be mounted with the rotation indication mark facing forward, as shown below.

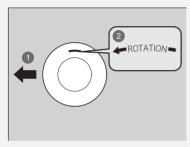

- 1 Front
- 2 Rotation Mark

When the tyres are rotated, make sure the air pressures are checked.

Whenever tyres are rotated, you must calibrate the deflation warning system.

**Deflation Warning System** P. 418

Front

### **Snow Traction Devices**

If driving on snowy or frozen roads, mount winter tyres, or tyre chains; reduce speed; and maintain sufficient distance between vehicles when driving.

Be particularly careful when operating the steering wheel or brakes to prevent skidding.

Use tyre chains, winter tyres, or all season tyres when necessary or according to the law.

When mounting, refer to the following points.

#### For winter tyres:

- Select the size and load ranges that are the same as the original tyres.
- Mount the tyres to all four wheels.

#### Snow Traction Devices

## **AWARNING**

Using the wrong chains, or not properly installing chains, can damage the brake lines and cause a crash in which you can be seriously injured or killed.

Follow all instructions in this owner's manual regarding the selection and use of tyre chains.

#### NOTICE

Traction devices that are the wrong size or improperly installed can damage your vehicle's brake lines, suspension, body, and wheels. Stop driving if they are hitting any part of the vehicle.

According to the EU legislation for tyres, when winter tyres are used, it is necessary to affix a sticker with the allowable max. speed of the winter tyres clearly in the field of view of the driver, if the designed max. speed of vehicle is higher than the allowed max. speed of winter tyre. A sticker is obtainable from your tyre dealer. If you have any question, consult a dealer.

When tyre chains are mounted, follow the chain manufacturer's instructions regarding vehicle operational limits.

### For tyre chains:

- Consult a dealer before purchasing any type of chains for your vehicle.
- Install them on the front tyres only.
- Because your vehicle has limited tyre clearance, we strongly recommend using the chains listed below:

Original Tyre Size*1	Chain Type
235/40R18 95Y	Auto Trac 0154705
265/30ZR19 93Y*2	(Not available)

- \*1:Original tyre size is mentioned on the tyre information label on the driver's doorjamb.
- \*2:You cannot mount chains on this tyre. If you have to use tyre chains, replace the tyres with the original 235/40ZR18 size tyres.
- Follow the chain manufacturer's instruction when installing. Mount them as tightly as you can.
- Check that the chains do not touch the brake lines or suspension.
- Drive slowly.

#### Snow Traction Devices

Use tyre chains only in an emergency or when they are legally required for driving through a certain area.


Use greater caution when driving with tyre chains on snow or ice. They may have less-predictable handling than good winter tyres without chains.

If your vehicle is equipped with summer tyres, be aware that these tyres are not designed for winter driving conditions. For more information, contact a dealer.

This vehicle is originally equipped with high performance tyres. If exposed to temperatures below approximately 7°C, the tyres will not be able to perform at their full potential.

Do not use the high performance tyres if ambient temperatures are below -10°C: The tyres can become brittle and, as a result, may suffer from surface cracking.

## **Checking the Battery**

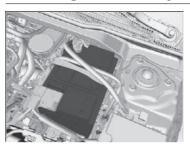

The condition of the battery is monitored by a sensor located on the negative terminal of the battery. If there is a problem with this sensor, the driver information interface will display a warning message. If this happens, have your vehicle inspected by a dealer.

Check the battery terminals for corrosion monthly.

If your vehicle's battery is disconnected or goes dead:

- The audio system is disabled.
  - **₹ Reactivating the audio system** P. 239

#### Right-hand Drive Type

- The immobilizer system needs to be reset.
  - Immobilizer System Indicator P. 107

### Battery

## **AWARNING**

The battery gives off explosive hydrogen gas during normal operation.

A spark or open flame can cause the battery to explode with enough force to kill or seriously hurt you.

Keep all sparks, open flames, and smoking materials away from the battery.

Wear protective clothing and a face shield, or have a skilled technician do any battery maintenance.

## **AWARNING**

The battery contains sulfuric acid (electrolyte) which is highly corrosive and poisonous.

Getting electrolyte in your eyes or on your skin can cause serious burns. Wear protective clothing and eye protection when working on or near the battery.

Swallowing electrolyte can cause fatal poisoning if immediate action is not taken.

KEEP OUT OF THE REACH OF CHILDREN

# **Charging the Battery**

Disconnect both battery cables to prevent damaging your vehicle's electrical system. Always disconnect the negative (-) cable first, and reconnect it last.

#### ≫ Battery

### **Emergency Procedures**

Eyes: Flush with water from a cup or other container for at least 15 minutes. (Water under pressure can damage the eye.) Call a physician immediately. Skin: Remove contaminated clothing. Flush the skin with large quantities of water. Call a physician immediately.

Swallowing: Drink water or milk. Call a physician immediately.

When you find corrosion, clean the battery terminals by applying a baking powder and water solution. Clean the terminals with a damp towel. Cloth/towel dry the battery. Coat the terminals with grease to help prevent future corrosion.

When replacing the battery, the replacement must be of the same specifications.

Consult a dealer for more information

The battery installed in this vehicle is specifically designed for a model with Auto Idle Stop.
Using a battery other than this specified type may shorten the battery life, and prevent Auto Idle Stop from activating. If you need to replace the battery, make sure to select the specified type and size. Ask a dealer for more details.

Specifications P. 642

### ≫ Battery

The Adaptive Cruise Control (ACC), Vehicle Stability Assist (VSA) System, Safety Support, Low Tyre Pressure/ Deflation Warning System indicators may come on when you turn the power mode to on after reconnecting a battery.


Drive a short distance at more than 20 km/h (12 mph). Each indicator should go off. If it does not, have your vehicle checked by a dealer.

### European and Turkish models

# **Replacing the Battery**

When you remove and replace the battery, always follow the maintenance safety and the warnings for when checking the battery to prevent potential hazards.

- **► Maintenance Safety** P. 521
- **≧** Checking the Battery P. 569

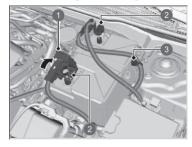

- Cover
- 2 Nut
- Clamp

- **1.** Set the power mode to VEHICLE OFF. Open the bonnet.
- 2. Pull out the clamp.
- **3.** Loosen the nut on the negative battery cable, then disconnect the cable from the negative (–) terminal.
- **4.** Open the positive battery terminal cover. Loosen the nut on the positive battery cable, then disconnect the cable from the positive (+) terminal.


### ■ Replacing the Battery

### NOTICE

An improperly disposed of battery can be harmful to the environment and human health. Always confirm local regulations for battery disposal.

This symbol on the battery means that this product must not be treated as household waste.



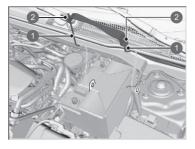


- **5.** Loosen the nut on each side of the battery bracket with a wrench.
- **6.** Pull the bottom end of each battery stay out of the hole on the battery base, and remove the combination of the battery bracket and the stays.

### ■ Replacing the Battery

To install a new battery, reverse this procedure.

Always disconnect the negative (-) cable first, and reconnect it last.

- Stays
- 2 Nut

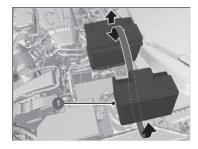

Battery Cover

- 7. Remove the battery cover.
- **8.** Take out the battery carefully.

# **Battery Label**



#### Battery Label

#### DANGER

- Keep flames and sparks away from the battery. The battery produces explosive gas that can cause an explosion.
- Wear eye protection and rubber gloves when handling the battery to avoid risk of burns or loss of eyesight if exposed to battery electrolyte.
- Do not allow children to handle the battery, under any circumstance. Ensure that anyone handling the battery has a proper understanding of the hazards and correct handling procedures involved.
- Handle battery electrolyte with extreme care, as it contains dilute sulfuric acid. Exposure to eyes or skin can cause burns or loss of eyesight.
- Read this manual carefully, and understand it before handling the battery. Failure to do so can cause personal injury and damage to the vehicle.
- Do not use the battery if the level of electrolyte is at or below the recommended level. Using the battery with low electrolyte can cause it to explode, causing serious injury.

## **Remote Transmitter Care**

## **Replacing the Remote Battery**

If the indicator does not come on when the button is pressed, replace the battery.



### Battery type: CR2032

**1.** Remove the built-in key.



- **2.** Remove the upper half of the cover by carefully prying on the slot with key grip.
  - ➤ Wrap a key grip with a cloth to prevent scratching the keyless remote.
  - Remove carefully to avoid losing the buttons.

■ Replacing the Remote Battery

## **A A** WARNING

### CHEMICAL BURN HAZARD

The battery that powers the remote transmitter can cause severe internal burns and can even lead to death if swallowed. Keep new and used batteries away from children.


If you suspect that a child has swallowed the battery, seek medical attention immediately.

**CAUTION:** Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.

**CAUTION:** Do not exposed to excessive heat such as sunshine, fire or the like, that can result in an explosion or the leakage of flammable liquid or gas during use, storage or transportation.

**CAUTION:** Do not dispose of a battery into fire or a hot oven, or give mechanically crushing or cutting of a battery, that can result in an explosion.

**CAUTION:** Do not subjected to extremely low air pressure at high altitude that may result in an explosion or the leakage of flammable liquid or gas.

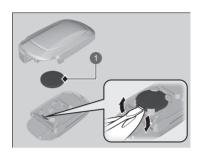

Battery

- **3.** Remove the battery by prying on the edge with flat-tip screwdriver. Make sure to replace the battery with the correct polarity.
  - ➤ Wrap a flat-tip screwdriver with a cloth to prevent scratching the keyless remote.

### ■ Replacing the Remote Battery

A warning mark is located adjacent to the button battery\*.

### NOTICE

An improperly disposed of battery can damage the environment. Always confirm local regulations for battery disposal.

### European and Turkish models

This symbol on the battery means that this product must not be treated as household waste.



Replacement batteries are commercially available or at a dealer

## Heating System\*/Climate Control System\* Maintenance

## Air Conditioning\*

For proper and safe operation of the climate control system\*, the refrigerant system should only be served by a qualified technician.

Never repair or replace the air conditioning evaporator (cooling coil) with one removed from a used or salvaged vehicle.

∑Air Conditioning\*

### NOTICE

Vented refrigerant is harmful to the environment. To avoid refrigerant from venting, never replace the evaporator with one removed from a used or salvaged vehicle.

Refrigerant in your vehicle's air conditioning system is flammable and can be ignited during servicing if proper procedures are not followed.

The air conditioner label is found under the bonnet:

- Safety Labels P. 96
- **Specifications** P. 642



🎪 : Flammable Refrigerant

: Requires a qualified technician to service

X: Air Conditioning System

\* Not available on all models

577


## **Dust and Pollen Filter**

### ■ When to Replace the Dust and Pollen Filter

Replace the dust and pollen filter according to your vehicle's recommended maintenance schedule. It is recommended to replace the filter even sooner if the vehicle has been driven in a dusty environment.

Maintenance Schedule\* P. 534

## ■ How to Replace the Dust and Pollen Filter

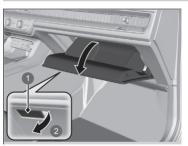

**1.** Open the glove box.


#### Dust and Pollen Filter

If the airflow from the heating system\*/climate control system\* deteriorates noticeably, and the windows fog up easily, the filter may need to be replaced.

The dust and pollen filter collects pollen, dust, and other debris in the air.


If you are not sure how to replace the dust and pollen filter, have it replaced by a dealer.

- Handle
- 2 Pull

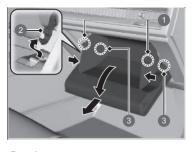

- **2.** Push the stopper on the driver's side of the glove box to detach it from the glove box.
- **3.** Disengage the two tabs by pushing on each side panel.
- **4.** Pivot the glove box out of the way.
- **5.** Remove the glove box by pulling out the claws.

- 1 Tabs
- 2 Stopper
- Claws

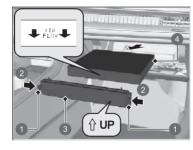

- **6.** Push in the tabs on the corners of the filter case cover, and remove it.
- **7.** Remove the filter from the case.
- 8. Install a new filter in the case.
  - ► Put the **AIR FLOW** arrow directed side down.

- 1 Tabs
- 2 Push
- Cover
- Dust and Pollen Filter

## Cleaning

## **Interior Care**

Use a vacuum cleaner to remove dust before using a cloth.

Use a damp cloth with a mixture of mild detergent and warm water to remove dirt. Use a clean cloth to remove detergent residue.

### ■ Cleaning Seat Belts

Use a soft brush with a mixture of mild soap and warm water to clean the seat belts. Let the belts air dry. Wipe the openings of the seat belt anchorages using a clean cloth.



Opening

#### 

Do not spill liquids inside the vehicle. Electrical devices and systems may malfunction if liquids are splashed on them.

Do not use silicone based sprays on electrical devices such as audio devices and switches. Doing so may cause the items to malfunction or cause a fire inside the vehicle.

If a silicone based spray is inadvertently used on electrical devices, consult a dealer.

Depending on their composition, chemicals and liquid aromatics may cause discolouration, wrinkles, and cracking to resin-based parts and textiles. Do not use alkali solvents or organic solvents such as benzene or petrol.

After using chemicals, make sure to gently wipe them away using a dry cloth.

Do not place used cloths on top of resin based parts or textiles for long periods of time without washing.

Be careful not to spill a liquid type air freshener.

### ■ Cleaning the Window

Wipe using a glass cleaner.

### ■ Maintaining Genuine Leather

To properly clean leather:

- **1.** Use a vacuum or soft dry cloth first to remove any dirt or dust.
- **2.** Clean the leather with a soft cloth dampened with a solution comprised of 90% water and 10% neutral soap.
- **3.** Wipe away any soap residue with a clean damp cloth.
- **4.** Wipe away residual water and allow leather to air dry in the shade.

### Alcantara® Care

After having dusted the material, moisten a soft cloth with clean lukewarm water, wring it dry and blot gently to remove any dirt. Once dry, lightly brush with a soft brush.

### ○ Cleaning the Window

Wires are mounted to the inside of the rear window. Wipe along the same direction as the wires with a soft cloth so as not to damage them.

Be careful not to spill fluids, such as water or glass cleaner, on or around the cover of both the front wide view camera and the rainfall/light sensor.

### Maintaining Genuine Leather ■ Maintaining Genuine Leath

It is important to clean or wipe away dirt or dust as soon as possible. Spills can soak into leather resulting in stains. Dirt or dust can cause abrasions in the leather. In addition, please note that some dark coloured clothing can rub onto the leather seats resulting in discolouration or stains.

### **Exterior Care**

Dust off the vehicle body after you drive. Regularly inspect your vehicle for scratches on painted surfaces. A scratch on a painted surface can result in body rust. If you find a scratch, promptly repair it.

### ■ Washing the Vehicle

Wash the vehicle regularly. Wash more frequently when driving in the following conditions:

- If driving on roads with road salt.
- If driving in coastal areas.
- If tar, soot, bird droppings, insects, or tree sap are stuck to painted surfaces.

## Using an Automated Car Wash

- Make sure to follow the instructions indicated on the automated car wash.
- Fold in the door mirrors.
- For models equipped with automatic intermittent wipers, turn the wipers off.

## Using High Pressure Cleaners

- Keep sufficient distance between the cleaning nozzle and the vehicle body.
- Take particular care around the windows. Standing too close may cause water to enter the vehicle interior.
- Do not spray high pressure water directly into the engine compartment. Instead, use low pressure water and a mild detergent.
- Do not spray water directly onto the camera or the area around it. Water may enter the lens and cause the camera to malfunction.

### **≥** Washing the Vehicle

Do not spray water into the air intake and bonnet intake vents. It can cause a malfunction.



- Air Intake Vents
- 2 Bonnet Intake Vent

Lock the doors when washing the vehicle. Do not spray water onto the fuel fill door directly. A high-pressure spray may cause it to open.

If you need to lift the wiper arms away from the windscreen, first set the wiper arms to the maintenance position.

**⚠ Changing the Front Wiper Blade** P. 560

## Applying Wax

A good coat of automotive body wax helps to protect your vehicle's paint from the elements. Wax will wear off over time and expose your vehicle's paint to the elements, so reapply as necessary.

### ■ Maintaining the Bumpers and Other Resin Coated Parts

If you get petrol, oil, engine coolant, or battery fluid on resin coated parts, they may be stained or the coating may peel. Promptly wipe it away using a soft cloth and clean water.

### Cleaning the Window

Wipe using a glass cleaner.

## ■ Maintaining Aluminium Wheels

Aluminium is susceptible to deterioration caused by salt and other road contaminants. When necessary, as early as possible use a sponge and mild detergent to wipe away these contaminants. Do not use a stiff brush or harsh chemicals (including some commercial wheel cleaners). These can damage the protective finish on aluminium alloy wheels, resulting in corrosion. Depending on the type of finish, the wheels also may lose their lustre or appear burnished. To avoid water stains, wipe the wheels dry with a cloth while they are still wet.

### ■ Applying Wax

### NOTICE

Chemical solvents and strong cleaners can damage the paint, metal, and plastic on your vehicle. Wipe away spills immediately.

**≥** Maintaining the Bumpers and Other Resin Coated Parts

Ask a dealer about the correct coating material when you want to repair the painted surface of the parts made of resin.

### Fogged Exterior Light Lenses

The inside lenses of exterior lights (headlights, brake lights, etc.) may fog temporarily if you have driven in the rain, or after the vehicle has been run through a car wash. Dew condensation also may build up inside the lenses when there is a significant enough difference between the ambient and inside lens temperatures (similar to vehicle windows fogging up in rainy conditions). These conditions are natural processes, not structural design problems in the exterior lights.

Lens design characteristics may result in moisture developing on the light lens frame surfaces. This also is not a malfunction.

However, if you see large amounts of water accumulation, or large water drops building up inside the lenses, have your vehicle inspected by a dealer.

## **Accessories and Modifications**

### **Accessories**

When installing accessories, check the following:

- Do not install accessories on the windscreen. They can obstruct your view and delay your reaction to driving conditions.
- Do not install any accessories over areas marked SRS Airbag, on the sides or backs of the front seats, on the sides of the rear seats, on front or side pillars, or near the side windows.
  - Accessories installed in these areas may interfere with proper operation of the vehicle's airbags or may be propelled into you or another occupant if the airbags deploy.
- Be sure electronic accessories do not overload electrical circuits or interfere with proper operation of your vehicle.

Fuses P. 630

• Before installing any electronic accessory, have the installer contact a dealer for assistance. If possible, have a dealer inspect the final installation.

■ Accessories and Modifications

## **AWARNING**

Improper accessories or modifications can affect your vehicle's handling, stability, and performance, and cause a crash in which you can be seriously hurt or killed.

Follow all instructions in this owner's manual regarding accessories and modifications.

When properly installed, mobile phones, alarms, twoway radios, radio antennas, and low-powered audio systems should not interfere with your vehicle's computer controlled systems, such as your airbags and anti-lock brakes.

Honda Genuine accessories are recommended to ensure proper operation on your vehicle.

### **Modifications**

Do not modify your vehicle in a manner that may affect its handling, stability, or reliability, or install non-genuine Honda parts or accessories that may have a similar effect.

Even minor modifications to vehicle systems can affect overall vehicle performance. Always make sure all equipment is properly installed and maintained, and do not make any modification to your vehicle or its systems that might cause your vehicle to no longer meet your country's and local regulations.

The on-board diagnostic port (OBD-II/SAE J1962 connector) installed on this vehicle is intended to be used with automobile system diagnostic devices or with other devices that Honda has approved. Use of any other type of device may adversely affect the vehicle's electronic systems or allow them to be compromised, possibly resulting in a system malfunction, drained battery, or other unexpected problems.

Do not modify or attempt to repair any of the electrical components.

# **Handling the Unexpected**

This chapter explains how to handle unexpected troubles.


Tools	. 588
If a Tyre Goes Flat	
Temporarily Repairing a Flat Tyre	. 590
Models with a compact spare tyre	
Changing a Flat Tyre	603
Handling of the Jack	
Engine Does Not Start	
Checking the Engine	614
If the Keyless Remote Battery is Weak.	. 616
Emergency Engine Stop	617
If the Battery Is Dead	618
Overheating	621

### Indicator, Coming On/Blinking

f the Engine oil pressure low Warning	g
Appears	623
f the Charging System Indicator Com	ıes
On	624
f the Malfunction Indicator Lamp Co	mes
On or Blinks	624
f the Brake System Indicator (Red) Co	omes
On or Blinks	625
f the Electric Power Steering (EPS) Sys	tem
Indicator Comes On	626

If the Brake System Indicator (Red) Comes Or
or Blinks at the Same Time When the Brake
System Indicator (Amber) Comes On 627
If the Low Tyre Pressure/Deflation Warning
System Indicator Comes On or Blinks628
If the Engine oil level low Warning
Appears629
<b>uses</b> 630
mergency Towing 637
You Cannot Unlock the Fuel Fill Door 638
You Cannot Open the Hatch 639


## **Types of Tools**

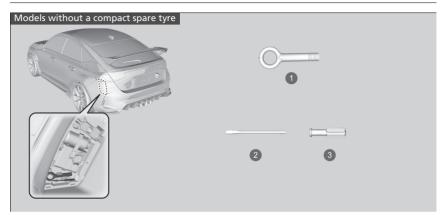

- Detachable Towing Hook
- 2 Flat-tip Screwdriver
- Grip

### ∑Types of Tools

The tools are stored in the luggage area.

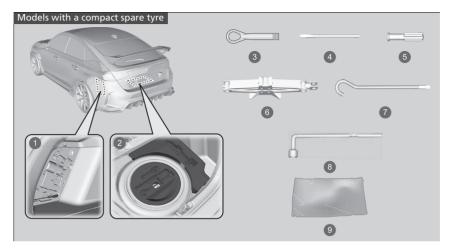

- 1 Left Side of the Luggage Area
- 2 Tool Case
- 3 Detachable Towing Hook
- 4 Flat-tip Screwdriver
- **6** Grip
- **6** Jack
- Jack Handle Bar
- 8 Wheel Nut Wrench/Jack Handle
- Storage Bag

## If a Tyre Goes Flat

## **Temporarily Repairing a Flat Tyre**

If the tyre has a large cut or is otherwise severely damaged, you will need to have the vehicle towed. If the tyre only has a small puncture, from a nail for instance, you can use the temporary tyre repair kit so that you can drive to the nearest service station for a more permanent repair.


If a tyre goes flat while driving, grasp the steering wheel firmly, and brake gradually to reduce speed. Then, stop in a safe place.

- **1.** Park the vehicle on a firm, level, non-slippery surface and apply the parking brake.
- **2.** Put the transmission into **R**.
- **3.** Turn on the hazard warning lights and set the power mode to VEHICLE OFF (LOCK).

### ∑Temporarily Repairing a Flat Tyre

The kit should not be used in the following situations. Instead, contact a dealer or a roadside assistant to have the vehicle towed.

- The tyre sealant has expired.
- More than one tyre is punctured.
- The puncture or cut is larger than 4 mm.
- The tyre side wall is damaged or the puncture is outside the contact area.

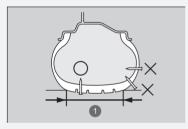


Contact Area

When the puncture is:	Kit Use
Smaller than 4 mm	Yes
Larger than 4 mm	No

- Damage has been caused by driving with the tyres extremely under inflated.
- The tyre bead is no longer seated.
- The rim is damaged.

Do not remove a nail or screw that punctured the tyre. If you remove it from the tyre, you may not be able to repair the puncture using the kit.

## ■ Getting Ready to Temporarily Repair the Flat Tyre

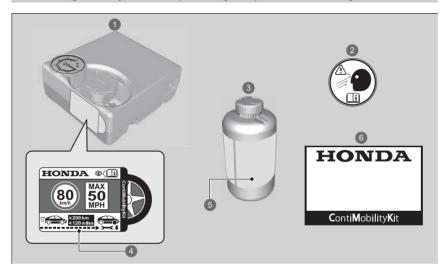

- Air Compressor
- Wheel Label
- Sealant Bottle
- 4 Speed Restriction Label
- **5** Expiration Date
- **6** Handling Manual

### ■ Getting Ready to Temporarily Repair the Flat Tyre


Speed restriction label are applied to the side of the temporary tyre repair kit.

When making a temporary repair, carefully read the instruction manual provided with the kit.



- **1.** Remove the lid on left side of the luggage area by rotating the knob, then take the kit out from inside.
- **2.** Place the kit, face up, on flat ground near the flat tyre, away from traffic. Do not place the kit on its side.

- 1 Lid
- 2 Knob

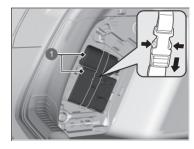

1 Temporary Tyre Repair Kit

### **■** Injecting Sealant and Air



**1.** Take the air compressor hose and plug cord out of the back of the air compressor.

- Plug Cord
- 2 Air Compressor Hose



**2.** Remove the cap from the air compressor.

∑Injecting Sealant and Air

## **AWARNING**

Tyre sealant contains substances that are harmful and can be fatal if swallowed.

If accidentally swallowed, do not induce vomiting. Drink plenty of water and get medical attention immediately.

For skin or eye contact, flush with cool water and get medical attention if necessary.

Keep the sealant bottle out of the reach of children.

In cold temperatures, the sealant may not flow easily. In this situation, warm it by keeping the bottle in the passenger compartment before using.

The sealant can permanently stain clothing and other materials. Be careful during handling and wipe away any spills immediately.



**3.** Shake the bottle well.



- **4.** Remove the bottle cap.
  - ▶ Do not remove the sealed cover.

### 


Do not remove the empty bottle after injecting the sealant.

See a Honda dealer for a replacement of sealant bottle and proper disposal of the empty bottle.



2 Not Removed




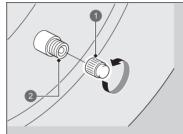


- Valve Cap
- 2 Valve

- **5.** Screw the sealed bottle onto the air compressor.
  - Screw the bottle tightly so that it does not become loose.

**6.** Unscrew the valve cap.

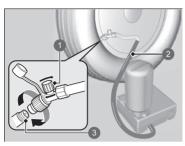

- Air Valve
- 2 Air Compressor Hose
- Valve

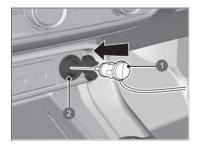

- Plug
- 2 Accessory Power Socket

- **7.** Screw the air compressor hose onto the tyre valve.
  - ► Make sure the air valve is closed and the air compressor is turned off.

- **8.** Plug in the compressor to the accessory power socket.
  - **▶ Accessory Power Socket** P. 219
- **9.** Start the engine.
  - **Carbon Monoxide Gas** P. 95

## **AWARNING**

Running the engine with the vehicle in an enclosed or even partly enclosed area can cause a rapid buildup of toxic carbon monoxide.


Breathing this colourless, odourless gas can cause unconsciousness and even death.

Only run the engine to power the air compressor with the vehicle outdoors.

Turn the air compressor off when connecting the air compressor hose.

You hear a motor sound coming from the activated air compressor. This is normal.

If the specified air pressure is not reached within 10 minutes, the tyre may be too severely damaged for the kit to provide the necessary seal and your vehicle will need to be towed.

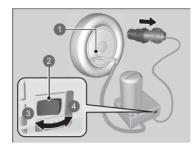

- Air Valve
- 2 Switch
- OFF
- 4 ON

- **10.** Turn on the air compressor and inflate the tyre to the specified air pressure.
  - ► The compressor starts injecting sealant and air into the tyre.
  - ➤ Refer to the driver's doorjamb label for the specified pressure.
- **11.** After the air pressure reaches to specified pressure, turn off the compressor.
  - ► Check the air pressure gauge on the air compressor.
  - ▶ If overinflated, release the air by turning the air valve. Be careful not to spill any sealant.
- **12.** Unplug the plug from the accessory power socket.
- **13.** Unscrew the air compressor hose from the tyre valve. Install the hose cap.
  - ▶ Be careful not to spill any sealant when the air compressor hose is disconnected. Wipe away any spills.


### ≥ Injecting Sealant and Air

If you want to measure the air pressure using a gauge, turn the air compressor off first.

Inform the use of tyre sealant when you ask a Honda dealer or the road assistant service for replacing or repairing the flat tyre.

This air compressor is designed for the automotive tyre. Check the following:


- The power supply of the air compressor is limited to your vehicle's 12-volt DC accessory power socket.
- Do not operate the temporary tyre repair kit compressor for more than 10 minutes. The compressor can overheat and become permanently damaged.
  - Make it cool down when using the compressor continuously.

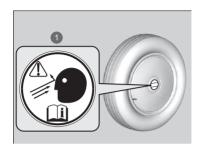

Wheel Label

- **14.** Apply the wheel label to the flat surface of the wheel.
  - ► The wheel surface must be clean to ensure the label adheres properly.
- **15.** Store the temporary tyre repair kit in the luggage area.
  - ▶ Do not remove the sealant bottle from the air compressor.

## ■ Distributing the Sealant in the Tyre

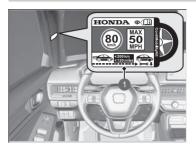

Speed Restriction Label

- **1.** Apply the speed restriction label to the location as shown.
- **2.** Drive the vehicle for about 10 minutes or 3 to 10 kilometres (2 to 6 miles).
  - ▶ Do not exceed 80 km/h (50 mph).
- **3.** Stop the vehicle in a safe place.

Distributing the Sealant in the Tyre

## **AWARNING**

Running the engine with the vehicle in an enclosed or even partly enclosed area can cause a rapid buildup of toxic carbon monoxide.

Breathing this colourless, odourless gas can cause unconsciousness and even death.
Only run the engine to power the air compressor with the vehicle outdoors.

Refer to the driver's doorjamb label for the specified pressure.



- Air Compressor
- OFF
- ON

- **4.** Recheck the air pressure using the gauge on the air compressor.
  - ▶ Do not turn the air compressor on to check the pressure.
- **5.** If the air pressure is
  - Less than 130 kPa (1.3 bar, 19 psi): Do not add air and continue driving. The leak is too severe. Call for help and have your vehicle towed.

### **Emergency Towing** P. 637

- Specified air pressure (See the label on driver's doorjamb.) or more: Continue driving until you reach the nearest service station. Do not exceed 80 km/h (50 mph).
- Greater than 130 kPa (1.3 bar, 19 psi), but less than specified air pressure (See the label on driver's doorjamb.): Inflate the tyre to the specified air pressure.


## Inflating an Under-inflated Tyre P 601

And repeat steps 2 to 4 until you reach the nearest service station. Do not exceed 80 km/h (50 mph).

- ➤ The distance to the nearest service station has to be within about 200 kilometres (120 miles).
- **6.** Repackage and properly stow the kit.


### ■ Inflating an Under-inflated Tyre

You can use the kit to inflate a non-punctured under-inflated tyre.

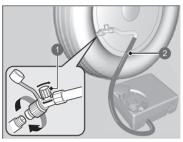

- **1.** Take the air compressor out of the luggage area.
- **2.** Place the kit, face up, on flat ground near the tyre to be inflated, away from traffic. Do not place the kit on its side.
- **3.** Remove the valve cap.
- **4.** Attach the air compressor hose onto the tyre valve stem. Screw it until it is tight.

- Air Valve
- 2 Air Compressor Hose

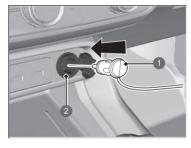

- Plug
- 2 Accessory Power Socket

- **5.** Plug in the compressor to the accessory power socket.
  - ▶ Be careful not to pinch the cord in a door or window.
    - Accessory Power Socket P. 219
- **6.** Start the engine.
  - Carbon Monoxide Gas P. 95


Inflating an Under-inflated Tyre

## **AWARNING**

Running the engine with the vehicle in an enclosed or even partly enclosed area can cause a rapid buildup of toxic carbon monoxide.

Breathing this colourless, odourless gas can cause unconsciousness and even death.

Only run the engine to power the air compressor with the vehicle outdoors.

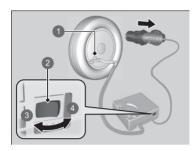

- Air Valve
- Switch
- OFF
- 4 ON

- **7.** Turn the air compressor switch on to inflate the tyre.
  - ► The compressor starts to inject air into the tyre.
  - ► If you have started the engine, leave it running while injecting air.
- **8.** Inflate the tyre to the specified air pressure.
- 9. Turn off the kit.
  - ► Check the pressure gauge on the air compressor.
  - ► If overinflated, turn the air valve to deflate.
- Turn off the engine, then unplug the air compressor from the accessory power socket.
- **11.** Unscrew the air compressor hose from the tyre valve stem. Reinstall the valve cap.
- **12.** Store the air compressor in the luggage area.

### ≥ Inflating an Under-inflated Tyre

### NOTICE

Do not operate the temporary tyre repair kit compressor for more than 10 minutes. The compressor can overheat and become permanently damaged.

### Models with a compact spare tyre

## **Changing a Flat Tyre**

If a tyre goes flat while driving, grasp the steering wheel firmly, and brake gradually to reduce speed. Then, stop in a safe place. Replace the flat tyre with a compact spare tyre. Go to a dealer as soon as possible to have the full-size tyre repaired or replaced.

- **1.** Park the vehicle on a firm, level, non-slippery surface and apply the parking brake.
- **2.** Put the transmission into **R**.
- **3.** Turn on the hazard warning lights and set the power mode to VEHICLE OFF.

### ○ Changing a Flat Tyre

Follow compact spare precautions:

Periodically check the tyre pressure of the compact spare. It should be set to the specified pressure. Specified Pressure: 420 kPa (4.2 bar, 60 psi)

When driving with the compact spare tyre, keep the vehicle speed under 80 km/h (50 mph). Replace with a full-size tyre as soon as possible.

The compact spare tyre and wheel in your vehicle are specifically for this model. Do not use them with another vehicle. Do not use another type of compact spare tyre or wheel with your vehicle.

Do not mount tyre chains on a compact spare tyre. If a chain-mounted front tyre goes flat, remove one of the full-size rear tyres and replace it with the compact spare tyre. Remove the flat front tyre and replace it with the full-size tyre that was removed from the rear. Mount the tyre chains on the front tyre.

A compact spare tyre gives a harsher ride and less traction on some road surfaces. Use greater caution while driving.

The compact spare tyre is smaller than the regular tyre. Your vehicle's ground clearance reduces when the compact spare tyre is installed. Driving over road debris or bumps could possibly damage the underside of your vehicle.

## ■ Getting Ready to Replace the Flat Tyre




**1.** Pull the strap on the floor lid and open the lid.

2. Take the tool case out of the luggage area.
3. Take the jack and wheel nut wrench out of

**4.** Unscrew the wing bolt, and remove the spacer cone. Then, remove the spare tyre.

the tool case.

Strap

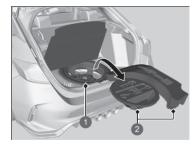


- Spare Tyre
- 2 Tool Case

### 

**WARNING:** The jack can only be used for helping an emergency vehicle breakdown, not for changing the regular seasonal tyre or any other normal maintenance or repair operation.

### NOTICE

Do not use the jack if it doesn't work properly. Call your dealer or a professional towing service.

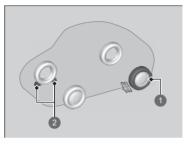

**5.** Place a wheel block or rock in front and rear of the wheel diagonal to the flat tyre.

- 1 The tyre to be replaced.
- Wheel Blocks



**6.** Place the compact spare tyre (wheel side up) under the vehicle body, near the tyre that needs to be replaced.

### 

### NOTICE

Do not mount the compact spare on the front. If mounted on the front, the compact spare, smaller in size than the full-size tyre, may damage the differential.


If either front tyre goes flat, remove the rear tyre on the same side, and mount the compact spare on the rear and the rear tyre on the front.

Do not use more than one compact spare tyre at the same time.



**7.** Loosen each wheel nut about one turn using the wheel nut wrench.

### ■ How to Set Up the Jack

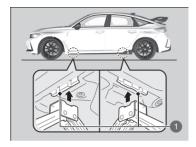

**1.** Place the jack under the jacking point closest to the tyre to be changed.

Jacking Points



Jacking Point

- **2.** Turn the end bracket clockwise as shown in the image until the top of the jack contacts the jacking point.
  - ► Make sure that the jacking point tab is resting in the jack notch.

## **AWARNING**

The vehicle can easily roll off the jack, seriously injuring anyone underneath.


Follow the directions for changing a tyre exactly, and no person should place any portion of their body under a vehicle that is supported by a jack.

**WARNING:** The jack shall be placed on a flat and stable surface on the same level as the vehicle is parked.

The jack that came with your vehicle has the following label.



- 1. See Owner's Manual.
- 2. Never get under vehicle when supported by jack.
- 3. Place jack underneath reinforced area.

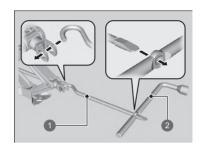

- 1 Jack Handle Bar
- 2 Wheel Nut Wrench as Jack Handle

**3.** Raise the vehicle, using the jack handle bar and the jack handle, until the tyre is off the ground.

### ■ How to Set Up the Jack


Do not use the jack with people or luggage in the vehicle.

Use the jack provided in your vehicle. Other jacks may not support the weight ("load") or may not fit the jacking point.


The following instructions must be followed to use the jack safely:

- Do not use while the engine is running.
- Use only where the ground is firm and level.
- Use only at the jacking points.
- Do not get in the vehicle while using the jack.
- Do not put anything on top of or underneath the jack.

## ■ Replacing the Flat Tyre

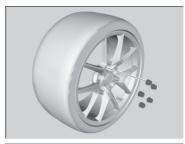

1. Remove the wheel nuts and flat tyre.

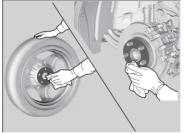

- **2.** Wipe the mounting surfaces of the wheel with a clean cloth.
- **3.** Mount the compact spare tyre.
- **4.** Screw the wheel nuts until they touch the lips around the mounting holes, then stop rotating.



**5.** Lower the vehicle and remove the jack. Tighten the wheel nuts in the order indicated in the image. Go around, tightening the nuts, two to three times in this order.


### Wheel nut torque:

127 N·m (13 kgf·m, 94 lbf·ft)

### ■ Replacing the Flat Tyre

Do not over tighten the wheel nuts by applying extra torque using your foot or a pipe.

## ■ Storing the Flat Tyre

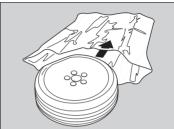

- Belt


- **1.** Put the flat tyre in the storage bag provided with your vehicle.
  - ► The storage bag is in the tool case.
- **2.** Knot the top of the storage bag.
- **3.** Securely put the jack, jack handle bar and wheel nut wrench back in the tool case.
- **4.** Bore through the bag, and pass the holding belt through the hole of the bag and the wheel of the flat tyre as shown.

Storing the Flat Tyre

## **AWARNING**

Loose items can fly around the interior in a crash and can seriously injure the occupants.

Store the wheel, jack, and tools securely before driving.

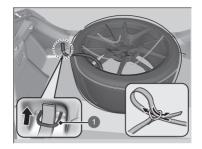

1 Rear Anchorage

- **5.** Place the flat tyre in the luggage area, and thread the belt through the rear anchorage as shown.
- **6.** Pass the belt through the ring, and tighten the belt to secure the flat tyre in place.

Continued 611

## ■ Deflation Warning System and the Compact Spare Tyre

If you replace a flat tyre with the spare tyre, the low tyre pressure/deflation warning system indicator comes on while you are driving. After driving for a few kilometers (miles), **Tyre pressure monitor system problem** will appear on the driver information interface and the indicator will start blinking for a short time and then stay on; however, this is normal and is no cause for concern.


Calibrate the deflation warning system when you replace the tyre with a specified regular tyre.

**Deflation Warning System Calibration** P. 420

## Handling of the Jack

## Models without a compact spare tyre

Your vehicle has jacking points as shown. When replacing your tyres, consult a dealer.

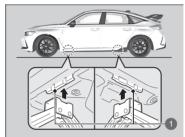

Jacking Points

## **Engine Does Not Start**

## **Checking the Engine**

If the engine does not start, check the starter.

Starter condition	Checklist
Starter doesn't turn or turns	Check for a message on the driver information interface.
over slowly.	• If the To start, touch start button with emblem side of remote message appear
The battery may be dead. Check	If the Keyless Remote Battery is Weak P. 616
each of the items on the right and	Check the fuses.
respond accordingly.	Check all fuses, or have your vehicle checked by a dealer.
	<b>Inspecting and Changing Fuses</b> P. 634
	Check the battery.
	Have the battery checked by a dealer.
	<b>Battery</b> P. 569

Starter condition	Checklist
The starter turns over normally	Review the engine start procedure.
but the engine doesn't start.	Follow its instructions, and try to start the engine again.
There may be a problem with a	Starting the Engine P. 377
fuse. Check each of the items on	Check the immobilizer system indicator.
the right and respond accordingly.	When the immobilizer system indicator is blinking, the engine cannot be started.
-	<b>Immobilizer System</b> P. 174
	Check the fuel level.
	There should be enough fuel in the tank.
	<b>▶ Fuel Gauge</b> P. 128
	Check the fuses.
	Check all fuses, or have your vehicle checked by a dealer.
	<b>Inspecting and Changing Fuses</b> P. 634
	If the problem continues:
	Emergency Towing P. 637


If you must start the vehicle immediately, use an assisting vehicle or booster battery to jump start it.

**If the Battery Is Dead** P. 618

Do not hold the **ENGINE START/STOP** button for more than 15 seconds.

## If the Keyless Remote Battery is Weak


If the beeper sounds, the To start, touch start button with emblem side of remote message appears on the driver information interface, the ENGINE START/STOP button flashes, and the engine won't start, start the engine as follows:

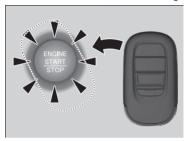

- 1. Press the **ENGINE START/STOP** button.
  - ► The beeper sounds and the **ENGINE START/STOP** button flashes for about 30 seconds.
- 2. Touch the centre of the ENGINE START/ STOP button with the H logo on the keyless remote while the ENGINE START/STOP button is flashing. The buttons on the keyless remote should be facing you.
  - ► The beeper sounds, and the ENGINE START/STOP button stays on for about 10 seconds.



- ► The engine starts.
- ► If you don't depress the pedal, the mode will change to ACCESSORY.

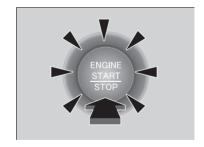

## **Emergency Engine Stop**

The **ENGINE START/STOP** button may be used to stop the engine due to an emergency situation even while driving. If you must stop the engine, do either of the following operations:

- Press and hold the **ENGINE START/STOP** button for about two seconds.
- Firmly press the **ENGINE START/STOP** button three times.

The steering wheel will not lock. However, because turning off the engine disables the power assist the engine provides to the steering and braking systems, it will require significantly more physical effort and time to steer and slow the vehicle. Use both feet on the brake pedal to slow down the vehicle and stop immediately in a safe place. With manual transmission models you can also downshift the transmission to utilize engine braking.

The power mode changes to VEHICLE OFF.

## 

## NOTICE


Do not press the **ENGINE START/STOP** button while driving unless it is absolutely necessary for the engine to be turned off.

If you press the **ENGINE START/STOP** button while driving, the beeper sounds.

## If the Battery Is Dead

## **Jump Starting Procedure**

Turn off the power to electric devices, such as audio and lights. Turn off the engine, then open the bonnet.

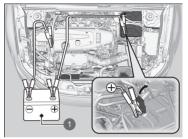

Booster Battery

- **1.** Open the cover on the positive  $\oplus$  terminal.
- **2.** Connect the first jumper cable to your vehicle's battery  $\oplus$  terminal.
- **3.** Connect the other end of the first jumper cable to the booster battery  $\oplus$  terminal.
  - ▶ Use a 12-volt booster battery only.
  - ➤ When using an automotive battery charger to boost your 12-volt battery, select a lower charging voltage than 15-volt. Check the charger manual for the proper setting.

≥ If the Battery Is Dead

## **AWARNING**


A battery can explode if you do not follow the correct procedure, seriously injuring anyone nearby.

Keep all sparks, open flames, and smoking materials away from the battery.

#### NOTICE

If a battery sits in extreme cold, the electrolyte inside can freeze. Attempting to jump start with a frozen battery can cause it to rupture.

Securely attach the jumper cables clips so that they do not come off when the engine vibrates. Be careful not to tangle the jumper cables or allow the cable ends to touch each other while attaching or detaching the jumper cables.

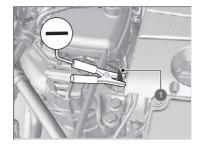

Stud Bolt

- **4.** Connect the second jumper cable to the booster battery  $\bigcirc$  terminal.
- **5.** Connect the other end of the second jumper cable to the stud bolt as shown. Do not connect this jumper cable to any other part.
- **6.** If your vehicle is connected to another vehicle, start the assisting vehicle's engine and increase its rpm slightly.
- **7.** Attempt to start your vehicle's engine. If it turns over slowly, check that the jumper cables have good metal-to-metal contact.

## ≥ If the Battery Is Dead

Battery performance degrades in cold conditions and may prevent the engine from starting.

Continued 619

## ■ What to Do After the Engine Starts

Once your vehicle's engine has started, remove the jumper cables in the following order.

- **1.** Disconnect the jumper cable from your vehicle's ground.
- **2.** Disconnect the other end of the jumper cable from the booster battery  $\bigcirc$  terminal.
- **3.** Disconnect the jumper cable from your vehicle's battery  $\oplus$  terminal.
- **4.** Disconnect the other end of the jumper cable from the booster battery  $\oplus$  terminal.

Have your vehicle inspected by a nearby service station or a dealer.

## ≥ If the Battery Is Dead

The Adaptive Cruise Control (ACC), Vehicle Stability Assist (VSA) System, Safety Support, Low Tyre Pressure/ Deflation Warning System indicators may come on when you turn the power mode to on after reconnecting a battery.

Drive a short distance at more than 20 km/h (12 mph). Each indicator should go off. If it does not, have your vehicle checked by a dealer.

## Overheating

## **How to Handle Overheating**

Overheating symptoms are as follows:

- The temperature gauge is at upper level or the engine suddenly loses power.
- The Engine temperature too hot. Do not drive. Allow engine to cool. message appears on the driver information interface.
- Steam or spray comes out of the engine compartment.

## ■ First thing to do

- **1.** Immediately park the vehicle in a safe place.
- 2. Turn off all accessories and turn on the hazard warning lights.
  - ▶ No steam or spray present: Keep the engine running and open the bonnet.
  - ➤ Steam or spray is present: Turn off the engine and wait until it subsides. Then, open the bonnet.

## **AWARNING**

Steam and spray from an overheated engine can seriously scald you.

Do not open the bonnet if steam is coming out.

#### NOTICE

Continuing to drive with the temperature gauge at upper level may damage the engine.


#### NOTICE

Continuing to drive with the EEE Engine temperature too hot. Do not drive. Allow engine to cool.

message on the driver information interface may damage the engine.

Continued 621

## ■ Next thing to do

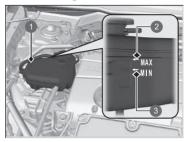

- Reserve Tank
- MAX
- MIN

- **1.** Check that the cooling fan is operating and stop the engine once the temperature gauge goes down.
  - ► If the cooling fan is not operating, immediately stop the engine.
- **2.** Once the engine has cooled down, inspect the coolant level and check the cooling system components for leaks.
  - ► If the coolant level in the engine coolant reserve tank is low, add coolant until it reaches the MAX mark.
  - ▶ If there is no coolant in the engine coolant reserve tank, check that the radiator is cool. Cover the reserve tank cap with a heavy cloth and open the cap. If necessary, add coolant up to the base of the filler neck, and put the cap back on.

➤ How to Handle Overheating

## **AWARNING**

Removing the reserve tank cap while the engine is hot can cause the coolant to spray out, seriously scalding you.

Always let the engine and radiator cool down before removing the reserve tank cap.

If the coolant is leaking, contact a dealer for repairs.

Use water as an emergency/temporary measure only. Have a dealer flush the system with proper antifreeze as soon as possible.

## ■ Last thing to do

Once the engine has cooled sufficiently, restart it and check the temperature gauge. If the temperature gauge has gone down, resume driving. If it has not gone down, contact a dealer for repairs.

## Indicator, Coming On/Blinking

## If the Engine oil pressure low Warning Appears



■ Reasons for the warning to appear

Appears when the engine oil pressure is low.

## ■ What to do as soon as the warning appears

- **1.** Immediately park the vehicle on level ground in a safe place.
- 2. If necessary, turn the hazard warning lights on.
- What to do after parking the vehicle
- **1.** Stop the engine and let it sit for approximately three minutes.
- **2.** Open the bonnet and check the oil level.
  - Add oil as necessary.

Oil Check P 544

- **3.** Start the engine and check the **Engine oil pressure low** warning.
  - ► The warning disappears: Start driving again.
  - ► The warning does not disappear within 10 seconds: Immediately stop the engine and contact a dealer for repairs.

≥ If the Engine oil pressure low Warning Appears

#### NOTICE

Running the engine with low oil pressure can cause serious mechanical damage almost immediately.

## If the Charging System Indicator Comes On



## ■ Reasons for the indicator to come on

Comes on when there is a problem with the charging system.

#### ■ What to do when the indicator comes on

Stop in a safe place and have your vehicle checked by a dealer immediately.

## If the Malfunction Indicator Lamp Comes On or Blinks



#### ■ Reasons for the indicator lamp to come on or blink

- Comes on when there is a problem with the engine emissions control system.
- Blinks when engine misfiring is detected.

## ■ What to do when the indicator lamp comes on

Avoid high speeds and immediately get your vehicle inspected at a dealer.

#### ■ What to do when the indicator lamp blinks

Park the vehicle in a safe place with no flammable items and wait at least 10 minutes or more with the engine stopped until it cools.

#### If the Charging System Indicator Comes On

If you need to stop temporarily, do not turn off the engine. Restarting the engine may rapidly discharge the battery.

#### NOTICE

If you drive with the malfunction indicator lamp on, the emissions control system and the engine could be damaged.

If the malfunction indicator lamp blinks again when restarting the engine, drive to the nearest dealer at 50 km/h (31 mph) or less. Have your vehicle inspected.

## If the Brake System Indicator (Red) Comes On or Blinks



(Red)

#### ■ Reasons for the indicator to come on

- The brake fluid is low
- There is a malfunction in the brake system.

## ■ What to do when the indicator comes on while driving

Depress the brake pedal lightly to check pedal pressure.

- If normal, check the brake fluid level the next time you stop.
- If abnormal, take immediate action. If necessary, downshift the transmission to slow the vehicle using engine braking.

#### Reasons for the indicator to blink

- There is a problem with the electric parking brake system.
- What to do when the indicator blinks
- Avoid using the parking brake and have your vehicle checked by a dealer immediately.

≥ If the Brake System Indicator (Red) Comes On or Blinks

Have your vehicle repaired immediately. It is dangerous to drive with low brake fluid. If there is no resistance from the brake pedal, stop immediately in a safe place. If necessary downshift the gears.

If the brake system indicator (red) and **ABS** indicator come on simultaneously, the electronic brake distribution system is not working. This can result in vehicle instability under sudden braking. Have your vehicle inspected by a dealer immediately.

If the brake system indicator (red) blinks at the same time when the brake system indicator (amber) comes on, the parking brake may not work.

Avoid using the parking brake and have your vehicle checked by a dealer immediately.

☑ If the Brake System Indicator (Red) Comes On or Blinks at the Same Time When the Brake System Indicator (Amber) Comes On P. 627

## If the Electric Power Steering (EPS) System Indicator Comes On



- Reasons for the indicator to come on
- Comes on when there is a problem with the EPS system.
- What to do when the indicator comes on
- Stop the vehicle in a safe place and restart the engine.

  If the indicator comes on and stays on, immediately have your vehicle inspected by a dealer.
- If Op not drive displays on the driver information interface, immediately stop in a safe place and contact a dealer.

# If the Brake System Indicator (Red) Comes On or Blinks at the Same Time When the Brake System Indicator (Amber) Comes On



(Red)



(Amber)

■ If the brake system indicator (red) comes on or blinks at the same time when the brake system indicator (amber) comes on, release the parking brake manually or automatically.

▶ Parking Brake P. 491

- If the brake system indicator (red) continuously comes on or blinks at the same time when the brake system indicator (amber) comes on, stop the vehicle in a safe place and have it inspected by a dealer immediately.
  - ▶ Preventing the vehicle from moving, put the transmission into 1 or R.
- If only the brake system indicator (red) is turned off, avoid using the parking brake and have your vehicle checked by a dealer immediately.

■If the Brake System Indicator (Red) Comes On or Blinks at the Same Time When the Brake System Indicator (Amber) Comes On

If you apply the parking brake, you may not be able to release it.

If the brake system indicator (red) and the brake system indicator (amber) come on at the same time, the parking brake is working.

If the brake system indicator (red) blinks at the same time when the brake system indicator (amber) comes on, the parking brake may not work because it is checking the system.

If you repeatedly operate the electric parking brake in a short period of time, the brake stops operating to prevent heating of the system and the indicator blinks.

It returns to its original state in approximately 1 minute.

# If the Low Tyre Pressure/Deflation Warning System Indicator Comes On or Blinks



#### ■ Reasons for the indicator to come on or blink

A tyre pressure is significantly low, or the deflation warning system has not been calibrated. If there is a problem with the deflation warning system, the indicator blinks for about one minute, and then stays on. If the compact spare tyre is installed, the indicator will either come on or it will first blink for about one minute, then stay on.

#### ■ What to do when the indicator comes on

Drive carefully and avoid abrupt cornering and hard braking. Stop your vehicle in a safe place. Check the tyre pressure and adjust the pressure to the specified level. The specified tyre pressure is on a label on the driver side doorjamb.

Calibrate the deflation warning system after the tyre pressure is adjusted.

If the compact spare tyre causes the indicator to come on, change the tyre to a full-size tyre. The indicator goes off after calibrating the deflation warning system.

**Deflation Warning System** P. 418

#### ■ What to do when the indicator blinks, then remains on

Have the tyre inspected by a dealer as soon as possible.

If the compact spare tyre causes the indicator to first blink, and then stay on, change the tyre to a full-size tyre. The indicator goes off after calibrating the deflation warning system.

■If the Low Tyre Pressure/Deflation Warning System Indicator Comes On or Blinks

#### NOTICE

Driving on an extremely underinflated tyre can cause it to overheat. An overheated tyre can fail. Always inflate your tyres to the prescribed level.

## If the Engine oil level low Warning Appears



## ■ Reasons for the warning to appear

Appears when the engine oil level is low.

## ■ What to do as soon as the warning appears

- **1.** Immediately park the vehicle on level ground in a safe place.
- **2.** If necessary, turn the hazard warning lights on.

## ■ What to do after parking the vehicle

- **1.** Stop the engine and let it sit for about three minutes.
- 2. Open the bonnet and check the oil level.
  - Add oil as necessary.

Oil Check P. 544

#### If the Engine oil level low Warning Appears

Running the engine with low oil level can cause serious mechanical damage almost immediately.

This system activates after the engine warms up. If the outside temperature is extremely low, you may have to drive for a long time until the system senses the engine oil level.

If the warning appears again, stop the engine and contact a dealer for repairs immediately.

## **Fuse Locations**


If any electrical devices are not working, set the power mode to VEHICLE OFF (LOCK) and check to see if any applicable fuse is blown.

## **■** Engine Compartment Fuse Box

Located near the battery. Push the tabs to open the box.

Fuse locations are shown on the image below.

Locate the fuse in question by the fuse number in the image and chart.

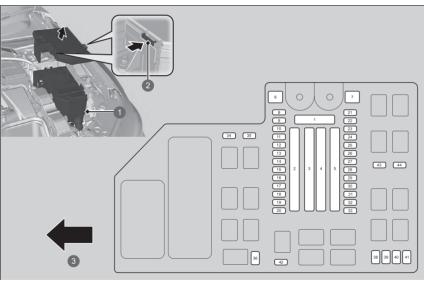

- Fuse Box
- 2 Tab
- Front

## **■** Circuit protected and fuse rating

Circuit Protected	Amps
Battery	125 A
_	_
_	_
Fuse Box Option	60 A
_	_
_	_
DC/DC2	30 A
Fuse Box Main	60 A
_	_
_	_
_	_
Rear Defroster	40 A
_	_
Blower Motor	40 A
_	_
<u> </u>	
ABS/VSA Motor	40 A
DC/DC	30 A
_	_
IG Main	30 A
<u> </u>	
Relay Module2	30 A
	Battery ————————————————————————————————————

	Circuit Protected	Amps
	Starter Magnetic SW	30 A
_	Front Wiper	30 A
	EPS	70 A
5	RFC	50 A
	ABS/VSA FSR	40 A
	Relay Module1	30 A
	Fuse Box Main2	40 A
6	_	_
7	IG Main2	30 A
8	Active Exhaust Valve	7.5 A
9	_	_
10	AUDIO SUB	7.5 A
11	_	_
12	_	_
13	_	_
14	<del>_</del>	_
15	_	_
16	MG Clutch*	10 A
17	Washer	15 A
18	Horn	10 A
19	BACKUP	15 A
20	AUDIO	15 A
21	RFC Relay	7.5 A
22	DBW	15 A
23	_	_
24	BACKUP FI-ECU	10 A
25	IGP	15 A


	Circuit Protected	Amps
26	_	_
27	LCM L	(15 A)
28	_	
29	Stop Lights	10 A
30	LCM R	15 A
31	IG Coil	15 A
32	<del>_</del>	_
33	Hazard	15 A
34	AUDIO SUB VST	7.5 A
35	_	_
36	<b>AUDIO VST MAIN</b>	30 A
38	_	_
39	_	_
40	_	_
41	IGPS[LAF]	10 A
42	_	_
43	<u> </u>	_
44	BACKUP2 MAIN	30 A

## **■** Interior Fuse Box

Located under the dashboard.

Fuse locations are shown on the image below.

Locate the fuse in question by the fuse number in the image and chart.

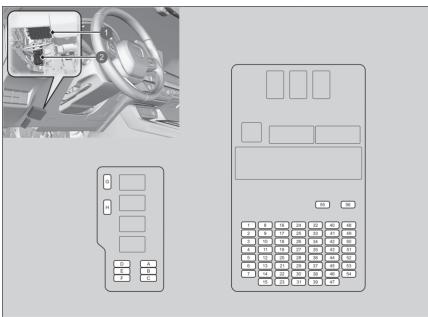

- 1 Fuse Box
- 2 Sub Fuse Box

## ■ Circuit protected and fuse rating

		9
	Circuit Protected	Amps
1	Driver's Side Power Window	20 A
2	Passenger's Side Power Window	20 A
3	Rear Right Side Power Window	20 A
4	Rear Left Side Power Window	20 A
5	Option	10 A
6	SRS	10 A
7	Hatch MTR	10 A
8	_	_
9	Front Accessory Socket	20 A
10	Door Lock	20 A
11	METER	10 A
12	Option3 (ST CUT)	10 A
13	Option2 (RR WIP)*	10 A
14	Option6 (VB SOL)	10 A
15	Driver's Door Unlock	10 A
16	_	_
17	_	_
18	_	_
19	_	_
20	Rear Fog Light	10 A
21	_	_

	Circuit Protected	Amps
22	keyless access system	10 A
23	Driver's Door Lock	10 A
24	<del>_</del>	_
25	IMG	10 A
26	SRS	10 A
27	ST CUT RLY	20 A
28	Option5	10 A
29	Fuel Pump	15 A
30	Left Side Door Unlock	10 A
31	Right Side Door Unlock	10 A
32	<del></del>	_
33	_	_
34	<u> </u>	_
35	_	_
36	_	_
37	—	_
38	<del></del>	_
39	Right Side Door Lock	10 A
40	<u> </u>	_
41	<del>-</del>	_
42	Back Lights	10 A
43	AIRCON*	10 A
44	Daytime Running Lights	10 A
45	ACC	10 A
46	ACC KEY LOCK	10 A
47	Left Side Door Lock	10 A


	Circuit Protected	Amps
48	_	_
49	<del>-</del>	_
50	<del></del>	_
51	—	_
52	<del></del>	_
53	—	_
54	Option1 / Fuel Lid	10 A
55	—	_
56	Adaptive Damper System	30 A

## Sub Fuse Box

	Circuit Protected	Amps
Α	BACKUP2 MAIN	10 A
В	AUDIO SUB VST	7.5 A
C	VST ACC	10 A
D	RELAY1	10 A
Е	AUDIO VST MAIN	15 A
F	<del>_</del>	_
G	_	_
Н	RELAY2	10 A

<sup>\*</sup> Not available on all models

## **Inspecting and Changing Fuses**

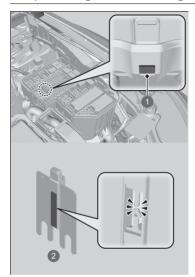

- 1 Hole
- Main Fuse

- **1.** Set the power mode to VEHICLE OFF (LOCK). Turn headlights and all accessories off.
- **2.** Remove the fuse box cover.
- **3.** Check the large fuse in the engine compartment.
  - Look at the fuse through the hole.
  - ► If the fuse is blown, have it replaced by a dealer.

## 


#### NOTICE

Replacing a fuse with one that has a higher rating greatly increases the chances of damaging the electrical system.

Use the charts to locate the fuse in question and confirm the specified amperage.

Fuse Locations P. 630


Replace a fuse with a new one of the same specified amperage.

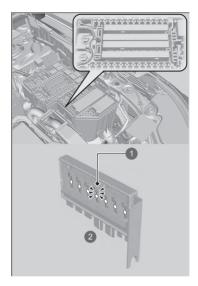

- 1 Blown Fuse
- 2 Combined Fuse

- **4.** Check the combined fuses in the engine compartment fuse box.
  - ► Look into the space between the fuses.
  - ► If the fuse is blown, have it replaced by a dealer.

Continued 635

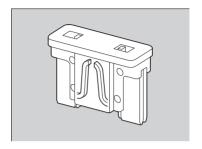

- **5.** Inspect the small fuses in the engine compartment and the vehicle interior.
  - ► If there is a blown fuse, remove it and replace it with a new one.

## **Emergency Towing**

Call a professional towing service if you need to tow your vehicle.

## **■** Flatbed equipment

The operator loads your vehicle on the back of a truck.

This is the best way to transport your vehicle.

## ■ Wheel lift equipment

The tow truck uses two pivoting arms that go under the front tyres and lift them off the ground. The rear tyres remain on the ground. **This is an acceptable way to tow your vehicle.** 

### Emergency Towing

#### NOTICE

Trying to lift or tow your vehicle by the bumpers will cause serious damage. The bumpers are not designed to support the vehicle's weight.

Make sure the parking brake is released. If you cannot release the parking brake, your vehicle must be transported by the flatbed equipment.

Parking Brake P. 491

#### NOTICE


Improper towing such as towing behind a motorhome or other motor vehicle can damage the transmission.

Never tow your vehicle with just a rope or chain. It is very dangerous since ropes or chains may shift from side to side or break.

## If You Cannot Unlock the Fuel Fill Door

## ■ What to Do If Unable to Unlock the Fuel Fill Door

If you cannot unlock the fuel fill door, use the following procedure.

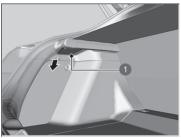

**1.** Open the hatch and remove the cover on the left side of luggage area.

Cover



Release Cord

- **2.** Pull the release cord toward you.
  - ► The release cord unlocks the fuel fill door when it is pulled.
- **3.** Open the fuel fill door.

How to Refuel P. 514


#### If You Cannot Unlock the Fuel Fill Door

After taking these steps, contact a dealer to have the vehicle checked.

## If You Cannot Open the Hatch


## ■ What to Do If Unable to Open the Hatch

If you cannot open the hatch, use the following procedure.

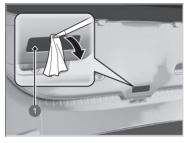

- **1.** Use a flat-tip screwdriver and remove the cover on the back of the hatch.
  - ➤ Wrap the flat-tip screwdriver with a cloth to prevent scratches.

Cover

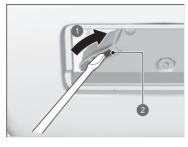

- Sliding
- 2 Lever

If You Cannot Open the Hatch

After taking these steps, contact a dealer to have your vehicle checked.

When you open the hatch from inside, make sure there is enough space around the hatch, and it does not hit anyone or any object.

**2.** To open the hatch, push the hatch while sliding the lever with the flat-tip screw driver.

# Information

This chapter includes your vehicle's specifications, locations of identification numbers, and other information required by regulation.

Specifications	642
Identification Numbers	
Vehicle Identification Number (VIN),	
<b>Engine Number and Transmission</b>	
Number	644
Devices that Emit Radio Waves*	645
<b>Declaration of Conformity Content</b>	
Outline*	689
Open Source Licence	
Meter Open Source Licence	
TCU Open Source Licence *	694

\* Not available on all models 641

## Specifications

## **■** Vehicle Specifications

Model Civic T		R
Curb Weight	1,405 – 1,448 kg (3,097 – 3,192 lbs)	
Maximum Permissible Weight	1,800 kg (	(3,968 lbs)
Maximum Permissible	Front	1,010 kg (2,227 lbs)
Axle Weight	Rear	800 kg (1,764 lbs)

## **■** Engine Specifications

Туре	Water-cooled in-line 4-cylinder DOHC	
Bore x Stroke	86.0 x 85.9 mm (3.4 x 3.4 in)	
Displacement	1,996 cm <sup>3</sup> (121.8 cu-in)	
Compression Ratio	9.8:1	
Spark Plugs	NGK ILZKAR8J8SY	

## **■** Fuel

Туре	Unleaded premium petrol/gasohol up to E10 (90% petrol and 10% ethanol), Research octane number 95 or higher
Fuel Tank Capacity	47.0 L (10.3lmp gal)

#### ■ Battery

Capacity	48Ah (5)/60Ah (20)
If you need to re	alled in this vehicle is specifically designed. eplace the battery, make sure to select the N2). Ask a dealer for more details.

## **■** Washer Fluid

## **■** Light Bulbs

Light Bulbs	
Headlights (Low Beam)	LED
Headlights (High Beam)	LED
Front Turn Signal Lights	LED
Position/Daytime Running Lights	LED
Side Turn Signal Lights (on Door Mirrors)	LED
Brake/Tail-lights	LED
Taillights	LED
Rear Turn Signal Lights	21 W (Amber)
Back-Up Lights	16 W
Rear Fog Light	LED
High-Mount Brake Light	LED
Rear Licence Plate Light	LED
Interior Lights	
Map Lights	LED
Ceiling Light	LED
Vanity Mirror Lights*	2 W
Centre Pocket Light	LED
Luggage Area Light	5 W
Glove Box Light	LED
Foot Lights	LED
Ambient Lights	LED

## ■ Air Conditioning\*

Refrigerant Type	HFO-1234yf (R-1234yf)
Chargo Quantity	435 - 485 g (15.3 - 17.1 oz)*1
Charge Quantity	445 – 495 g (15.7 - 17.5 oz)*2

<sup>\*1:</sup> Left-hand drive type \*2: Right-hand drive type

#### ■ Brake/Clutch Fluid

Specified Brake Fluid with DOT 3 or DOT 4	
---	--

#### ■ Manual Transmission Fluid

Specified	Honda MTF	
Capacity	Change	2.2 L (1.9 Imp qt)

## **■** Engine Oil

Recommended	Honda Engine Oil Type 2.0 Honda Genuine Motor Oil 0W-20 ACEA C2/C3/C5, 0W-20, 0W-30, 5W-30	
Capacity	Change	5.0 L (4.4 Imp qt)
	Change including filter 5.4 L (4.8 Imp qt)	

## **■** Engine Coolant

Specified	Honda All Season Antifreeze/Coolant Type 2
Ratio	50/50 with distilled water
Capacity	6.65 L (1.46 Imp gal) <sup>11</sup> (change including the remaining 0.75 L (0.17 Imp gal) in the reserve tank) 6.63 L (1.46 Imp gal) <sup>12</sup> (change including the remaining 0.75 L (0.17 Imp gal) in the reserve tank)

<sup>\*1:</sup> Left-hand drive type \*2: Right-hand drive type

#### ■ Tyre

Regular	Size	265/30ZR19 93Y
	Pressure	See the label on driver's doorjamb
Compact	Size	T125/70R18 99M
Compact Spare*	Pressure	See the label on driver's doorjamb
Wheel Size	Regular	19 x 9 1/2J
	Compact Spare*	18 × 4T
	Cumpact Spare	10 X 41

## ■ Honda TRK Air Compressor

A weighted emission sound pressure level	81 dB (A)
A weighted sound power level	90 dB (A)

#### ■ Brake

Туре	Power assisted
Front	Ventilated disc
Rear	Solid disc
Parking	Electric Parking Brake

## **■** Vehicle Dimensions


Length		4,594 mm (180.9 in)
Width		1,890 mm (74.4 in)
Height		1,401 mm (55.1 in)
Wheelbase		2,734 mm (107.6 in)
Track	Front	1,624 mm*1 (63.9 in) 1,625 mm*2 (64.0 in)
	Rear	1,623 mm (63.9 in)

<sup>\*1:</sup> Models without navigation system \*2: Models with navigation system

## **Identification Numbers**

# Vehicle Identification Number (VIN), Engine Number and Transmission Number

Your vehicle has a 17-digit vehicle identification number (VIN) used to register your vehicle for warranty purposes, and for licensing and insuring your vehicle. The locations of your vehicle's VIN, engine number and transmission number are shown as follows

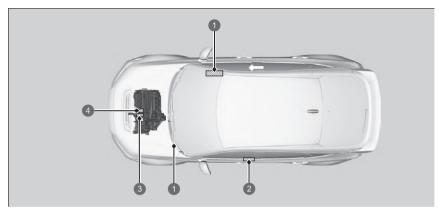


- 1 Vehicle Identification Number
- 2 Certification Label/Vehicle Identification Number/Engine Number
- Manual Transmission Number
- 4 Engine Number

➤ Vehicle Identification Number (VIN), Engine Number and Transmission Number

The interior vehicle identification number (VIN) is located under the cover.



Cover

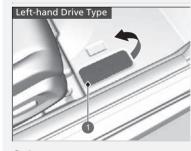

Cover

## **Devices that Emit Radio Waves\***

The following products and systems on your vehicle emit radio waves when in operation.

European except British, Moldova and Serbian models

## BCM

## **Keyless Access System**

http://continental-homologation.com/honda



Hereby, Continental Automotive GmbH declares that this model [41580430] is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU.

The full text of the EU declaration of conformity is available at the

following internet address:

https://continental-homologation.com/honda

Instructions and safety information:

Short range device for remote control

Postal address:

Siemensstrasse 12

D-93055 Regensburg

Germany

Manufacturer name:

Continental Automotive GmbH

Frequency band: 125KHz

Maximum transmitted output: 10mW

Importer Name:

Honda Motor Europe Ltd - Aalst Office

Postal address:

Wijngaardveld 1 (Noord V) 9300 Aalst - Belgium

\* Not available on all models

## European except British, Moldova and Serbian models

#### FOB

## **Keyless Access System**

http://continental-homologation.com/honda



Hereby, Continental Automotive GmbH declares that this model [TP\_4] is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU.

The full text of the EU declaration of conformity is available at the following internet address:

https://continental-homologation.com/honda

Instructions and safety information:

Short range device for remote control

Postal address:

Siemensstrasse 12

D-93055 Regensburg

Germany

Manufacturer name:

Continental Automotive GmbH Frequency band: 433.92MHz

Maximum transmitted output: 1mW

Importer Name:

Honda Motor Europe Ltd - Aalst Office

Postal address:

Wijngaardveld 1 (Noord V) 9300 Aalst - Belgium

# Hands-Free Telephone System Display Audio

http://www.ptc.panasonic.eu/



Hereby, Panasonic Corporation declares that the radio equipment type Listed above is in compliance with Directive 2014/53/EU. Access to http://www.ptc.panasonic.eu/,click ""Declaration of Conformity"", enter the below Keyword into the keyword search box, you can download the latest ""DECLARATION of CONFORMITY"" (DoC). Keyword::

Model No.Keyword [ \* ]

CL-MH------, CA-9H------, CL-MH1CEOTT, CL-MH1AXYTT, CL-MH1BX1JT, CL-MH1AE6JT, CL-MH1AE0JT, CL-MH1AE2JT, CL-MH1AE7JT, CL-MH

You can see "Ref No" in unit label.

Intended use: Car Audio System (Bluetooth and WLAN)

Postal address: 4261 Ikonobe-cho. Tsuzuki-ku. Yokohama-shi. Kanagawa-ken. 224-8520. Japan

Manufacturer name: Panasonic Corporation

Specifications of Bluetooth

Frequency band: 2402 - 2480 MHz

Specifications of 2.4GHz WLAN

Frequency band: 2412 - 2472 MHz

Specifications of Bluetooth

Maximum output power: 0.1 dBm Specifications of 2.4GHz WLAN Maximum output power: 11.9 dBm

Importer Name: Honda Motor Europe Ltd - Aalst Office

Postal address:

Wijngaardveld 1 (Noord V) 9300 Aalst - Belgium

\* Not available on all models

# Blind spot information System\*/Cross Traffic Monitor\*

https://www.veoneer.com/en/regulatory



Hereby, Veoneer US, Inc. declares that the object of the declaration described above is in conformity with the relevant Union harmonisation legislation.

https://www.veoneer.com/en/regulatory

Intended use:

24 GHz Short Range Radar Sensor

Postal address:

26545 American Drive Southfield, Michigan, 48034 United States of America

Operational frequency band:

24.05 - 24.25 GHz

Maximum Output Power:

13 dBm peak

Importer Name:

Honda Motor Europe LTD. - Aalst Office

Postal address:

#### **Telematics Control Unit**

https://www.denso.com/global/en/contact-us/doc/



Hereby, DENSO CORPORATION declares that the radio equipment type is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address:

https://www.denso.com/global/en/contact-us/doc/

Intended use:

Telematics and Wi-Fi Hotspot device for Vehicle

Postal address:

1-1, Showa-cho, Kariya-shi, Aichi-ken, 448-8661, Japan

Model:

OGEY10

Operational frequency band:

1) GSM900 (Tx: 880-915 MHz, Rx: 925-960 MHz) 2) GSM1800 (Tx: 1710-1785 MHz, Rx: 1805-1880 MHz) 3) WCDMA Band1 (Tx: 1920-1980MHz, Rx: 2110-2170 MHz) 4) WCDMA Band3 (Tx: 1710-1785 MHz, Rx: 1805-1880 MHz) 5) WCDMA Band8 (Tx: 880-915 MHz, Rx: 925-960 MHz) 6) LTE Band1 (Tx: 1920-1980MHz, Rx: 2110-2170 MHz) 7) LTE Band3 (Tx: 1710-1785 MHz, Rx: 1805-1880 MHz) 8) LTE Band7 (Tx: 2500-2570 MHz, Rx: 2620-2690 MHz) 9) LTE Band8 (Tx: 880-915 MHz, Rx: 925-960 MHz) 10) LTE Band20 (Tx: 832-862 MHz, Rx: 791-821 MHz) 11) WLAN IEEE802.11b (Tx/Rx: 2401-2473 MHz) 12) WLAN IEEE802.11g (Tx/Rx: 2402-2472 MHz) 13) WLAN IEEE802.11n (Tx/Rx: 2402-2472 MHz) 14) GPS (Rx: 1575.42 MHz) 15) GALILEO (Rx: 1575.42 MHz) 16) EGNOS (Rx: 1575.42 MHz) Maximum Output Power:

1) 2 W 2) 1 W 3-5) 0.25 W 6)-10) 0.20 W 11) 0.032 W 12),13) 0.016 W

Importer Name:

Honda Motor Europe Ltd - Aalst Office

Postal address:

## Bluetooth Unit\*

https://continental-homologation.com/honda



Hereby, Continental declares that the radio equipment type A2C192350/ A2C192351 is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address:

Intended use:

Vehicle Access System

Postal address:

Continental Automotive GmbH

Siemensstraße 12, D-93055 Regensburg, Germany

BLE frequency range:

2.402GHz to 2.48GHz

**BLE Maximum Output Power:** 

+20dBm

Importer Name:

Honda Motor Europe Ltd - Aalst Office

Postal address:

# Wireless Charger

https://www.lg.com/global/support/cedoc/cedoc



Hereby, LG Electronics Inc. declares that the radio equipment type WC500HOCI21 is in compliance with Directive 2014/53/EU.

The full text of the EU declaration of conformity is available at the following internet address:

Intended use:

Wireless Power Charger for vehicle

Operational frequency band:

75kHz~118.320kHz

Maximum output power:

15W

Importer name:

Honda Motor Europe Ltd - Aalst Office

Postal address;

# Wireless Charger

http://bhevs.co.kr/bbs/board.php?tbl=e\_bbs42\_2

Hereby, BH EVS Co., Ltd. declares that the radio equipment type WC500HOCI21 is in compliance with Directive 2014/53/EU.

The full text of the EU declaration of conformity is available at the following internet address:

http://bhevs.co.kr/bbs/board.php?tbl=e\_bbs42\_2

Intended use:

Wireless Power Charger for vehicle

Postal address: Am Kronberger Hang 2 65824 Schwalbach am Taunus Germany

Manufacturer name: BH EVS Co.,Ltd.

Operational frequency band:

111kHz

Maximum output power:

42dBuA/m @10m

Importer name:

Honda Motor Europe Ltd - Aalst Office

Postal address:

## Remote Tuner

http://www.ptc.panasonic.eu/



Hereby, Panasonic Corporation declares that the radio equipment type Listed above is in compliance with Directive 2014/53/EU. Access to http://www.ptc.panasonic.eu/,click "Declaration of Conformity", enter the below Keyword into the keyword search box, you can download the latest "DECLARATION of CONFORMITY" (DoC). Keyword: Model No.

Keyword: [CQ-TH1BE0AJ, CQ-TH1BE1AJ, CQ-TH1AE0TT]

You can see "Ref No" in unit label.

Intended use:

RADIO UNIT (Car radio tuner)

Postal Address:

4261 Ikonobe-cho, Tsuzuki-ku, Yokohama-shi, Kanagawa-ken, 224-8520, Japan

Importer name:

Honda Motor Europe Ltd - Aalst Office

Postal address;

66dBuA/m at 10m

Postal address:

Importer Name: Honda Motor Europe Ltd.

Cain Road, Bracknell, Berkshire, RG12 1HL, United Kingdom

BCM	FOB
Keyless Access System	Keyless Remote
http://continental-homologation.com/honda	http://continental-homologation.com/honda
UK	UK
CA	CA
Hereby, Continental Automotive GmbH declares that this model	'Hereby, Continental Automotive GmbH declares that this model
[41580430] is in compliance with the essential requirements and	[TP_4] is in compliance with the essential requirements and other
other relevant provisions of Radio Equipment Regulations 2017.	relevant provisions of Radio Equipment Regulations 2017.
The full text of the UK declaration of conformity is available at the	The full text of the UK declaration of conformity is available at the
following internet address:	following internet address:
http://continental-homologation.com/honda	http://continental-homologation.com/honda
Instructions and safety information:	Instructions and safety information:
Short range device for remote control	Short range device for remote control
Postal address:	Postal address:
Continental Automotive GmbH	Continental Automotive GmbH
Siemensstrasse 12	Siemensstrasse 12
D-93055 Regensburg	D-93055 Regensburg
Germany	Germany
Frequency band;	Frequency band;
125kHz +/- 3kHz	433.66MHz +/- 16kHz
Maximum transmitted output;	434.18MHz +/- 16kHz

1mW

Postal address:

Maximum transmitted output;

Importer Name: Honda Motor Europe Ltd.

## Hands-Free Telephone System Display Audio

http://www.ptc.panasonic.eu/



Hereby. Panasonic Corporation declares that the radio equipment type [\*] is in compliance with The Radio Equipment Regulations 2017. The full text of the UK declaration of conformity is available at the following internet address:

https://www.ptc.panasonic.eu/

enter the below Keyword into the keyword search box, you can download the latest "DECLARATION of CONFORMITY" (DoC).

Model No. Keyword [ \* ] CL-MH-----. CA-9H-----.

CL-MH1BX1JT.CL-MH1AE6JT.CL-MH1AE0JT.CL-MH1AE2JT

You can see "Ref No" in unit label

Intended use: Car Audio System (Bluetooth and WLAN)

Postal address: 4261 Ikonobe-cho, Tsuzuki-ku, Yokohama-shi, Kanagawa-ken, 224-8520, Japan

Manufacturer name: Panasonic Corporation

Specifications of Bluetooth

Frequency band: 2402 - 2480 MHz Specifications of 2.4GHz WLAN Frequency band: 2412 - 2472 MHz

Specifications of Bluetooth

Maximum output power: 0.1 dBm Specifications of 2.4GHz WLAN Maximum output power: 11.9 dBm Importer Name: Honda Motor Europe Ltd.

Postal address:

# Blind spot information System\*/Cross Traffic Monitor\*

https://www.veoneer.com/en/regulatory



Hereby, Veoneer US, Inc. declares that the object of the declaration described above is in conformity with the relevant Union harmonisation legislation.

https://www.veoneer.com/en/regulatory

Intended use:

24 GHz Short Range Radar Sensor

Postal address:

26545 American Drive Southfield, Michigan, 48034 United States of America

Operational frequency band:

24.05 - 24.25 GHz

Maximum Output Power:

13 dBm peak

Importer Name:

Honda Motor Europe Ltd.

Postal address:

657

#### British models

## **Telematics Control Unit**

https://www.denso.com/global/en/contact-us/doc/



Hereby, DENSO CORPORATION declares that the radio equipment type is in compliance with the relevant statutory requirements.

The full text of the UK declaration of conformity is available at the following internet address:

https://www.denso.com/global/en/contact-us/doc/

Intended use:

Telematics and Wi-Fi Hotspot device for Vehicle

Postal address:

1-1, Showa-cho, Kariya-shi, Aichi-ken, 448-8661, Japan

Model:

OGFY10

Operational frequency band:

1) GSM900 (Tx: 880-915 MHz, Rx: 925-960 MHz) 2) GSM1800 (Tx: 1710-1785 MHz, Rx: 1805-1880 MHz) 3) WCDMA Band1 (Tx: 1920-1980MHz, Rx: 2110-2170 MHz) 4) WCDMA Band3 (Tx: 1710-1785 MHz, Rx: 1805-1880 MHz) 5) WCDMA Band8 (Tx: 880-915 MHz, Rx: 925-960 MHz) 6) LTE Band1 (Tx: 1920-1980MHz, Rx: 2110-2170 MHz) 7) LTE Band3 (Tx: 1710-1785 MHz, Rx: 1805-1880 MHz) 8) LTE Band7 (Tx: 2500-2570 MHz, Rx: 2620-2690 MHz) 9) LTE Band8 (Tx: 880-915 MHz, Rx: 925-960 MHz) 10) LTE Band20 (Tx: 832-862 MHz, Rx: 791-821 MHz) 11) WLAN IEEE802.11b (Tx/Rx: 2401-2473 MHz) 12) WLAN IEEE802.11g (Tx/Rx: 2402-2472 MHz) 13) WLAN IEEE802.11n (Tx/Rx: 2402-2472 MHz) 14) GPS (Rx: 1575.42 MHz) 15) GALILEO (Rx: 1575.42 MHz) 16) EGNOS (Rx: 1575.42 MHz)

Maximum Output Power:

1) 2 W 2) 1 W 3-5) 0.25 W 6)-10) 0.20 W 11) 0.032 W 12),13) 0.016 W

Importer Name:

Honda Motor Europe Ltd.

Postal address:

## Bluetooth Unit\*

https://continental-homologation.com/honda



Hereby, Continental Automotive GmbH declares that this model [A2C775684] is in compliance with the essential requirements and other relevant provisions of Radio Equipment Regulations 2017.

The full text of the UK declaration of conformity is available at the following internet address:

http://continental-homologation.com/honda

Intended use:

Control Unit

Postal address:

Continental Automotive GmbH

Siemensstraße 12, D-93055 Regensburg, Germany

BLE frequency range:

2.402GHz to 2.48GHz

**BLE Maximum Output Power:** 

+20dBm

Importer Name:

Honda Motor Europe Ltd.

Postal address:

## Remote Tuner

http://www.ptc.panasonic.eu/



Hereby, Panasonic Corporation declares that the radio equipment type [ \* ] is in compliance with The Radio Equipment Regulations 2017.

The full text of the UK declaration of conformity is available at the following internet address:

https://www.ptc.panasonic.eu/

enter the below Keyword into the keyword search box, you can download the

latest "DECLARATION of CONFORMITY" (DoC).

Keyword: Model No.

Keyword: [CQ-TH1BE0AJ, CQ-TH1BE1AJ, CQ-TH1AE0TT]

You can see "Ref No" in unit label.

Intended use:

RADIO UNIT (Car radio tuner)

Postal Address:

4261 Ikonobe-cho, Tsuzuki-ku, Yokohama-shi, Kanagawa-ken, 224-8520, Japan

Importer name:

Honda Motor Europe Ltd

Postal address:

# Wireless Charger

https://www.lg.com/global/support/cedoc/cedoc (Input the model name : WC500HOCl21)



Hereby, LG Electronics declares that the radio equipment type wireless charger is in compliance with the relevant statutory requirements. The full text of the UK declaration of conformity is available at the following internet address: http://www.lg.com/global/support/cedoc/cedoc/

Intended use:

Wireless Power Charger for vehicle

Postal Address:

128, Yeoui-daero, Yeongdeungpo-gu, Seoul, Korea

Operational frequency band:

111kHz/max power: 42dBuA/m @10m

Maximum Output Power:

111kHz/max power: 42dBuA/m@10m

Importer name:

Honda Motor Europe Ltd

Postal address:

## Wireless Charger

http://bhevs.co.kr/bbs/board.php?tbl=e\_bbs42\_2

Hereby, BH EVS Co.,Ltd. declares that the radio equipment type WC500HOCI21 is in compliance with the Radio Equipment Regulations 2017. The full text of the declaration of conformity is available at the following internet address:

http://bhevs.co.kr/bbs/board.php?tbl=e\_bbs42\_2

Intended use:

Wireless Power Charger for vehicle

Postal address: Am Kronberger Hang 2 65824 Schwalbach am Taunus Germany

Manufacturer name: BH EVS Co.,Ltd.

Operational frequency band:

111kHz

Maximum output power:

42dBuA/m @10m

Importer name:

Honda Motor Europe Ltd

Postal address;

# BCM Keyless Access System

http://continental-homologation.com/honda



Hereby, Continental Automotive GmbH declares that this model [41580430] is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU.

The full text of the EU declaration of conformity is available at the following internet address:

https://continental-homologation.com/honda

Instructions and safety information:

Short range device for remote control

Postal address:

Siemensstrasse 12

D-93055 Regensburg

Germany

Manufacturer name:

Continental Automotive GmbH

Frequency band: 125KHz

Maximum transmitted output: 10mW

Importer Name:

Honda Motor Europe Ltd - Aalst Office

Postal address:



# FOB Keyless Access System

http://continental-homologation.com/honda



Hereby, Continental Automotive GmbH declares that this model [TP\_4] is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU.

The full text of the EU declaration of conformity is available at the following internet address:

https://continental-homologation.com/honda

Instructions and safety information:

Short range device for remote control

Postal address:

Siemensstrasse 12

D-93055 Regensburg

Germany

Manufacturer name:

Continental Automotive GmbH

Frequency band: 433.92MHz

Maximum transmitted output: 1mW

Importer Name:

Honda Motor Europe Ltd - Aalst Office

Postal address:



# Hands-Free Telephone System Display Audio

http://www.ptc.panasonic.eu/



Prin prezenta, Panasonic Corporation declară că echipamentul radio de tipul enumerat mai sus este în conformitate cu Directiva 2014/53/UE.

Accesați http://www.ptc.panasonic.eu/, faceți clic pe "Declaration of Conformity (Declarația de conformitate)",

introduceți cuvântul cheie de mai jos în caseta de căutare după cuvinte cheie și puteți să descărcați

cea mai recentă "DECLARATION of CONFORMITY (DECLARATIE DE CONFORMITATE)" (DoC).

Prin prezenta, Panasonic corporație declară că tipul de echipamente radio [\*] este în conformitate cu Reglementarea tehnică "Punerea la dispoziție pe piață a echipamentelor radio".

Textul integral al declarației de conformitate este disponibil la următoarea adresă de Internet:https://service.panasonic.ua

Cuvânt cheie: [\*]

CL-MH1CEOTT,CL-MH1AXYTT,CL-MH1BX1JT,CL-MH1AE6JT,CL-MH1AE6JT,CL-MH1AE6JT,CL-MH1AE6JT,CL-MH1AE6JT,CL-MH1AE6JT,CL-MH1AE7JT,CL-MH1

Puteți vedea "Nr. ref" pe eticheta unității.

Intended use: Car Audio System (Bluetooth and WLAN)

Postal address: 4261 Ikonobe-cho, Tsuzuki-ku, Yokohama-shi, Kanagawa-ken, 224-8520, Japan

Manufacturer name: Panasonic Corporation

Specifications of Bluetooth

Frequency band: 2402 - 2480 MHz Specifications of 2.4GHz WLAN Frequency band: 2412 - 2472 MHz

Specifications of Bluetooth

Maximum output power: 0.1 dBm Specifications of 2.4GHz WLAN Maximum output power: 11.9 dBm

Importer Name: Honda Motor Europe Ltd - Aalst Office

Postal address:

# Blind spot information System\*/Cross Traffic Monitor\*

https://www.veoneer.com/en/regulatory



Declarație Simplificată de Conformitate

Prin prezenta, Veoneer US, LLC declară că tipul de echipament radio NB24G175V3 este în conformitate cu Reglementările tehnice "Punerea la dispoziție pe piață a echipamentelor radio" .

Textul integral al declarației de conformitate este disponibil la următoarea adresă de internet:

https://www.veoneer.com/en/regulatory

Intended use:

24 GHz Short Range Radar Sensor

Postal address:

26545 American Drive Southfield, Michigan, 48034 United States of America

Operational frequency band:

24.05 - 24.25 GHz

Maximum Output Power:

13 dBm peak

Importer Name:

Honda Motor Europe LTD. - Aalst Office

Postal address:

#### **Telematics Control Unit**

https://www.denso.com/global/en/contact-us/doc/



Prin prezenta, DENSO CORPORATION declară că tipul de echipamente radio este în conformitate cu Reglementarea tehnică "Punerea la dispoziție pe piață a echipamentelor radio".

Textul integral al declaratiei de conformitate este disponibil la următoarea adresă de Internet:

https://www.denso.com/global/en/contact-us/doc/

Intended use:

Telematics and Wi-Fi Hotspot device for Vehicle

Postal address:

1-1, Showa-cho, Kariya-shi, Aichi-ken, 448-8661, Japan

Model:

OGEY10

Operational frequency band:

1) GSM900 (Tx: 880-915 MHz, Rx: 925-960 MHz) 2) GSM1800 (Tx: 1710-1785 MHz, Rx: 1805-1880 MHz) 3) WCDMA Band1 (Tx: 1920-1980MHz, Rx: 2110-2170 MHz) 4) WCDMA Band3 (Tx: 1710-1785 MHz, Rx: 1805-1880 MHz) 5) WCDMA Band8 (Tx: 880-915 MHz, Rx: 925-960 MHz) 6) LTE Band1 (Tx: 1920-1980MHz, Rx: 2110-2170 MHz) 7) LTE Band3 (Tx: 1710-1785 MHz, Rx: 1805-1880 MHz) 8) LTE Band7 (Tx: 2500-2570 MHz, Rx: 2620-2690 MHz) 9) LTE Band8 (Tx: 880-915 MHz, Rx: 925-960 MHz) 10) LTE Band20 (Tx: 832-862 MHz, Rx: 791-821 MHz) 11) WLAN IEEE802.11b (Tx/Rx: 2401-2473 MHz) 12) WLAN IEEE802.11g (Tx/Rx: 2402-2472 MHz) 13) WLAN IEEE802.11n (Tx/Rx: 2402-2472 MHz) 14) GPS (Rx: 1575.42 MHz) 15) GALILEO (Rx: 1575.42 MHz) 16) EGNOS (Rx: 1575.42 MHz) Maximum Output Power:

1) 2 W 2) 1 W 3-5) 0.25 W 6)-10) 0.20 W 11) 0.032 W 12),13) 0.016 W

Importer Name:

Honda Motor Europe Ltd - Aalst Office

Postal address:

## Bluetooth Unit\*

https://continental-homologation.com/honda



Hereby, Continental declares that the radio equipment type A2C192350/ A2C192351 is in compliance with Directive MD OC TIP 024 A6920-20. The full text of the EU declaration of conformity is available at the following internet address:

Intended use:

Vehicle Access System

Postal address:

Continental Automotive GmbH

Siemensstraße 12, D-93055 Regensburg, Germany

BLE frequency range:

2.402GHz to 2.48GHz

BLE Maximum Output Power:

+20dBm

Importer Name:

Honda Motor Europe Ltd - Aalst Office

Postal address:

# Wireless Charger

https://www.lg.com/global/support/cedoc/cedoc



Intended use:

Wireless Power Charger for vehicle

Operational frequency band:

75kHz~118.320kHz

Maximum output power:

15W

Honda Motor Europe Ltd - Aalst Office

Postal address;

## Wireless Charger



Declaratia de conformitate nr. wexsescen-assassa

#### DECLARAȚIA DE CONFORMITATE

Echipamentul radio:
 Modelul de aparat/Produsul Wireless Power Charger
Tipul, lotul sau numarul de serie WC500HOCI21

2. Denumirea producătorului (sau a reprezentantului sau autorizat): LG Electronics Inc.

Adresa producătorului (sau a reprezentantului autorizat): 10, Magokjungang 10-ro, Gangseo-gu, Seoul Korea

- 3. Prezenta declarație de conformitate este emisă pe propria răspundere a producătorului.
- Obiectul declarației (identificarea echipamentelor radio permitind trasabilitatea; poate include o imagine color, suficient de clară în cazul în care acest lucru este necesar pentru identificarea echipamentelor radio);



This is wireless charger for charging phone with wireless charging function. This unit have a wireless charging function as coil, bracket, circuit

 Obiectul declarației descris mai sus este în conformitate cu Reglementarea Tehnică "Punerea la dispoziție pe piață a echipamentelor radio", aprobată prin HG nr. 34 din 30 01 2019. 6. Referințele standardelor armonizate relevante folosite sau referințele la alte specificații tehnice, în legătură cu care se declară conformitatea. Referințele sunt enumerate împreună cu munerete de identificare și cu versinuea acestora, precum și cu data emiterii după caz :

SM EN 301 489-1 V1.9.2:2014; SM EN 62368-1:2015.

7. Organismul de evaluare a conformității produselor notificat/recunoscut:

Organismul de Certificare a produselor din Telecomunicații, Informatică și Poștă "OC TIP" din cadrul I.P. "Serviciul Naţional de Management al Frecvențelor Radio", acreditat CNA RM "MOLDAC", munărul OCpr-024, notificat/recunoscut de către Ministerul Economiei și Infrastructurii al Republicii Moldova a efectuat evaluare conformității produsului menționat în conformitate cu modulul B al Reglementării Tehnice aprobate prin HG Nr. 34/2019 și a emis Certificatul de Examinare de TIP nr. MD OC TIP 024 CET7148-21 din data 06 mai 2021

 Versiunea Software, Versiunea Hardware, descrierea accesoriilor şi componentelor care permit echipamentului radio declarat să fiincționeze conform destinației şi care sunt incluse în declarația de conformitate:

Software version: v4.5

Hardware Version: v1.4

9. Informații suplimentare:

Semnat pentru și în numele: LG Electronics

sumere: Gyoung sae riun

Funcția: Professional

Semnătura:

Locul emiterii: korea

Numele: Gyoung Jae Huh

Data: 2022-04-26

# Wireless Charger

http://bhevs.co.kr/bbs/board.php?tbl=e\_bbs42\_2

Prin prezenta, BH EVS Co.,Ltd. declară că tipul de echipamente radio WC500HOCl21 este în conformitate cu Reglementarea tehnică "Punerea la dispoziție pe piață a echipamentelor radio".

Textul integral al declarației de conformitate este disponibil la următoarea adresă de Internet:

http://bhevs.co.kr/bbs/board.php?tbl=e bbs42 2

Intended use:

Wireless Power Charger for vehicle

Postal address: Am Kronberger Hang 2 65824 Schwalbach am Taunus Germany

Manufacturer name: BH EVS Co.,Ltd.

Operational frequency band:

111kHz

Maximum output power:

42dBuA/m @10m

Importer name:

Honda Motor Europe Ltd - Aalst Office

Postal address:

## Remote Tuner

https://service.panasonic.ua



Prin prezenta, Panasonic corporație declară că tipul de echipamente radio [CQ-TH1BE1AJ] este în conformitate cu Reglementarea tehnică "Punerea la dispoziție pe piață a echipamentelor radio". Textul integral al declarației de conformitate este disponibil la următoarea adresă de Internet:https://service.panasonic.ua

Intended use:

RADIO UNIT (Car radio tuner)

Postal Address:

4261 Ikonobe-cho, Tsuzuki-ku, Yokohama-shi, Kanagawa-ken, 224-8520, Japan


Importer name:

Honda Motor Europe Ltd - Aalst Office

Postal address;

# BCM FOB Keyless Access System Keyless Access System



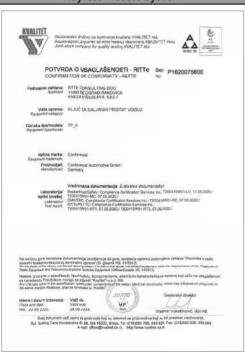

## Hands-Free Telephone System

# Blind spot information System\*/Cross Traffic Monitor\*

#### **Panasonic** FU Declaration of Conformity Name Panasonic Constation Address 4261 Konabe-cho, Taspuki-ku, Yokohama-shi, Kanagawa-kan, 224-6520, Japan CAR AUTHOUSET ASSY THE Product Name Tracks Name Panasmit CU-MINIAEDIT, CU-MINIAEDIT, CU-MINIAEDIT; CU-MINIAEDIT; CU-MINIAEDIT CUMPLIARRY, CLAMMIARRY, CLAMMIARYY, CLAMMIRROY, CLAMMIRROY CL-MH4BE31T, CL-MH4BE21T, CL-MH4BE31T, CL-MH4BE41T, CL-MH4BE31T Model ID AH2001 CE Resultements This declaration of conformity is issued under the sole reopossibility of the manufacturer. The object of the declaration decorbed above is in conformits with the requirements of the following EU legislation and harmonized standards: Council Directive 2014/52/60 485 Applicable Standards ... EN 62368-1 2014 +A11 2017 EN 301 488-1 V2.1.1 2017 EN 301 488-3 V2.1.1 2017 EN 901 489-17 VS.1.1:2017 EN 901 489-19 VZ.1.0:2017 EN 300 328 VT 7 2 2003 EW 300 440 VZ 3.1:205 MICOM Labs Inc., Notified Body Number 2250, performed assessment of the tests and the technical documentation provided by the applicant with the assertial requirements of the RID 2014/53/EU, and bussed EU PYCE EUANHARDON CERTIFACTE DERDIG 2,15 Apr 2021, Plav C. Notified Sody Additional information & Ollham 24.Jun.2021 N. Gidnon Date of Issue / Signature Niels Erdmann Osamu Ishikawa / manage Printed Name / Title Authorised Representative - Authorised Representative -Panasonic Testing Cantra, Panasonic Marketing Europe Grobin Winsbergring 15, 22525 Handung, Germany



\* Not available on all models

# **Telematics Control Unit**

Овиме, DENSO CORPORATION изјављује да је радио опрема тип усаглашена са Директивом 2014/53/EU. Цео текст ЕУ декларације о усаглашености доступам је на следећој интернет адреси: https://www.denso.com/global/en/contact-us/doc/

# Wireless Charger






## Bluetooth Unit\*



# Israeli models

BCM	FOB
Keyless Access System	Keyless Access System
"מספר אישור התאמה מטעם משרד התקשורת: "Certification NO. 51-74423	"מספר אישור התאמה מטעם משרד התקשורת: "Certification NO. 51-74074
חל איסור לבצע פעולות במכשיר שיש בהן כדי לשנות את תכונותיו האלחוטיות של המכשיר, ובכלל זה שינויי תוכנה, החלפת אנטנה מקורית או הוספת	חל איסור לבצע פעולות במכשיר שיש בהן כדי לשנות את תכונותיו האלחוטיות של המכשיר, ובכלל זה שינויי תוכנה, החלפת אנטנה מקורית או הוספת
ארוונפטר, ובצריה באלה היינונית, בלא קבלת אישור משר ד אפשרות לחבור לאנטנה חיצונית, בלא קבלת אישור משר ד התקשורת, בשל החשש להפרעות אלחוטיות	אפשרות לחיבור לאנטנה חיצונית, בלא קבלת אישור משר ד התקשורת, בשל החשש להפרעות אלחוטיות

#### Israeli models

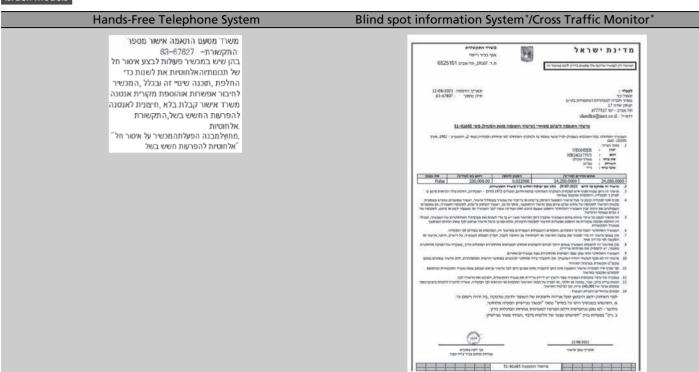

## Israeli models

# Wireless Charger

מספר אישור התאמה מטעם משרד התקשורת: 55-13657
 מל איסור לבגע פעולות במכשיר שיש בהן כדי לשגות את תכונותיו האלחוטיות של חמכשיר, ובכלל זח שינויי תוכנה, החלפת אנסנה מקורית או הוספת אפשרות לחיבור לאגטנה חיצונית. בלא פבלת אישור משרד התקשורת, בשל החשש להפרעות אלחוטיות.

55-13915

## Turkish models

# BCM Keyless Access System



Instructions and safety information:

Short range device for remote control

Postal address:

Siemensstrasse 12

D-93055 Regensburg

Germany

Manufacturer name:

Continental Automotive GmbH

Frequency band: 125KHz

Maximum transmitted output: 10mW

Importer Name:

HONDA TÜRKİYE A.Ş.

Postal address:

Sanayi Cad. No:1, Aydınevler 34854 Maltepe/İstanbul



## Turkish models

# FOB Keyless Access System

(

Instructions and safety information:

Short range device for remote control

Postal address:

Siemensstrasse 12

D-93055 Regensburg

Germany

Manufacturer name:

Continental Automotive GmbH

Frequency band: 433.92MHz

Maximum transmitted output: 1mW

Importer Name:

HONDA TÜRKİYE A.Ş.

Postal address:

Sanayi Cad. No:1, Aydınevler 34854 Maltepe/İstanbul



#### Turkish models

# Hands-Free Telephone System Display Audio

http://www.ptc.panasonic.eu/



Hereby, Panasonic Corporation declares that the radio equipment type Listed above is in compliance with Directive 2014/53/EU. Access to http://www.ptc.panasonic.eu/,click ""Declaration of Conformity"", enter the below Keyword into the keyword search box, you can download the latest ""DECLARATION of CONFORMITY"" (DoC).Keyword::

Model No.Keyword [ \* ]

CL-MH------, CA-9H------, CL-MH1CEOTT, CL-MH1AXYTT, CL-MH1BX1JT, CL-MH1AE6JT, CL-MH1AE0JT, CL-MH1AE2JT, CL-MH1AE7JT, CL-MH

You can see "Ref No" in unit label

Intended use: Car Audio System (Bluetooth and WLAN)

Postal address: 4261 Ikonobe-cho, Tsuzuki-ku, Yokohama-shi, Kanagawa-ken, 224-8520, Japan

Manufacturer name: Panasonic Corporation

Specifications of Bluetooth

Frequency band: 2402 - 2480 MHz Specifications of 2.4GHz WLAN Frequency band: 2412 - 2472 MHz

Specifications of Bluetooth Maximum output power: 0.1 dBm Specifications of 2.4GHz WLAN Maximum output power: 11.9 dBm

Importer Name: HONDA MOTOR EUROPE LTD.

HONDA TÜRKİYE A.Ş.

Postal address:

Sanayi Cad. No:1, Aydınevler 34854 Maltepe/İstanbul

\* Not available on all models

683

### Turkish models

## Blind spot information System\*/Cross Traffic Monitor\*

https://www.veoneer.com/en/regulatory



Hereby, Veoneer US, Inc. declares that the object of the declaration described above is in conformity with the relevant Union harmonisation legislation.

https://www.veoneer.com/en/regulatory

Intended use:

24 GHz Short Range Radar Sensor

Postal address:

26545 American Drive Southfield, Michigan, 48034 United States of America

Operational frequency band:

24.05 - 24.25 GHz

Maximum Output Power:

13 dBm peak

Importer Name:

HONDA TÜRKİYE A.Ş.

Postal address:

Sanayi Cad. No:1, Aydınevler 34854 Maltepe/İstanbul

\* Not available on all models

## Emergency Call (eCall)

https://www.denso.com/global/en/contact-us/doc/



Hereby, DENSO CORPORATION declares that the radio equipment type is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: https://www.denso.com/global/en/contact-us/doc/

İsbu belge: DENSO CORPORATION telsiz ekipmanı tipinin 2014/53/AB sayılı Direktif'e uvgun olduğunu beyan eder.

AB uygunluk beyanının tam metni asağıdaki internet adresinde mevcuttur:

https://www.denso.com/global/en/contact-us/doc/

Intended use:

ECALL device for Vehicle

Postal address:

1-1. Showa-cho, Kariya-shi, Aichi-ken, 448-8661, Japan

Model:

OGFY23

Operation frequency:

1) GSM900 (Tx: 880-915 MHz, Rx: 925-960 MHz)

2) GSM1800 (Tx: 1710-1785 MHz, Rx: 1805-1880 MHz)

3) WCDMA Band1 (Tx: 1920-1980MHz, Rx: 2110-2170 MHz) 4) WCDMA Band8 (Tx: 880-915 MHz, Rx: 925-960 MHz)

5) GPS (Rx: 1575.42 MHz)

6) GALILEO (Rx: 1575.42 MHz) 7) GLONASS(RX: 1601.709 MHz)

8) EGNOS (Rx: 1575.42 MHz) Maximum Output Power:

1) 2 W 2) 1 W 3,4) 0.25 W

Importer Name:

Honda Motor Europe Ltd - Aalst Office

HONDA TÜRKİYE A.S.

Postal address:

Sanavi Cad. No:1, Avdinevler 34854 Maltepe/ İstanbul

### Bluetooth Unit\*

https://continental-homologation.com/honda



Hereby, Continental declares that the radio equipment type A2C192350/ A2C192351 is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address:

Intended use:

Vehicle Access System

Postal address:

Continental Automotive GmbH

Siemensstraße 12, D-93055 Regensburg, Germany

BLE frequency range:

2.402GHz to 2.48GHz

BLE Maximum Output Power:

+20dBm

Importer Name:

HONDA TÜRKİYE A.Ş.

Postal address:

Sanayi Cad. No:1, Aydınevler 34854 Maltepe/İstanbul

\* Not available on all models

## Wireless Charger

https://www.lg.com/global/support/cedoc/cedoc



Hereby, LG Electronics Inc. declares that the radio equipment type WC500HOCI21 is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address:

Intended use:

Wireless Power Charger for vehicle

Operational frequency band:

75kHz~118.320kHz

Maximum output power:

15W

Importer name:

HONDA TÜRKİYE A.Ş.

Postal address;

Sanayi Cad. No:1, Aydınevler 34854 Maltepe/İstanbul

## Wireless Charger

http://bhevs.co.kr/bbs/board.php?tbl=e bbs42 2

Hereby, BH EVS Co., Ltd. declares that the radio equipment type WC500HOCI21 is in compliance with Directive 2014/53/EU.

The full text of the EU declaration of conformity is available at the following internet address:

http://bhevs.co.kr/bbs/board.php?tbl=e\_bbs42\_2

Intended use:

Wireless Power Charger for vehicle

Postal address: Am Kronberger Hang 2 65824 Schwalbach am Taunus Germany

Manufacturer name: BH EVS Co.,Ltd.

Operational frequency band:

111kHz

Maximum output power:

42dBuA/m @10m

Importer name:

HONDA TÜRKİYE A.Ş.

Postal address;

Sanayi Cad. No:1, Aydınevler 34854 Maltepe/İstanbul

### Remote Tuner

http://www.ptc.panasonic.eu/



Hereby, Panasonic Corporation declares that the radio equipment type Listed above is in compliance with Directive 2014/53/EU. Access to http://www.ptc.panasonic.eu/,click "Declaration of Conformity", enter the below Keyword into the keyword search box, you can download the latest "DECLARATION of CONFORMITY" (DoC). Keyword: Model No.

Keyword: [CQ-TH1BE0AJ, CQ-TH1BE1AJ, CQ-TH1AE0TT]

You can see "Ref No" in unit label.

Intended use:

RADIO UNIT (Car radio tuner)

Postal Address:

4261 Ikonobe-cho, Tsuzuki-ku, Yokohama-shi, Kanagawa-ken, 224-8520, Japan


Importer name:

HONDA TÜRKİYE A.Ş.

Postal address:

Sanayi Cad. No:1, Aydınevler 34854 Maltepe/İstanbul

# Declaration of Conformity Content Outline\*

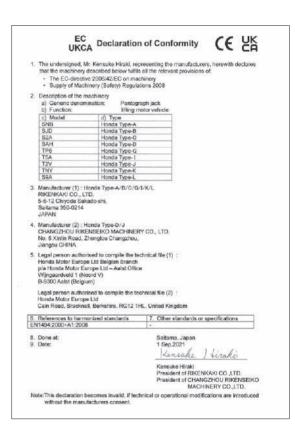

Deutsch (German) EG-Konformitätserklärung 1. Der Unterzeichner, Herr Ryoichi Hiraki, Vertreter der Hersteller, erklärt hiermit, das die unten beschriebenen Maschinen den relevanten Bestimmungen von folgender Richtlinie entsprechen: -EG-Richtlinie 2006/42/EC für Maschinen 2. Beschreibung der Maschine 3) Allgemeine Bezeichnung : Scherenwagenheber b) Funktion : Anhebung des Kraftfahrzeugs c) Modell d) Typ 3. Hersteller (1) 4. Hersteller (2) 5. Juristische Person, die bevollmächtig ist, die technische Datei zu erstellen 6. Bezug auf Standardübereinstimmungen 6. Bezug auf Standardübereinstimmungen 7. Andere Standards oder Spezifikationen 8. Ausgestellt in 9. Datum	Français (French) Déclaration de conformité CE 1. Le soussigné, M. Ryoichi Hiraki, représentant les fabricants, déclare par la présente que les machines décrites ci- dessous satisfont toutes les dispositions pertinentes de: 4.a Directive CE 2006/42/EC concernant les machines 2. Description des machines a) Dénomination générique : Cric pantographe b) Fonction : levage de véhicule à moteur c) Modéle d) Type 3. Fabricant (1) 4. Fabricant (2) 5. Personne morale habilitée à compiler le fichier technique 6. Références aux normes harmonisées 7. Autres normes ou spécifications 8. Fait à 9. Date
Nederland (Dutch) EG-conformiteitsverklaring 1. De ondergetekende, dhr. Ryoichi Hiraki, die de fabrikanten vertegenwoordigt, verklaart hierbij dat de hieronder beschreven machine voldoet aan alle relevante voorzieningen van: De EG-richtijn 2006/42/EG voor machines 2. Beschrijving van de machine a) Generieke benaming: Pantograafkrik b) Functie: Motorvoertuig opheffen c) Model d) Type 3. Fabrikant (1) 4. Fabrikant (2) 5. Rechtspersoon geautoriseerd voor de samenstelling van het technische dossier 6. Referentie geharmoniseerde normen 7. Andere normen of specificaties 8. Plaats 9. Datum	Dansk (Danish) EF-overensstemmelseserklæring 1. Undertegnede, hr. Ryoichi Hiraki, som repræsenterer producenterne, erklærer hermed, at de herunder beskrevne maskiner overholder alle de relevante bestemmelser i:  -Maskindirektivet, EU-direktiv 2006/42/EF 2. Beskrivelse af maskinerne a) Generisk betegnelse : Saksedonkraft b) Funktion : Til at løfte motorkørtøj c) Model d) Type 3. Producent (1) 4. Producent (2) 5. Juridisk person med bemyndigelse til at udarbejde den tekniske fil 6. Henvisninger til harmoniserede standarder 7. Andre standarder eller specifikationer 8. Sted 9. Dato

\* Not available on all models Continued

## Italiano (Italian) Dichiarazione CE di Conformità

- 1. Il sottoscritto, Sig. Ryoichi Hiraki, rappresentante delle fabbriche, dichiara che il veicolo sotto riportato è conforme alle disposizioni pertinenti alla: Direttiva 2006/42/CE relative agli autoveicoli
- 2. Descrizione della vettura
- a) Denominazione generica : Martinetto a pantografo b) Funzione
- sollevamento veicolo a motore
- c) Modello d) Tipo 3. Fabbrica (1)
- 4. Fabbrica (2)
- 5. Legale autorizzato a costituire il fascicolo tecnico
- 6. Riferimento norme standard 7. Altre norme e specifiche
- 8. Eseguito a

### 9. Data

#### Ελληνικά (Greek)

- Δήλωση Συμμόρφωσης ΕΚ Ο υπονεγραμμένος, κ. Rvojchi Hiraki. ως εκπρόσωπος των κατασκευαστών. δηλώνει δια του παρόντος ότι το μηχάνημα που περιγράφεται παρακάτω πληροί όλες τις σχετικές διατάξεις της:
- Κοινοτικής Οδηγίας 2006/42/ΕΚ σχετικά με μηχανήματα
- 2. Περιγραφή του μηχανήματος
- α) Συνήθης ονομασία : Γρύλος αυτοκινήτου β) Λειτουργία : Ανύψωση μηχανοκίνητων οχημάτων ν) Μοντέλο
  - δ) Τύπος
- 3. Κατασκευαστής (1) 4. Κατασκευαστής (2)
- 5. Νουικό πρόσωπο εξουσιοδοτημένο για
- τη σύνταξη του τεχνικού φακέλου 6. Αναφορές στα εναρμονισμένα πρότυπα
- 7. Άλλα πρότυπα ή προδιαγραφές
- 8. Συντάχθηκε στη 9. Ημερομηνία

#### Português (Portuguese)

Declaração de Conformidade CE 1. O abaixo-assinado. Rvoichi Hiraki. representando os fabricantes através desta, declara que a maguinaria descrita abaixo cumpre todas as disposições referentes à:

- Directiva 2006/42/CE, sobre máquinas.
- 2. Descrição da maquinaria
- a) Denominação genérica : Macaco de tesoura
- b) Função : Elevação de veículo motor d) Tipo
- c) Modelo
- 3. Fabricante (1)
- 4. Fabricante (2)
- 5. Pessoa jurídica autorizada a compilar o processo técnico
- 6. Referências às normas harmonizadas Outras normas ou especificações
- 8 Flahorado em
- 9 Date

#### Svenska (Swedish)

EG-försäkran om överensstämmelse Undertecknad representant f
ör tillverkaren, Mr. Ryoichi Hiraki, försäkrar härmed att den nedan beskrivna maskinutrustningen uppfyller alla tillämpliga bestämmelser i: \*EU:s maskindirektiv 2006/42/EG

- 2. Beskrivning av maskinutrustningen
- a) Generisk benämning : Saxdomkraft b) Funktion : Lyft av motorfordon
- c) Modell d) Typ
- 3. Tillverkare (1)
- 4. Tillverkare (2)
- 5. Juridisk person behörig att sammanställa den tekniska
- dokumentationen 6. Hänvisningar till harmoniserade normer
- 7. Övriga normer eller specifikationer
- 8 Utfärdad i 9. Datum

#### Suomi / Suomen kieli (Finnish)

- EY Vaatimustenmukaisuusvakuutus 1. Allekirjoittanut, Mr. Ryoichi Hiraki, valmistaian edustaia, vakuuttaa taten, että alla kuvattu laite täyttää kaikki seuraavissa säännöksissä annetut asianmukaiset velvoitteet
- Koneita koskeva EY-direktiivi 2006/42/EC
- 2. Laitteen kuvaus
- a) Yleisnimike : Saksinosturi
- b) Käyttötarkoitus
- moottoriajoneuvon nostaminen c) Malli d) Tyyppi
- 3. Valmistaja (1)
- 4. Valmistaja (2) Teknisen tiedoston kokoamiseen valtuutettu oikeushenkilö.
- 6. Yhdenmukaistettuien standardien viitetiedot
- 7. Muut standardit tai tiedot 9. Pāivāvs
- 8. Paikka

#### Ceština (Czech)

- FS Prohlášení o shodě
- Níže podepsaný Rvojchi Hiraki jako zástupce výrobce, tímto prohlašuje, že uvedené stroiní zařízení splňuje příslušné požadavky Směrnice evropské komise 2006/42/EC pro stroini zařízení.
- 2. Popis stroiniho zařízení
- a) Obecný název : nůžkový zvedák
- b) Funkce : zvedání motorových vozidel c) Model d) Typ
- 3. Výrobce (1)
- 4. Výrobce (2)
- Právnická osoba oprávněná k předložení technické dokumetace
- 6. Odkazy na harmonizované normy 7. Jiné normy nebo specifikace
- R Misto 9 Datum

#### Polski (Polish)

Deklaracja zgodności WE

- 1. Niżej podpisany, Pan Rycichi Hiraki, reprezentuiacy producentów, niniejszym oświadcza, że opisane poniżej urządzenie jest zgodne z wszystkimi stosownymi postanowieniami
- Dyrektywy maszynowei Wspólnoty Europeiskiei 2006/42/WE
- 2. Opis urzadzenia
- a) Nazwa ogólna : podnośnik nożycowy
- b) Przeznaczenie : podnoszenie pojazdów silnikowych
- c) Model d) Typ
- 3. Producent (1) 4. Producent (2)
- 5. Osoba prawna upoważniona do
- kompilacii dokumentacii technicznei
- 6. Odniesienie do zharmonizowanych norm 7. Inne normy lub specyfikacie

9. Data

- B. Sporzadzono w

#### Slovenčina (Slovak)

- ES vyhlásenie o zhode 1. Podpísaný Ryoichi Hiraki, zástupca
- výrobcov, týmto vyhlasuje, že nižšie opísané strojové zariadenie spĺňa všetky príslušné ustanovenia teito smernice: Smernica 2006/42/ES o stroiových zariadeniach
- 2. Opis strojového zariadenia a) Generické určenie : pantografický zdvihák
- b) Funkcia : zdvíhanie motorových vozidiel
- c) Model d) Typ 3. Výrobca (1)
- 4. Výrobca (2)
- 5. Autorizovaný zástupca schopný predložiť technickú dokumentáciu
- 6. Odkazy na harmonizované normy
- 7. Iné normy alebo požiadavky 8 Miesto 9 Dátum

Magyar (Hungarian) EK megfelelőségi nyilatkozat  1. Alulirott, Mr. Ryolchi Híraki, a gyártók képviseletében ezennel kijelenti, hogy az alább megnevezett gép teljesíti: -a gépekre vonatkozó 2006/42/EK irányelv összes vonatkozó előírását:  2. A gép leírása a) Általános megnevezés : ollós emelő b) Rendeltetés : gépkocsiemelő o; Modell d) Típus 3. Gyártó (1) 4. Gyártó (2) 5. A műszaki dokumentáció összeállítására meghatalmazott jogi személy 6. Harmonizált szabványhívatkozások 7. Egyéb szabványok vagy műszaki jellemzök 8. Kiállítás helve 9. Kiállítás dátuma	Eesti (Estonian) EÜ vastavusdeklaratsioon 1. Tootjate esindaja hr. Ryoichi Hiraki kinnitab käesolevaga, et allipool kirjeldatud seadmed vastavad järgmise õigusakti kõigile asjakohastele sätetele: -EÜ masinadirektiiv 2006/42/EÜ 2. Seadmete kirjeldus a) Üldnimetus: käärtungraud b) Funktsioon: mootorsõiduki töstmine c) Mudel d) Tüüp 3. Tootja (1) 4. Tootja (2) 5. Juriidiline isik, kes on volitatud koostama tehnilist toimikut 6. Viited harmoneeritud standarditele 7. Muud standardid ja spetsifikatsioonid 8. Koht 9. Kuupšev			
Latviešu (Latvian) EK paziņojums par atbilstību 1. Zemāk parakstījies Ryoichi Hiraki, kas pārstāv ražotājus, ar šo paziņo, ka zemāk aprakstītā mašīna atbilst piemērojamām šīs direktīvas prasībām: -EK Mašīnu direktīva 2006/42/EK 2. Mašīnas apraksts a) Vispārīgs apzīmējums: Vītnes domkrats b) Funkcija : Spēkratu celšana c) Modelis 3. Ražotājs (2) 4. Ražotājs (3) 5. Juridiskā persona, kas pilnvarota apkopot tehnisko failu 6. Atsauces uz harmonizētajiem standartiem 7. Citi standarti vai specifikācijas 8. Vieta 9. Laiks	Slovensčina (Slovenian) Izjava o skladnosti ES 1. Podpisani g. Ryoichi Hiraki, ki zastopa proizvajalce, s tem izjavlja, da naprava, ki je opisana spodaj, izpolnjuje vse relevantne določbe: - Direktive o napravah 2006/42/ES 2. Opis naprave a) Generično ime: Pantografski dvigalnik b) Funkcija: dvigovanje motornega vozila c) Model d) Tip 3. Proizvajalec (1) 4. Proizvajalec (2) 5. Pravna oseba, ki je upravičena do sestave tehničnega dokumenta 6. Reference glede harmoniziranih standardov 7. Drugi standardi ali specifikacije 8. Ustvarjeno v/na 9. Datum			

Български (Bulgarian)  ЕС декларация за съответствие  1. Долулодписаният т- н Риски Хираки, представляващ производителите, декларирам с настоящата, че машината описана по-долу напълно изпълнява всички съответни разпоредби на:  - Европейската директивата 2006/42/ЕС за машинстроенето  2. Описание на машината  а) Генерично наименование: Пантографен крик  1) Функция: повдигане на моторни превозни средства  с) Модел  3. Производител (1)  4. Производител (2)  5. Юридическо лице упълномощено да състави техническия файл  6. Препратия към хармонизирани  стандарти  7. Други стандарти или спецификации  8. Изготвено в  9. Дата	Român (Romanian) Declaraţie de conformitate CE 1. Subsemnatul Ryoichi Hiraki, reprezentant al producătorilor, declar prin prezenta că utilajul descris mai jos respectă toate prevederile relevante ale: -Directivei CE 2006/42/CE referitoare la maşini 2. Descrierea utilajului a) Denumire generică : Cric tip pantograf b) Funcţie : ridicarea vehiculelor cu motor c) Model d) Tip 3. Producător (1) 4. Producător (2) 5. Persoana juridică autorizată să redacteze fișierul tehnic 6. Trimiteri la standardele armonizate 7. Alte standarde sau specificaţii 8. Intocmită în 9. Data
Türk (Turkish) AT Uygunluk Beyanı 1. Aşağıda imzası bulunan Sn. Ryolchi Hiraki, imalâtçıları temsilen, tarif edilen makinelerin aşağıda adı geçen yönetmeliğin ilgili hükümlerine uygun olduğunu beyan eder: -AT makine direktifi 2006/42/EC 2. Makinelerin tanınını a) Jenerik adı : Pantograf kriko b) İşlevi : motorlu taşıtları kaldırma c) Model o) Tür 3. İmalâtçı (2) 4. İmalâtçı (1) 4. İmalâtçı (2) 5. Teknik dosyayı düzenlemeye yetkili tüzel kişi 6. Uyumlaştırılmış standartlara atıflar 7. Diğer standartlar ya da şartnameler 8. Düzenlendiği yer 9. Tarih	İslenska (Icelandic) EB-samraemisyfiriysing 1. Undirritadur, herra Ryolchi Hiraki, fullitrùi framleiðanda, lysir yfir að véltbúnaðinum, sem lýst er hér að neðan, uppfyllir óll viðeigandi ákvæði: EB-tilskipunarinnar 2006/42/EC um vélbúnað 2. Lýsing á vélbúnaðinum aj Almennt heiti: Tvíarma tjakkur b) Hilutverk: að lyfta vélknúnum ökutækjum d) Tegund 3. Framleiðandi (1) 4. Framleiðandi (2) 5. Logaðii sem hefur heimild að taka saman tækniskjal 6. Tilvísanir í samhæfða staðla 7. Aðrir staðlar eða tæknilýsingar 8. Staður 9. Dagsetning

#### Norsk (Norwegian) Español (Spanish) Declaración de Conformidad CE FF-samsvarserklæring 1. Undertegnede, Ryoichi Hiraki, som 1. El abajo firmante, Sr. Ryoichi Hiraki, en representación de los fabricantes, por la representerer produsentene, erklærer presente declara que la maquinaria herved at maskinen beskrevet nedenfor descrita a continuación cumple con las oppfyller alle relevante bestemmelser i: disposiciones aplicables de: \*EU-maskindirektiv 2006/42/EU ·La directiva 2006/42/CE relativa a 2. Beskrivelse av maskineriet maguinarias a) Generisk betegnelse : 2. Descripción de la maguinaria Pantografiekk (biljekk) a) Denominación genérica: b) Funksion : løfting av motorkiøretøver Gato pantográfico c) Modell d) Type b) Función : 3. Produsent (1) Elevación de vehículo automotor 4. Produsent (2) c) Modelo d) Tipo 5. Juridisk person med fullmakt til å 3. Fabricante (1) utarbeide den tekniske dokumentasjonen 4. Fabricante (2) 6. Henvisninger til harmoniserte standarder 5. Persona jurídica autorizada para 7. Andre standarder eller spesifikasjoner recopilar el archivo técnico 8. Utarbeidet i 9 Dato Referencias de normas armonizadas 7. Otras normas o especificaciones 8. Flaborada en 9 Fecha Lietuvių kalba (Lithuanian) Hrvatski (Croatian) EB atitikties deklaracija Iziava o sukladnosti EK 1. Toliau pasirašes gamintojų atstovas 1. Ja. dolie potpisani Rvojchi Hiraki. Ryoichi Hiraki deklaruola, kad tollau predstavnik proizvođača, ovime izjavljujem aprašytoji įranga atitinka visas atitinkamas da su strojevi opisani u nastavku sukladni s nuostatas, išdėstytas: bitnim odredbama: EB Direktyvoje 2006/42/EB del mašinų Direktive 2006/42/EZ Europskog 2. Irangos aprašymas parlamenta i vijeća o strojevima a) Bendras pavadinimas : 2. Opis stroia pantografo kėliklis a) Generički naziv : pantografska dizalica b) Funkcija : podizanje motornog vozila b) Funkcija : motorinės transporto priemonės c) Model d) Tip 3. Proizvođač (1) kėlimas c) Modelis d) Tipas 4. Proizvođač (2) 3. Gamintojas (1) 5. Pravna osoba ovlaštena za sastavljanje 4. Gamintojas (2) tehničke dokumentacije 5. Juridinis asmuo, igaliotas sudaryti 6. Upućivanje na usklađene norme 7. Ostale norme ili specifikacije technine byla 8. Miesto 9 Datum 6. Nuoroda į lygiaverčius standartus Kiti standartai arba specifikacijos B. Atlikta 9. Data



# Open Source Licence

## **Meter Open Source Licence**

The software embedded in this product includes open source software. Refer to the following website for details regarding the open source software. https://www.nippon-seiki.co.jp/business\_ic\_meter/

## **TCU Open Source Licence\***

Free/Open Source Software Information

This product contains Free/Open Source Software (FOSS). The licence information and/or the source code of such FOSS can be found at the following URL. https://www.denso.com/global/en/opensource/tcu/honda/

Α		Air Conditioning System		Audio Sy
ABS (Anti-lock Brake System)	498	(Heating System)	223	Audio/In
Accessories and Modifications		Defrosting the Windscreen and		Basic Op
Accessory Power Socket		Windows		Bluetoot
Adaptive Cruise Control (ACC) with		Dust and Pollen Filter	578	Clock Se
Low Speed Follow		Sensors	228	DAB
Indicator (Amber)		Air Pressure	643	Display S
Indicator (White/Green)		Airbags	51	Error Me
Adding	111	After a Collision	54	FLAC/PC
Coolant	5/16	Airbag Care	66	WMV
Engine Oil		Event Data Recorder	1	General
Washer		Front Airbags (SRS)	53	How to I
Additives, Engine Oil		Indicator	65, 104	How to I
Adjustable Speed Limiter		Knee Airbags	56	How to I
Indicator		Sensors	51	iPod
Adjusting	110	Side Airbag	60	Limitatio
Armrest	200	Side Curtain Airbag	63	MP3/WN
		AM/FM Radio	268	On-Boar
Front Seats	•	Android Auto	291	Radio Da
Mirrors		Anti-lock Brake System (ABS)	498	Reactivat
Rear Seats		Indicator	104	Security
Steering Wheel		Apple CarPlay	287	Selecting
Adjusting Headlight Distribution		Armrest	209	Start Up
Adjusting the Sound		Audio Remote Controls	244	Status A
Agile Handling Assist	416	Audio System	238	System U
Air Conditioning System		Adjusting the Sound	261	System U
(Climate Control System)	229	AM/FM Radio	268	Theft Pro
Defrosting the Windscreen and		Android Auto	291	USB Flas
Windows		App Shortcut Function	251	USB Port
Dust and Pollen Filter		Apple CarPlay		Voice Co
Sensors	235	Audio Remote Controls		Wallnan

udio System Function	241
udio/Information Screen	250
sic Operation	241
uetooth® Audio	283
ock Setup	258
<b>4В</b>	273
splay Setup	262
ror Messages	328
AC/PCM/WAVE/MP4/AVI/MKV/ASF/	
VMV	279
eneral Information	329
ow to Update	263
ow to Update Wirelessly	266
ow to Update with a USB Device	267
od bc	276
mitations for Manual Operation	257
P3/WMA/AAC	279
n-Board Owner's Manual	246
ndio Data System (RDS)	271
eactivating	
curity Code	239
electing an Audio Source	256
art Up	240
atus Area	256
stem Updates	263
stem Updates Settings	264
neft Protection	239
SB Flash Drives	329
SB Ports	
pice Control Operation	
allpaper Setup	259

Wi-Fi Connection	286	Parking Brake	Rear-facing Child Restraint System	73
Audio System Theft Protection	239	Brightness Control (Instrument Panel) 197	Selecting a Child Restraint System	76
Audio/Information Screen	250	Bulb Replacement 552	Using Tether	90
Auto High-Beam	191	Back-Up Lights 556	Child Safety	70
Auto Idle Stop	386	Brake Lights 553	Childproof Door Locks	. 170
OFF Button	388	Front Turn Signal Lights 552	Cleaning the Exterior	. 582
Automatic Brake Hold	494	Headlights552	Cleaning the Interior	. 580
Indicator	102, 494	High-Mount Brake Light 557	Climate Control System	. 229
Automatic Folding Door Mirro	-	Luggage Area Light 558	Changing the Mode	. 229
Function	202	Position/Daytime Running Lights 552	Defrosting the Windscreen and	
Average Fuel Economy	141	Rear Licence Plate Light 557	Windows	. 232
Average Speed	143	Rear Turn Signal Light 553	Dust and Pollen Filter	. 578
		Side Turn Signal/Emergency Indicator	Recirculation/Fresh Air Mode	. 23
В		Lights 552	Sensors	. 235
D		Vanity Mirror Light 558	Using Automatic Climate Control	. 229
Battery	569	Bulb Specifications 642	Clock	. 158
Charging System Indicator			CMBS	
If the Battery Is Dead	618	C	(Collision Mitigation Braking System)	. 432
Maintenance (Checking the Bat	•	C	Coat Hooks	. 215
Maintenance (Replacing)		Carbon Monoxide Gas 95	Collision Mitigation Braking System	
Belts (Seat)	40	Carrying Luggage 373, 375	(CMBS)	. 432
Beverage Holders	213	Certification Label 644	Console Compartment	. 212
Blind Spot Information System		Changing Bulbs 552	Continuously Variable Transmission	
Bluetooth® Audio		Charging System Indicator 102, 624	Operating the Shift Lever	. 382
Booster Seats (For Children)	93	Child Restraint System 70	Shifting	. 382
Brake System	491	Booster Seats	Controls	. 157
Anti-lock Brake System (ABS)	498	Child Restraint System for Infants	Coolant (Engine)	. 546
Automatic Brake Hold	494	Child Restraint System for Small Children 75	Adding to the Reserve Tank	. 546
Brake Assist System		Installing a Child Restraint System with a	Overheating	. 62 <i>°</i>
Foot Brake	493	Lap/Shoulder Seat Belt 88	Cross Traffic Monitor	. 507
Indicator	100, 101, 102	Larger Children 92	Cup Holders	. 213

Customized Features 295, 3	302	Driver Attention Monitor	145	Checking	544
		Driver Information Interface	133, 138	If the Low Oil Pressure Warning	
D		Switching the Display	138	Appears	623
D		Driving	371	Low Oil Pressure Warning	623
DAB	273	Braking	491	Recommended Engine Oil	542
Daytime Running Lights	190	Shifting Gear	382	Engine Oil Level Low Warning	629
Dead Battery	618	Starting the Engine	377	Engine Start/Stop Button	183
Declaration of Conformity Content		Dust and Pollen Filter	578	EPS (Electric Power Steering)	
Outline	689			System	105, 626
Defaulting All the Settings	309	_		Exhaust Hazard (Carbon Monoxide	e) 95
Deflation Warning System	418	E		Exterior Care (Cleaning)	582
Calibration	420	eCall Indicator	365	Exterior Mirrors	202
Indicator 106, 6	628	Elapsed Time	143		
Defrosting the Windscreen and		Electric Power Steering (EPS) Syste	em 626	F	
Windows 226, 2	232	Indicator	105, 626	Г	
Devices that Emit Radio Waves 6	645	Emergency	637	Features	237
Dimming		Emergency Call (eCall)	365	Filter	
Headlights 1	186	Automatic Emergency Call	365	Dust and Pollen	578
Rearview Mirror	201	Manual Emergency Call	367	Flat Tyre	590, 603
Dipstick (Engine Oil)	544	Emergency Stop Signal	500	Fluid	
Display Audio	240	Engine	644	Transmission	548
Display Setup	262	Coolant	546	Fluids	
Door Mirrors	202	If the Battery Is Dead	618	Engine Coolant	546
Doors	159	Oil	542	Windscreen Washer	550
Door Open Message	39	Starting	377	FM/AM Radio	268
Keys 1	159	Switch Buzzer	183	Folding Down the Rear Seats	206
Locking/Unlocking the Doors from the		Engine Coolant	546	Foot Brake	
Inside	168	Adding to the Reserve Tank	546	Front Airbags (SRS)	53
Locking/Unlocking the Doors from the		Overheating	621	Front Seats	
Outside	162	Engine Oil	542	Adjusting	203, 204
Drive Mode Switch	393	Adding	545	Front Wide View Camera	

Fuel	513	HFT Buttons	310	Auto Score Mode	343
Average Fuel Economy	141	HFT Menus	314	Customize	360
Fuel Economy and CO <sub>2</sub> Emissions	516	HFT Status Display		Data Log Mode	349
Gauge	128	Limitations for Manual Operation	313	Initial Settings	340
Instant Fuel Economy	141	Making a Call	324	Performance Monitor	341
Low Fuel Indicator	104	Options During a Call	327	Honda Sensing	428
Range	141	Phone Settings Screen	316	Honda TRK	590
Recommendation	513	Phone Setup	317		
Refueling	513	Receiving a Call	326	1	
Fuel Economy and ${\rm CO_2}$ Emissions .	516	Ringtone	321	1	
Fuel Fill Cap	27, 514	Hatch	171	Identification Numbers	644
Fuel Fill Door	27, 514	Light Bulb	558	Engine and Transmission	644
Fuses	630	Unable to Open	639	Vehicle Identification	644
Inspecting and Changing	634	Hazard Warning Button	6, 7	Illumination Control	197
Locations	630, 632	Headlights	186	Knob	
		Aiming		Immobilizer System	174
G		Daytime Running Lights	190	Indicator	107
d		Dimming	186	Indicators	98
Gauges	128	High Beams	187	+R Mode	
Gear Shift Lever Positions		Operating	186	ABS (Anti-lock Brake System)	104
Manual Transmission	382	Position Lights	186	Adaptive Cruise Control (ACC) 11	Э, 111
Glass (care)	583	Heated Door Mirror	198	Adaptive Cruise Control (ACC) Interval .	111
Glove Box	211	Heating System	223	Adjustable Speed Limiter	110
		Defrosting the Windscreen and		Auto High-Beam	
Н		Windows	226	Auto Idle Stop (Green)	108
		Heating	223	Auto Idle Stop OFF	107
Hands-Free Telephone System		HFT (Hands-Free Telephone)	310	Auto Idle Stop Suspend	108
Automatic Import of Mobile Phone		High Beam Indicator	105	Auto Idle Stop System (Amber)	107
and Recent calls		High Beams	187	Automatic Brake Hold	
Automatic Transferring		Honda LogR	339	Automatic Brake Hold System	102
Favourite Contacts	322	About Honda LogR	339	Charging System	102

Collision Mitigation Braking System	Shift Up	Key Number Tag 160
(CMBS) (Amber) 112	SPORT Mode 109	Knee Airbags 56
Collision Mitigation Braking System	Supplemental Restraint System 104	_
(CMBS) (Grey) 112	System Message	1
COMFORT Mode 109	Turn Signal and Hazard Warning 105	L
Electric Power Steering (EPS) System 105	Vehicle Stability Assist (VSA) OFF 105	Lane Keeping Assist System (LKAS) 462
Gear Position	Vehicle Stability Assist (VSA) System 104	Indicator (Amber) 111
High Beam	VSA OFF414	Indicator (White/Green) 111
Immobilizer System	Instant Fuel Economy 141	Legal Information on Apple CarPlay/
INDIVIDUAL Mode 109	Instrument Panel 97	Android Auto 337
Intelligent Speed Limiter	Brightness Control	<b>Lights</b>
Lane Keeping Assist System (LKAS) 111	Intelligent Speed Limiter 406	Bulb Replacement 552
Lights On 105	Indicator 110	Daytime Running Lights 190
Low Fuel	Interior Convenience Items 210	Headlights186
Low Tyre Pressure/Deflation Warning	Interior Lights 210	High Beam Indicator 105
System 106, 628	Interior Rearview Mirror 200, 201	High Beams 187
Malfunction Indicator Lamp 102	iPhone 329	Interior
Parking Brake and Brake System	iPod 276, 329	Light Switches
(Amber) 102		Lights On Indicator
Parking Brake and Brake System	1	Position Lights
(Red)	J	Limited Slip Differential (LSD) 417
Rear Fog Light	Jack (Wheel Nut Wrench) 607	Load Limits
Road Departure Mitigation (Amber) 112	Jump Starting 618	Locking/Unlocking159
Road Departure Mitigation (Grey) 112		Childproof Door Locks
Road Departure Mitigation System	K	From Inside 168
Steering Assist Auto OFF	K	From Outside
Safety Support (Amber) 113	<b>Key</b>	Keys159
Safety Support (Green/Grey) 115	Number Tag 160	Using a Key166
Seat Belt Reminder 103	Rear Door Won't Open	Low Battery Charge 624
Security System Alarm	Remote Transmitter	Low Fuel Indicator 104
Shift Down 103	Types and Functions 159	Low Oil Pressure Warning 623

Low Tyre Pressure/Deflation Warning	g	Interior Rearview	201	Р	
System Indicator	106, 628	Modifications (and Accessories)	585	_	401
Lower Anchorages	83	MP3/WMA/AAC	279	Parking Brake	491
Lubricant Specifications Chart	643	Multi-View Rear Camera	511	Parking Brake and Brake System	100
Luggage (Load Limit)	375			Indicator (Amber)	102
Luggage Area Cover		NI.		Parking Brake and Brake System	100 101
Luggage Hook	215	N		Indicator (Red)	-
		Navigation	143	Parking Sensor System	
B.4		Numbers (Identification)	644	Passing Indicators	
М				Petrol	•
Maintenance	519	0		Fuel Economy and CO <sub>2</sub> Emissions	
Battery	569	0		Gauge	
Cleaning	580	Oil (Engine)	542	Information	
Coolant	546	Adding	545	Instant Fuel Economy	
Oil	544	Checking	544	Low Fuel Indicator	
Precautions	520	Low Oil Pressure Warning	623	Refueling	
Radiator	547	Oil Monitor System		Playing <i>Bluetooth</i> ® Audio	283
Remote Transmitter	575	Recommended Engine Oil	542	Pop-up Hood System	67
Replacing Light Bulbs	552	Viscosity		Pop-up Hood System Care	69
Safety		On-Board Owner's Manual	246	Position Lights	186
Service Reminder System		Open the Owner's Manual	246	Precautions While Driving	380
Transmission Fluid		Open Source Licences		Rain	381
Tyres		Opening		Pregnant Women	48
Under the Bonnet		Hatch	639	Puncture (Tyre)	590, 603
Maintenance Schedule		Opening/Closing			
Malfunction Indicator Lamp		Bonnet	540	R	
Maximum Permissible Weight	-	Power Windows	181	IX.	
Mirrors		Other Interior Convenience Items	219	Radiator	
Adjusting		Outside Temperature Display		Radio (AM/FM)	
Door		Overheating		Radio Data System (RDS)	271
Exterior			021	Range	141
LATOTOT	202			RDS (Radio Data System)	271

Rear Demister	198	Safety Message	0	SOS Button	367
Rear Fog Light	557	Safety Support	153	SOS Cancel Button	367
Rear Fog light	190	Indicator (Amber)	113, 114	Spark Plugs	642
Rear Fog Light Indicator	106	Indicator (Green/Grey)	115	Specifications	642
Rear Seat Reminder	207	Seat Belts	40	Specified Fuel	513
Rear Seats (Folding Down)	206	Adjusting the Shoulder Anchor	age 47	Speed Alarm	144
Rear Wiper/Washer	196	Checking	49	Speed Limiter, Adjustable	400
Rearview Mirror	201	Fastening	45	Speed Limiter, Intelligent	406
Refuel Recommend	370	Installing a Child Restraint Syste	em with a	Speed/Distance Units	154
Refueling	513	Lap/Shoulder Seat Belt	88	Speedometer	128
Fuel Gauge	128	Pregnant Women	48	SRS Airbags (Airbags)	53
Low Fuel Indicator	104	Reminder	42	Start/Stop Button	183
Petrol	513, 642	Warning Indicator	42, 103	Starting the Engine	377
Regulations	645	Seats	203	Does Not Start	614
Remote Transmitter	165	Adjusting	203	Engine Switch Buzzer	183
Replacement		Front Seats	203	If the Battery Is Dead	618
Battery	572, 575	Rear Seat Reminder	207	Steering Wheel	199
Bulbs	552	Rear Seats	206	Adjusting	199
Fuses	630, 632	Security System	174	Stopping	501
Tyres	603	Immobilizer System Indicator	107	Storage Items	211
Wiper Blade Rubber	560	Security System Alarm Indicator	· 107	Super Locking	179
Resetting a Trip Meter	141	Super Locking	179	Supplemental Restraint System (S	<b>GRS)</b> 53
Rev Match System	383	Selecting a Child Restraint Syst	em 76	Switches	
Road Departure Mitigation	474	Service Reminder System	524	(Around the Steering Wheel)	6, 7, 8, 183
On and Off		Setting the Clock	158	System Updates	263
		Shift Lever	382		
•		Shift Up/Down Indicators	384	т	
3		Shifting (Transmission)	382	1	
Safe Driving	35	Shoulder Anchorage	47	Taillight	553, 556
Safety Check	39	Side Airbags	60	Temperature	
Safety Labels	96	Side Curtain Airbag	63	Outside Temperature Display	129

Temperature Sensor	. 129, 228, 235	Tyres	563	General Commands	248
Temporary Repair Kit (TRK)	590	Air Pressure	643	List Commands	249
Tie-down Anchorages	216	Checking and Maintaining	563	Navigation Commands	249
Tilt Sensor	178	Inspection	563	Phone Commands	248
Time (Setting)	158	Puncture (Flat Tyre)	603	Standard Commands	249
Tools	588	Rotation	566	Voice Portal Screen	248
Towing a Trailer	376	Temporary Repair Kit (TRK)	590	Voice Recognition	247
Towing Your Vehicle		Tyre Chains	567	VSA (Vehicle Stability Assist)	413
Emergency	637	Wear Indicators	564		
Traffic Sign Recognition Syster	n 482	Winter	567	W	
Transmission	382			VV	
Fluid	548	U		Wallpaper	259
Manual Transmission	382	U		Warning and Information Message	116
Number	644	Ultrasonic Sensors	177	Warning Indicator On/Blinking	623
Transmission Fluid	548	Unlocking the Doors	162	Warning Labels	96
Trip Meter	141	Unlocking the Front Doors from th	e	Warnings	156
TRK (Temporary Repair Kit)	590	Inside	168	Watts	
Troubleshooting	587	USB Flash Drives	. 279, 329	Wear Indicators (Tyre)	564
Blown Fuse	630, 632	USB Ports	243	Wheel Nut Wrench (Jack Handle)	608
Brake Pedal Vibrates	31			Wi-Fi Connection	286
Buzzer Sounds When Opening	Door 32	V		Window Washers	194
Emergency Towing	637	V		Adding/Refilling Fluid	550
Engine Won't Start	614	Vanity Mirrors	11	Switch	194
Noise When Braking	33	Vehicle Identification Numbers		Windows (Opening and Closing)	181
Overheating	621	Vehicle Stability Assist (VSA)	413	Windscreen	194
Puncture/Flat Tyre	603	OFF Indicator	105	Cleaning	583
Rear Door Won't Open	31	Off Switch	414	Defrosting/Defogging	226, 232
Warning Indicators	98	System Indicator		Washer Fluid	550
Turbo Engine Vehicle	517	Viscosity (Oil)		Wiper Blades	560
Turn signals		Voice Control Operation		Wipers and Washers	194
Indicators (Instrument Panel)	105	Audio Commands	248		

Winter Tyres	567
Tyre Chains	567
Wipers and Washers	194
Checking and Replacing Wiper Blades	560
Wireless Charger	220
WMA	279
Worn Tyres	563