

SERVICE REMINDER DATA

eNy:1



	Check front and rear brakes	
	Inspect tie-rod ends, steering gearbox and boots	
	Inspect suspension components	0.5
	Inspect driveshaft boots	
В	Inspect brake hoses and lines including VSA lines	
	Inspect all fluid levels and condition of fluids	
	Check expiration date for TRK (Temporary Repair Kit) bottle	
	Test drive (noise, stability, dashboard operation)	
	Check lights alignment	
	Inspect vehicle corrosion *1	
	Check parking brake adjustments	
	Inspect tyre condition	
	IPU (including IPU guard and cover)	
2	Replace dust and pollen filter *2	0.2
3	Replace transmission fluid	0.4
7	Replace brake fluid	0.4

Under the following conditions, maintenance for certain items is required independent of the multi information display.

- * 1 if item B appears before one year has passed, inspect vehicle corrosion every year.
- * 2 when you drive in primarily urban areas that have high concentrations of soot in the air, under dusty conditions, or when the air flow from the heating and cooling system/climate control system becomes weak, replace the filter every 20,000 km (12,500 miles) or every year.