

SERVICE REMINDERS

Jazz Hybrid

A	Replace engine oil and oil filter	0.5
B	Check front and rear brakes Inspect tie-rod ends, steering gearbox and boots Inspect suspension components Inspect driveshaft boots Inspect brake hoses and lines including ABS Inspect all fluid levels and condition of fluids Inspect exhaust system Inspect fuel lines and connections Check expiration date for TRK (Temporary Repair Kit) bottle Test drive (noise, stability, dashboard operation) Check parking brake adjustment (Except EPB) Check lights alignment Inspect vehicle corrosion *1 Inspect tyre condition	0.7
2	Replace dust and pollen filter *2 Inspect drive belt	0.1
3	Replace transmission fluid	0.4
4	Replace fuel filter *3	1.4
5	Replace engine coolant	0.6
7	Replace brake fluid	0.4
8	Replace air cleaner element *4	0.1
9	Inspect valve clearance *5	2.2

Under the following conditions, maintenance for certain items is required independent of the multi-information display.

* 1 If item B appears before one year has passed, inspect for vehicle corrosion every year.

* 2 When you drive primarily in urban areas that have high concentrations of soot in the air, under dusty conditions, or when the air flow from the heating and cooling system/climate control system becomes weak, replace the filter every 20,000 km (12,500 miles) or every year.

* 3 It is recommended that you replace the fuel filter every 110,000km (68,500 miles) if the fuel you are using is suspected to be contaminated with dust, etc. because the filter can become clogged sooner.

* 4 If you drive in dusty conditions, replace every 30,000 km (18750 miles).

*5 Sensory method
Adjust the valves during service 120,000km (75,000 miles) if they are noisy.